









Setting the Digital Battery Timer for Automatic Pop-hole Doors

To make any adjustment, firstly press the program button . A 'P' symbol will appear under the hour display. Changes can only be made when the 'P' symbol is showing.

Set the current time (24 hr clock): Hours using  and minutes using .

The default factory setting for the closing time is 10pm and opening time at 8am (highlighted black sectors). To change the settings, activate the segments by pressing the segment button , the segments will flash when the button is released, and set them with the  confirmation button. Press and hold the segment button to move round the dial, release and press confirmation button if you wish to select those sectors, or press sector button again if just advancing round the dial - clockwise only.

The (C) button will clear all segments. To activate all segments for a period, press and hold the segment  button, until all segment are flashing. Set the entire closing time with the  confirmation button. It is also possible to individually actuate and set single segments. If segments already highlighted need to be deleted, actuate these with  and delete with .

Programming mode is exited after 30 seconds of inactivity, or by pressing . Please note that the door will only open at your setting providing it is light i.e. you cannot make the door open at 7am if it is not light. If you set it to close at at 9pm and it gets dark at 8pm then the door will close at 8pm because the timer still 'takes notice' of the light sensor.

To override the light sensor completely and use only the timer, then you need to attach the enclosed small jumper cable to pins 5 and 6 of the VSB unit. You can then make the door open and close at any time.

When a crossed-out battery icon is displayed (X) it means the batteries need changing. To do this, remove the time switch by means of two screws in the housing and change the two AA batteries on the bottom of the time switch. Only use brand-name alkaline batteries, not rechargeables!

FSF Tip: The setting buttons on this timer are sometimes a little imprecise so patience is needed.

Copyright Flyte so Fancy 2011
Tel: 01300 345 229
e-mail: info@flytesofancy.co.uk

