




Pallet Truck Hydraulic Oil Reservoir Tank - Filling Instructions

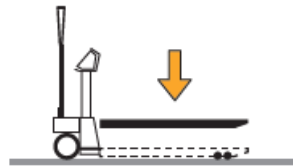


a. Lower the forks all the way.

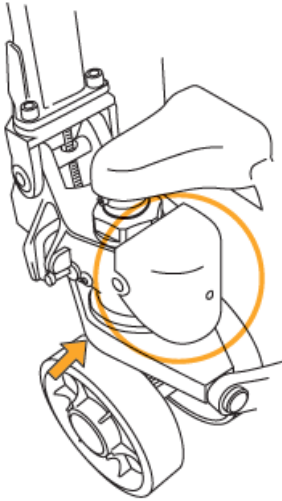


b. Remove the protective casing, the seal and the cap.

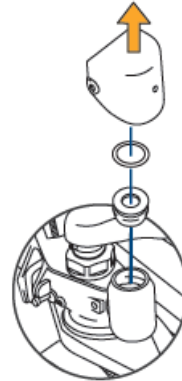

c. If necessary, add up to 20 mm from the top edge of the tank.

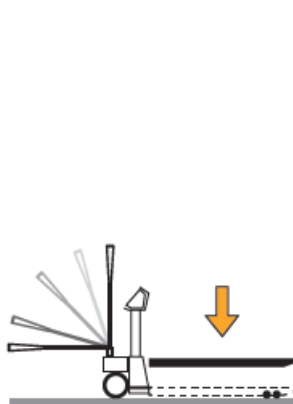

d. Operate the pump several times to release any air from the hydraulic circuit, then lower the forks completely.

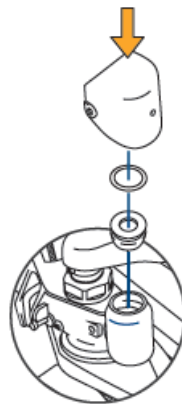

e. Put the cap, the seal and the protective casing back on.



+44 (0)28 9344 0526



info@bcfhandling.com



bcfhandling.com




Visit Our Online
Webshop Now!

www.bcfhandling.com

Pallet Truck Hydraulic Oil Reservoir Tank - Fitting Instructions

- To fill the hydraulic unit :
- If the hydraulic unit has been drained.
- Check that the truck is fully "down".
- Fill the flexible reservoir.
- Operate the pump until the truck is fully "up".
- Lower the truck until fully "down".
- Repeat the last two operations three or four times to ensure that all air is bled out of the hydraulic circuit.
- After setting the truck in the "down" position, top up the reservoir as described in the first paragraph.

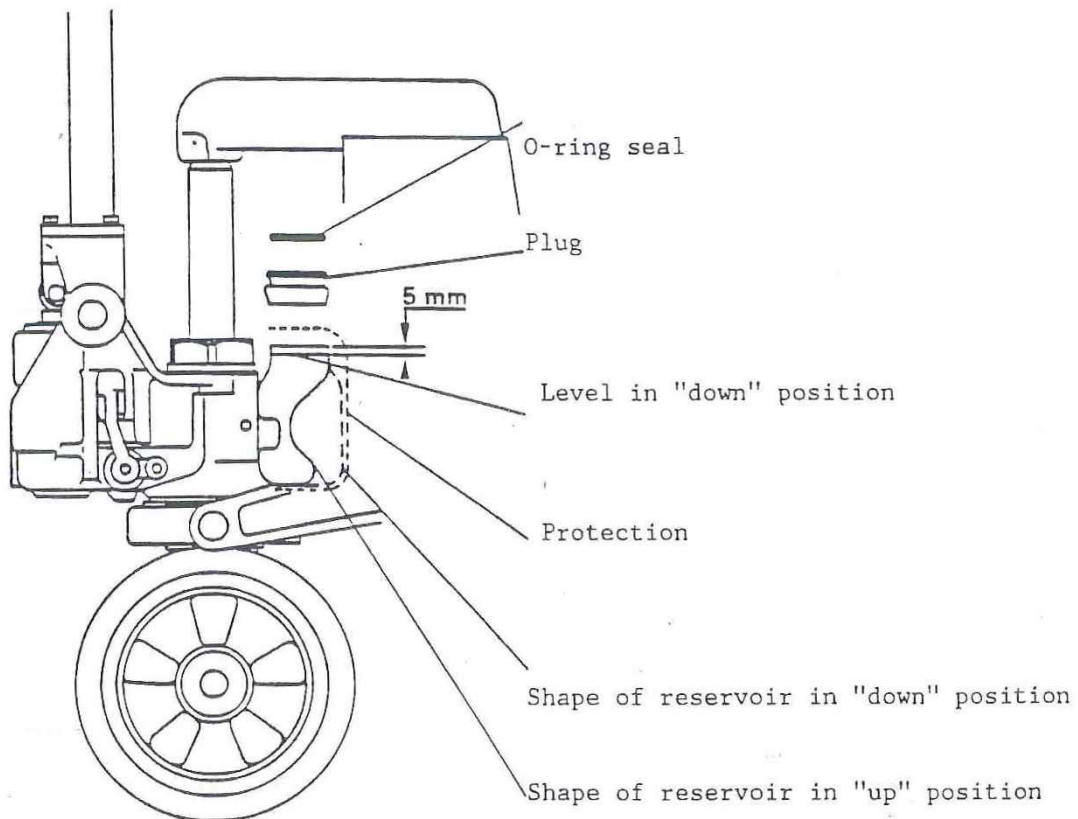

+44 (0)28 9344 0526



info@bcfhandling.com



bcfhandling.com



Visit Our Online
Webshop Now!

www.bcfhandling.com