




Metal Dog Clippers for Thick Coats

Operation Manual

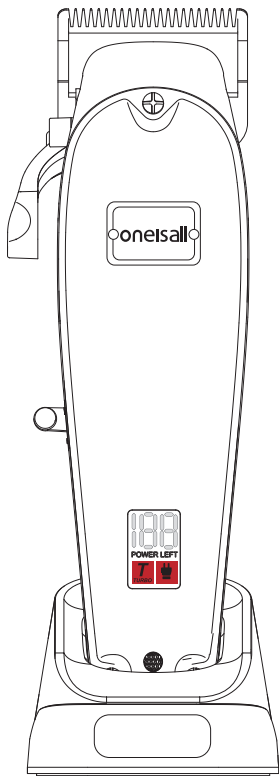

ON-G-HD20

Components

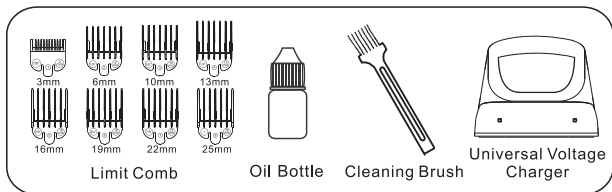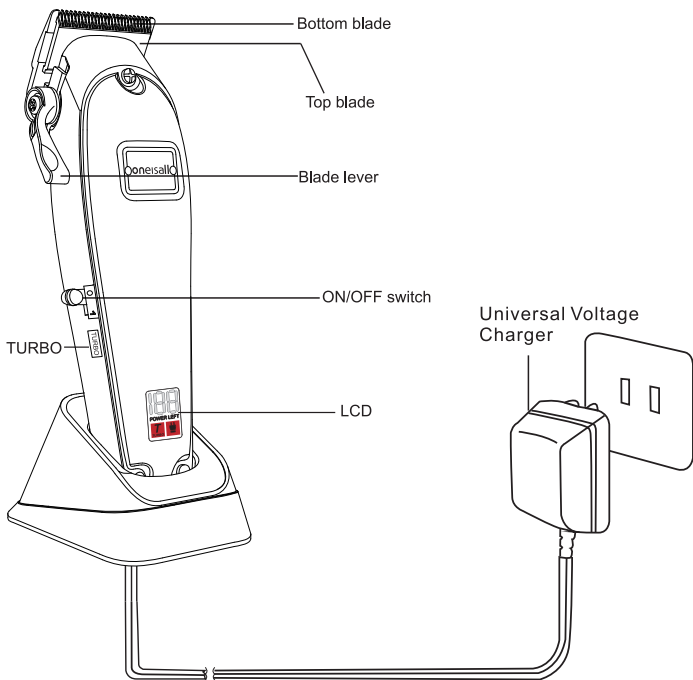

Parameters

Professional Hair Clipper	Motor	Operating voltage: 3V --- --- ---
		High performance motor
	Battery	2500 mAh Li-ion battery
		Charging time: about 3 hours
		Operating time with full charge: about 5 hours

Specific Adapter	Input: 100-240V~50/60Hz
	Output: 5V --- --- --- 1000mA

Use the Rechargeable Mode



Battery percentage display
(1%-100%)



Left Right

TURBO Indication

When you push the "TURBO" button, the light will be on.

Right-Charging Indication

 
Charging light will flash when power's less than 15%. Please charge immediately

※ **Work while charging is available**
(Please turn off the machine before charging)


Fixed-length Function

A: Use of Limit Comb: Cropped hair and hair trim
Feature: (3,6,10,13,16,19,22,25 mm) eight lengths adjustment,control the hair length


- 1.To determine the length of haircut
- 2.To select the appropriate limit comb




3mm(1/8in)

 


6mm(1/4in)

 


10mm(3/8in)

 


13mm(1/2in)

 


16mm(5/8in)

 

19mm(3/4in)

 


22mm(7/8in)

 

25mm(1in)


- 3.To fine-tune the cutter

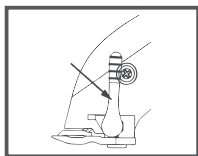


Adjust the cutter by rotating the adjusting ring from forward to downward

- Mount the limit comb:
- 1.Align the limit comb with the blade edge
 - 2.Slightly forward push to mount it.

Disassemble the limit comb:
Just pull hard the limit comb

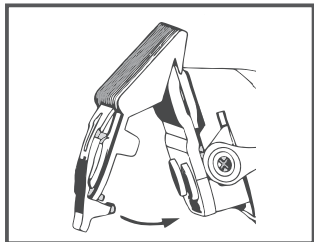

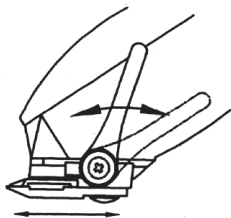


Taper Lever

Some clippers are equipped with an adjustable taper lever that changes the closeness of your cut. When the lever is in the uppermost position, the blades will give the closest cut. Pushing the

lever downward gradually increases the cutting length.

Cutter Maintenance


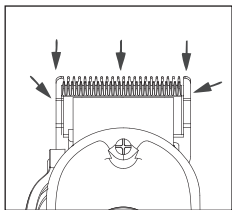


- To maintain your clipper in peak condition, the blades should be oiled every few haircuts.
- To oil it properly, the unit should be held so the blades are in a downward position. With the clipper blade running, dispense 2-3 drops of oil across the top blade.

Precautions For Use



1. Please do not disassemble the product.
2. The hair clipper can not be washed.
Please keep it away from wet conditions.

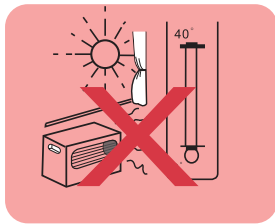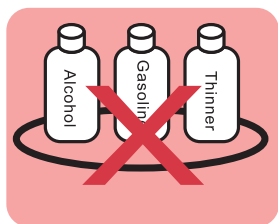

3. The product can only be cleaned by cloth with little water or mild soap solution.
4. Do not charge the product under environment above 40°C or below 0°C.

- ※ The product can produce little heat during using or charging, which is normal.
- ※ Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

Contact Us

WE ARE READY TO HELP

Oneisall offers a standard **2-year** warranty. If you have any issues with your Oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our Oneisall support team is available **7 days** a week and will respond to your inquiry within **24 hours**. Thank you for choosing Oneisall.

Please note that the Oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

✉ support@oneisall.com

📞 +1 877-522-8578 (US) **Mon-Fri 8am-5pm(PST)**

🌐 www.oneisall.com



Guide video



@Oneisall Official

oneisall[®]



Scan the QR-Code to get the product
installation video and join us to get
more prize

