



enjoy your dreams!™



cloud.b®  
my first dream box



## Cloud Box™, the first and unique storyteller for babies and children.


An inclusive and scalable product combining lullabies, white sounds and 36 original stories around 9 cute characters in 2 languages (French and English), creating an immersive experience mixing soothing sounds and smooth projections around 4 universes: Ocean, Forest, Space, City, soothing babies and children and making the bedtime ritual a pleasant and comforting moment.

Cloud Box™ is both a night light and a storyteller which can be used from the birth of the baby until age 8, the first dream box !

Cloud Box™ includes immersive stories combining sounds and light projections !

- 5 hours of original stories per language : Projections change within a story in matching the environments where the characters are evolving (Ocean, Forest, Space or City)
- 8 stories can be recorded by the parents or the child
- No Emission
- Interactive without a Screen
- All the content is in the box
- Very cute design fitting both a child room environment or an “on the go” toy


## CloudBox Unit Instructions

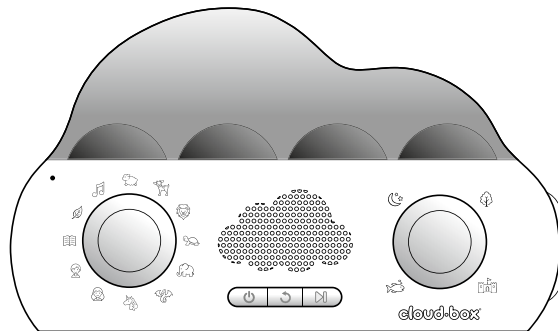


### Getting Started

Your CloudBox Storyteller includes a USB charging cable. Plug the smaller connector (Mini-C) into the back of the CloudBox. Plug the larger, rectangular USB connector into a USB power source. The LED above the Mini-C connector will illuminate in RED to let you know the unit is charging. When the internal battery is fully charged, the LED will turn GREEN. (*Note:* unit will not operate while charging or if plugged in).

On the bottom of the unit is a 3-position slide switch. Slide the switch from “Off” to the desired language. (*Note:* if the unit will not be used for a long period of time, slide the bottom switch to the OFF position.)

Press the  button on the front panel to turn on the CloudBox. The 2 large knobs allow you to select sound modes, characters and environments.

## Left Knob Selections

 : play 8 melodies

 : play 8 Nature Sounds


 : make custom recordings

         : select a character

Characters: Sheep, Fawn, Lion, Turtle, Elephant, Dragon, Unicorn, Little Girl, Little Boy.

## Right Knob Selections

 : Amber projection, Star pattern

 : Green projection, Forest pattern



 : Blue projection, Ocean pattern

 : Red projection, Town or Village pattern

**Note:** although you select the primary environment, the light patterns automatically change to match the action in each story.

## 36 Listening to Stories



Use the left knob to select one of the 9 characters. Use the right knob to select the Environment. Press the center of either knobs to play the story. If you want to pause the story at any point, press either knob again.

Each character has 4 stories. To hear the same character in the next environment, press the  button on the bottom right or turn the Right Knob. To start the current story over again, press the  button in the center bottom. After your story ends, the projection will illuminate for 15 minutes, then shut off.



There are 2 rotating dials on the right side of the CloudBox. Turn the top dial to adjust volume. Turning the dial to the lowest setting turns the sound OFF.

Turn the lower dial to adjust the brightness of the projections. Turning the dial to the lowest setting turns the projection LEDs OFF.

## 8 Playing and Selecting Melodies

Select the  icon to listen to melodies; then select one of the 4 environments. There are 2 melodies in each environment. Press the Right Knob to begin playing the first melody. Press the  button to go to the second melody, or turn the knob to change environments. Each melody will play for 20 mins.

## 8 Playing and Selecting Nature Sounds

Select the  icon to listen to Nature Sounds; then select one of the 4 environments. There are 2 Nature Sounds in each environment. Press the Right Knob to begin playing the first Nature Sound. Press the  button to go to the second sound or turn the knob to change environments. Each sound will play for 20 mins.

## Repeat

Pressing the Repeat button will restart any story at the beginning. Pressing the Repeat button while listening to Melodies or Nature Sounds will reset the timer.

## Repeat Mode

If you would like to hear all 4 stories for any one character, select the character, select any environment, then press the Repeat Button instead of the Play button. The CloudBox will play all 4 character stories in a row, starting with the environment you have selected.



## Recording a Custom Story

Select the Book icon on the left knob. Select one of the 4 environments on the Right Knob. PRESS the Microphone button (Left knob) and the Play button (Right Knob) at the same time. The CloudBox will “beep” to confirm that it has started to record. There is a microphone behind the small opening on the top left of the front panel. Speak clearly with the microphone 12-15 cm from your mouth. When you have finished your story, press either knob to stop recording.

You can record a story for each of the 4 environments. Your stories must be shorter than 8 minutes. If you get near the end of the recording time, the projection LEDs will count down your remaining time.

## Playing a Custom Story

Select the Book icon then select one of the 4 environments where you saved a story. Press Play to start your story and the matching projection. After your story ends, the CloudBox will keep the projection on to serve as a soothing nightlight for 5 minutes.



## Headphone Jack

Your CloudBox Storyteller includes a 3.5 mm headphone jack on the left panel. Headphones not included.



## Recharging the CloudBox

If the sound volume or LED brightness diminish, re-charge the unit. The charge indicator LED turns green when the batteries are fully recharged.



[cloudb.com](https://cloudb.com)

© 2023 BTL Diffusion, SARL  
78490 Méré, France

INTL\_0123

