

Instructions - Planter



Main Planter

Insert



- Carefully open the package containing your flat-packed planter.
- Check all the components against the provided inventory list to ensure everything is included.
- Lay out all the components on a flat surface, ensuring you have enough space to work comfortably. (Note: Wear gloves)
- Follow the step by step diagrams below.
- Once assembled, carefully move the planter to its desired location.
- Ensure the surface is level and stable to prevent any wobbling or tipping.
- Line the bottom of the planter with a waterproof barrier between the soil and planter. Using a plastic liner inside a planter provides practical benefits such as moisture protection, leak prevention, root containment, easy maintenance, and versatility, contributing to the longevity and functionality of the planter. (Liner not included)

Corten steel is a group of alloys designed to develop a stable rust-like appearance, providing natural protection against corrosion without the need for additional maintenance. This unique rust patina not only enhances its aesthetic appeal but also safeguards the planter from weather-related deterioration.

The rust patina forms naturally and regenerates over time. It acts as a protective coating, it develops naturally, so you can leave your piece outside and have zero work involved.

Please Note: It's essential to note that the patina can result in rust run-off, potentially staining surrounding areas, particularly during the initial months when the corrosion rate is highest. To mitigate this risk, consider installing a gravel border around the corten steel planter to capture run-off and prevent it from reaching permanent surfaces like concrete or stone. The gravel border can be easily replaced as needed. Alternatively, placing the planter on a drip tray can also catch water run-off.

In the event of staining on the patio, we recommend utilising a rust remover formula specifically designed to eliminate rust stains from the affected area.

STEP 1



Insert



STEP 2



Main Planter



STEP 3



Side Plate x 2



Side Plate x 2



Bottom Plate x 1



Side Plate x 2



Side Plate x 2



Set Of Bolts x 26