






Pairing a Replacement Remote Control

Your CARBINE system remote controls are already paired to the control module. If you are replacing or adding remotes to your system, they must be programmed (paired) to the control module before they will operate the system. In order to perform remote control pairing, you must know where your “Valet Button” is located as you will use the button and the LED indicator to perform the pairing function.

Remote Pairing Procedure

1. Open the driver’s door.
2. Insert the ignition key into the key cylinder. Turn ON the ignition key.
3. Press and **release** the valet button then press and **hold** the valet button for 1.5 seconds. The LED flashes and the horn/siren chirps (if connected). Release the valet button. The system is now in pairing mode and will stay in Pairing mode for 60 seconds.
5. Press and **hold** the  button on the new remote control.
6. Press and **release** the  button 5 times.
 - A. The LED on a 4 button transmitter will begin to flash slowly.
 - B. The word (PAir) will be displayed in the clock area of a 5 button LCD transmitter.

The remote will remain in this state for 15 seconds.
7. Press and **release** the  button on the new transmitter.

The horn/siren chirps 1 long chirp. The new remote is programmed.
8. Turn the ignition key to the Off position. A long chirp from the horn confirms that the pairing mode is off.

Note: Your CARBINE security system will accept codes from up to (4) transmitters.