 




Credit Card Remote Control for the M9900CDS CD Receiver Stereo

Model: M9900-CCR

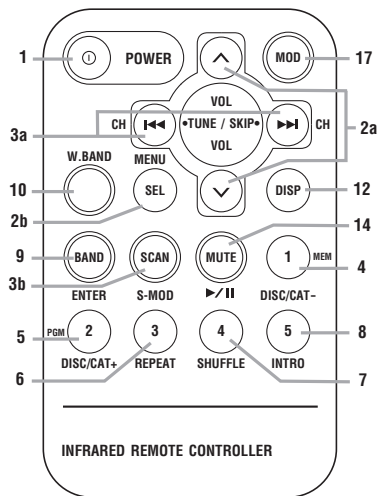

1. Power On/Off: Push to turn the unit on or off.

2a. Volume Controls: Push to increase or decrease the volume level.

2b. Sound Controls: Push to scan between the different sound controls. (Volume, Bass, Treble, Balance and Fader).

3a. Tune/Skip Buttons:

Radio Mode:

Manual Tuning: Push one of the TUNE buttons and hold until "MANUAL" appears in the display then release button. Push the TUNE buttons again left or right until the desired radio station appears in the display.

Seek Tuning: Push one of the TUNE buttons and release. The tuner will scan to the next strong station and stop.

CD and CD Changer Mode: Push either TUNE button to change the CD track on the CD that is playing.

3b. Scan Button:

Radio Mode:

Scan Tuning: Push and release the SCAN button. The tuner will scan up, pausing for 5 seconds at each strong station. Push and release the SCAN button again to cancel the scan function.

Sirius Satellite Radio Mode: Push to access Manual Tuning, Category Tuning and Direct Tuning in Sirius mode. (see M9900CDS Manual for more information, page 8)

4. Multi-Function Button #1:

Radio Mode: Push and hold until a beep is heard to memorize a radio station into memory #1 (CH1). Push and release when recalling preset radio station #1.

CD Mode: Push to enter CD track memory mode (see M9900CDS Manual for more information, pages 6-7).

CD Changer Mode: Push to change to a lower disc in the CD changer.

Sirius Satellite Radio Mode: Push to scroll through the Sirius Radio Categories.

5. Multi-Function Button #2:

Radio Mode: Push and hold until a beep is heard to memorize a radio station into memory #2 (CH2). Push and release when recalling preset radio station #2.

CD Mode: Push to play programmed CD tracks (see M9900CDS Manual for more information, pages 6-7).

CD Changer Mode: Push to change to a higher disc in the CD changer.

Sirius Satellite Radio Mode: Push to scroll through the Sirius Categories.

6. Multi-Function Button #3:

Radio Mode: Push and hold until a beep is heard to memorize a radio station into memory #3 (CH3). Push and release when recalling preset radio station #3.

CD Mode: Push to repeat a CD track. Push again to cancel.

CD Changer Mode:

Push to repeat a CD track. Push again to cancel.
Push and hold to repeat the entire disc. Push again to cancel.

7. Multi-Function Button #4:

Radio Mode: Push and hold until a beep is heard to memorize a radio station into memory #4 (CH4). Push and release when recalling preset radio station #4.

CD Mode: Push to play all the tracks on the CD in random order. Push again to cancel.

CD Changer Mode:

Push to play all the CD tracks in random order. Push again to cancel.
Push and hold to play all the CDs in random order. Push again to cancel.

8. Multi-Function Button #5:

Radio Mode: Push and hold until a beep is heard to memorize a radio station into memory #5 (CH5). Push and release when recalling preset radio station #5.

CD Mode: Push to preview each track on the CD for 10 seconds. Push again to cancel.

CD Changer Mode:

Push to preview each CD track for 10 seconds. Push again to cancel.
Push and hold to preview each track on every CD for 10 seconds. Push again to cancel.

9. Band Button: Push to select F1, F2, F3, AM1, AM2 or W (weather band).

10. Weather Band Radio Button: Push to instantly access the weather band radio. Push mode to return to previous source.

12. Display Button: Push to display the frequency in radio mode or track in CD mode. Push and hold to perform clock setting functions (see Clock Settings for more information)

14. Mute Button (CD Play/Pause) Button:

Radio and Sirius Satellite Radio Mode: Push to mute volume level. Push again to restore volume.

CD and CD Changer Mode: Push to pause disc play, push again to resume play.

17. Mode Button: Push to change the play source: Radio, Sirius Satellite Radio, CD, CD Changer or Auxiliary Sources.

Basic Operation

Turning the Unit On and Off: Push the POWER button.

Selecting Play Source: Push the MOD button to choose a play source: Radio, Sirius Satellite Radio (if equipped), CD, External CD Changer (if equipped) or Auxiliary sources (if equipped).

Sound Settings

Volume: Push \wedge to increase or \vee to decrease the volume.

Bass, Treble, Balance or Fader: Push the SEL button to scan scroll between the different sound controls. Once the desired function is in the display area push \wedge or \vee to achieve the desired level.

Mute: Push the MUTE button to mute the volume level. Press again to return to previous volume level.

Sirius Satellite Radio (if Equipped)

Selecting Sirius: Push the MOD button until "SIRIUS" appears in the display. Please be patient as it may take a minute to receive a satellite signal.

Manual Tuning:

1. Push the SCAN button until "NORMAL" appears in the display.
2. Push \lll or \ggg to select a station from 01-182.

Category Tuning:

1. Push the SCAN button until "CATEGORY" appears in the display.
2. Push 1 or 2 to find the desired category.
3. Push \lll or \ggg to select a station from 01-182.

Direct Tuning:

1. Push the SCAN button until "DIRECT" appears in the display.
2. Push \lll or \ggg and select the first digit (0 or 1).
3. Push the SCAN button again.
4. Push \lll or \ggg and select the second digit (1 or 8).
5. Push the SCAN button again.
6. Push \lll or \ggg and select the third digit (1 or 9). The tuner will start playing the station you have selected when the third digit stops flashing.

(Please note that satellite radio signal may be blocked by trees, building, bridges or tunnels.)

AM/FM/Weather Band Operation

Selecting AM/FM Radio: Push the MOD button until either F1, F2, F3, AM1, AM2 or W appears in the display.

Selecting AM/FM Band: Push the BAND button to select either F1, F2, F3, AM1, AM2 or W (weather band).

Manual Tuning:

1. Push and hold \ggg button until "MANUAL" appears in the display then release button.
2. Push \lll or \ggg until the desired radio station appears in the display.

Scan Tuning:

Push the SCAN button to scan every 5 seconds for a different radio station. To stop scanning push the SCAN button again.

Seek Tuning:

Push \lll or \ggg then release to seek for a different radio station.

Weather Band: Push the WBAND button for instant weather band operation. Note: Push the MOD button to return to playback of other sources.

Programming AM/FM Stations: Select a radio station then select a button 1, 2, 3, 4 or 5 and push and hold until the radio beeps. The radio station is now programmed to that button.

Recalling Programmed Radio Station: Push button 1, 2, 3, 4 or 5 to recall a preprogrammed station

Clock Settings

Display Button: Push and hold the DISP button until the clock is flashing in the display.

Adjusting the Minutes: Push the \lll to adjust the Minutes.

Adjusting the Hours: Push the \ggg to adjust the Hours. Note the AM/PM indicator.

Note: When correct time displays wait a few seconds to allow the time to program.

CD Operation

Playing a CD: Insert a CD (label side up) into the CD slot of the radio. The CD will auto-load and start playing. Note: If a CD does not auto-load, Do Not Force into the slot, as you may already have a CD loaded.

CD Track Selection: Push \lll or \ggg to change track.

Pausing a CD: Push the MUTE button to "Pause" the disc, press again to resume play.

CD Changer Operation (if Equipped)

Load CD's: Insert the CD magazine into the external CD changer.

Selecting the External CD Changer: Push the MOD button until "CDC" appears in the display.

CD Selection: Push button 1 or 2 to scroll through the selection of CD's in the CD changer. If a CD is not in one of the trays, the unit will continue until the next CD is found.

CD Track Selection: Push \lll or \ggg to change track.

Pausing a CD: Push the MUTE button to "Pause" the disc, press again to resume play.