 




Headphone Operations Manual

Model: HP-400

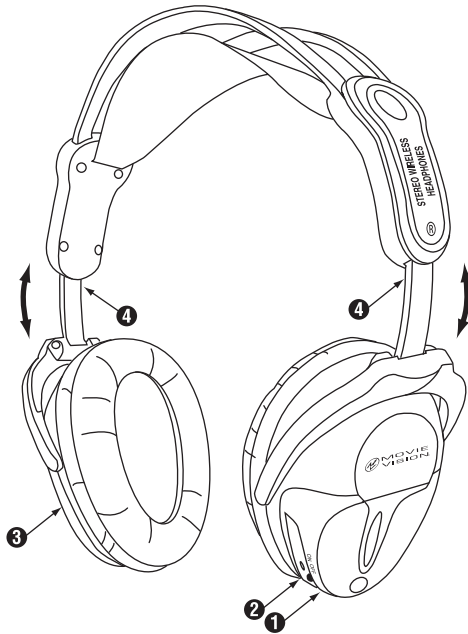 


1. **Volume Dial:** Rotate to increase and decrease the volume level.
2. **Power Button:** Slide this button to turn the headphone ON/OFF.
3. **Battery Compartment:** Slide cover open to access the batteries.
4. **Adjuster Bar:** Slide this bar up/down to adjust the headphone fit.

Installing the Batteries:

To install the “AAA” batteries supplied, follow this procedure:

- A. Hold the headphones in one hand and place your thumb onto the gripping arrow on the battery holder cover.
- B. Press down on the gripping arrow while sliding the door away from the headphones to expose the battery compartment.
- C. While observing the battery polarity, place the batteries into their compartment.

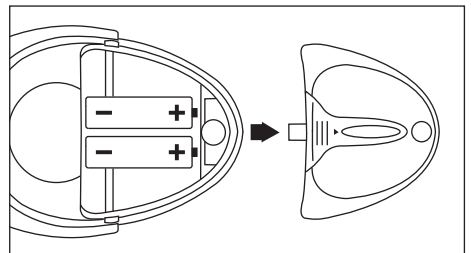

Headphone Care and Adjustment

The correct operation, care and maintenance of the headphones is critical to their ability to provide the user with a lifetime of operation. Misuse, abuse and neglect of the headphones will result in poor performance and premature failure.

WARNING!


- **Do not** throw the headphones.
- **Do not** get the headphones wet or submerge them in any liquid.
- **Do not** lay heavy objects on the headphones.
- Refrain from turning the volume of the headphones to the maximum position, this may result in hearing loss.

Storing the Headphones


When the headphones are not in use, fold them as illustrated below, and store them in the provided bag.

Adjust the Headphones to Fit Your Head

- A. Spread the ear pads apart and place the headphones on your head. Observe the "L" and "R" indicators.
- B. Slide the adjuster bar up or down until a comfortable fit is achieved.

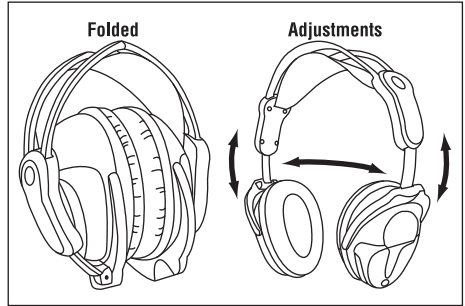

Headphone Operations

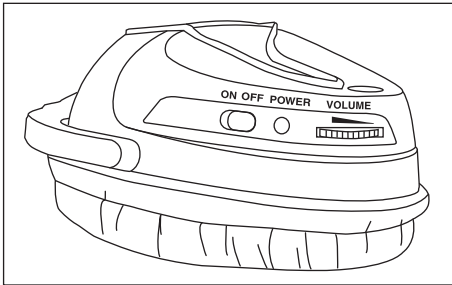

Turn On the Headphones:

To turn on the headphones slide the "ON / OFF" button to the "ON" position. The "POWER" LED will light up. The headphone(s) will automatically receive the signal from the MovieVision player.

Adjusting the Volume:

Turn the "VOLUME" dial to the left to increase volume level, and turn the dial to the right to decrease the volume level.

Turn Off the Headphones When Not in Use:

- A. Slide the "ON/OFF" button to the "OFF" position. The "POWER" LED will turn off.
- B. The batteries will last for approximately 10 hours of continuous use. Forgetting to turn off the headphones when they are not in use will shorten the battery life.

Auto Mute: When the infrared (IR) signal is interrupted, the sound from the headphones will mute until the IR signal returns.

Auto Shutoff: The headphone power will be shut off if the IR signal is lost or has been turned off for more than 3 minutes. Set the "POWER" switch to "OFF" and back to "ON" again to turn on the headphones again.