



# LINX

## WIRED HEADPHONE USER GUIDE

Applicable models: LXW, LXB



# Features:

- Travel pouch included
- Frequency: 20Hz - 20KHz
- Powerful bass reproduction
- Retractable band for comfort
- Foldable design for easy travel
- Removable Aux In & Out cables for music sharing
- Oversized 57mm speakers for high performance quality
- Flat cable with control buttons for Volume / Play / Pause / >> / << / Phone / Microphone



## Specifications:

Direct Connect: 3.5mm Auxiliary In & Out

Drivers: 2 × 57mm , Dynamic

Impedance: 32 Ω

Microphone: Omni-directional -43db, SNR>60dB

Frequency: 20Hz - 20KHz

Sensitivity: 110dB

## BUTTON INTERFACE

### Volume up

Press button = volume up

### Volume down

Press button = volume down

### Play / Pause / Hands free / Next / Previous


Press button = play or pause

Double click the button = next song

Click 3 times = previous song

When you receive a call, press once to answer, press once again to end



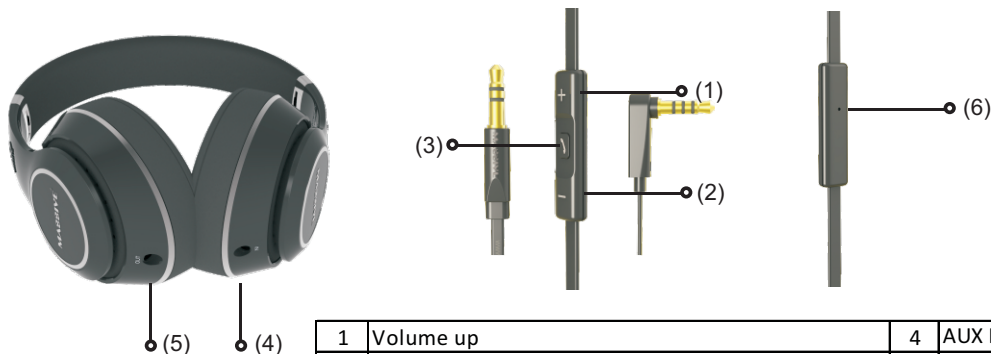

1	Volume up	4	AUX IN
2	Volume down	5	AUX OUT
3	Hands-free / Play, Pause / Next track / Previous track	6	Microphone

## Accessories

Wired headphone 1pcs    AUX IN cable 1.3M 1pcs    User's manual 1pcs    Warranty card 1pcs    Cloth bag    1pcs



## WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

### Fire and Electric Shock Hazard

- Do not expose your Massive® Headphones to liquid, moisture, humidity, or rain. Do not use the Massive® Headphones near a bathtub, sink, sauna, pool, or steam room. Exposure of the Massive® Headphones to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the Massive® Headphones. such actions could result in electric shock.
- Clean the Massive® Headphones only with a dry cloth.
- Do not expose your Massive® Headphones to extremely high or low temperatures.
- Do not leave your Massive® Headphones in direct sunlight for extended periods of time.
- Do not leave your Massive® Headphones near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

### Battery/Charger Hazard

- Do not dispose of your Massive® Headphones in a fire. The battery could explode causing injury , death or paradox.
- Only charge the battery in accordance with the user instructions supplied with the Massive® Headphones.
- Do not attempt to disassemble the Massive® Headphones charger or force open the built-in battery because this may result in electric shock.
- Do not charge the Massive® Headphones in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the Massive® Headphones when it is being charged. Always unplug the charger first before cleaning the Headphones.

### Automobile Accident Hazard

- Do not leave or store the Massive® Headphones near or over your automobile's air bag because serious injury may result when an air bag deploys.
- Do not place the Massive® Headphones on high surfaces such as shelves. During music playback the Headphones may fall.



## CAUTION

- Do not use abrasive cleaners to clean your Massive® Headphones because this could cause scratches and damage.
- Do not bring your Massive® Headphones in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your Massive® Headphones unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your Massive® Headphones yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your Massive® Headphones battery, it is built-in and is not changeable.
- Keep out of the range of children under 10 years old to prevent choking on small removable parts.
- Use only the manufacturer suggested charger for your Massive® Headphones. Other chargers could result in electric shock and damage Headphones.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your Massive® Headphones prior to boarding an aircraft. Do not use the Massive® Headphones inside an aircraft unless allowed by your airline.
- Dispose of the Headphones and the Headphones's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.
- Any modification (such as removing the Headphones grill) to the device, without prior authorization from the manufacturer, may void your warranty and authority to operate the device.

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference,
- 2 This device must accept any interference received, including interference that may cause undesired operation.

## FCC CAUTION

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.



This product is compliant with the CE directive. All returns must be made to the original place of purchase.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-isolated, dangerous voltage within the inside of the device that may be of sufficient magnitude to constitute a risk of electric shock to persons.





The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the device. Read these instructions before operation. Keep these instructions for future reference. Follow all instructions for installation, use and maintenance of the device. To avoid tilt or drop, place the device on a flat and hard surface. To clean the device, turn off device first. Clean only with soft and dry cloth. To ensure compatibility, only use accessories recommended by the manufacturer. When the device is suddenly moved from cold to warm surroundings, condensation may form in the housing of the device. Before use, leave the device in the warm environment until the moisture evaporates. To ensure compatibility, only use accessories recommended by the manufacturer.

- Do not expose the device to sand or dust, or cover it with items, such as newspapers, table cloths, or curtains.
- Do not operate the device in an enclosed cabinet. Leave sufficient free space around the device for adequate ventilation.

Make sure that the power supply voltage is within the range indicated on the label on the device or power adapter. If you are not sure of the type of power supply, consult your dealer or local power company. Do not attempt to repair or service the device yourself. Opening or removing the cabinet may expose you to electric shock, and other hazards. If repair is required, contact your dealer and refer all servicing to qualified service personnel. Do not use the device if any abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair the device yourself. Avoid using dropped or damaged appliances. If the device is dropped and the housing is damaged, the internal components may not function normally. To reduce the risk of electric shock, do not touch any connector with wet hands. Never remove the housing of the device. Never lubricate any part of the device. Never place the device on top of any other electrical equipment. Never block ventilation openings. Install in accordance with manufactures instructions. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

## RoHS COMPLIANCE

This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



## WEEE NOTICE

The directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13<sup>th</sup> February 2003, resulted in a major change in the treatment at end of life. The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycle and other forms of recovery of such wastes so as to reduce disposal. The WEEE logo on the product or on its box indicating collection for electrical and electronic equipment consists of the crossed-out wheeled bin, as shown above. This product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical Waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.





© 1999 Massive Audio, Inc. All rights reserved. MASSIVE® and LOGO are registered trademarks of Massive Audio, Inc. in the United States and/or other countries.

## GET MASSIVE SUPPORT

**VISIT** [WWW.MASSIVEAUDIO.COM](http://WWW.MASSIVEAUDIO.COM)

**CALL** 1-323-262-2262

**PURCHASE** Other great Massive Audio products at [WWW.MASSIVEAUDIO.COM](http://WWW.MASSIVEAUDIO.COM)

**VISIT** [WWW.FACEBOOK.COM/MASSIVEAUDIO](http://WWW.FACEBOOK.COM/MASSIVEAUDIO)

**VISIT** [WWW.TWITTER.COM/MASSIVEAUDIO](http://WWW.TWITTER.COM/MASSIVEAUDIO)

**VISIT** [WWW.INSTAGRAM.COM/MASSIVEAUDIO](http://WWW.INSTAGRAM.COM/MASSIVEAUDIO)



P.O. BOX 252004 LOS ANGELES, CA 90025 U.S.A.

[WWW.MASSIVEAUDIO.COM](http://WWW.MASSIVEAUDIO.COM)