 
 


CONTENTS

 
Knotty Bubbles Sconce
 Large Bubble

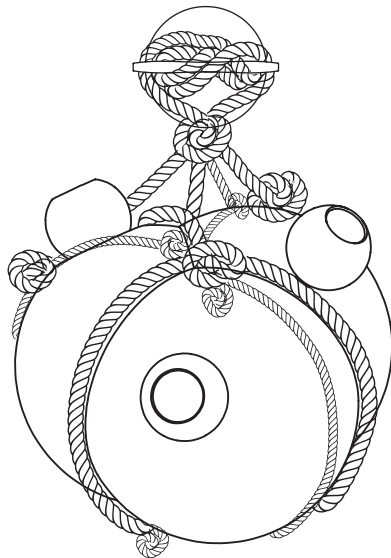

Canopy with Cleat

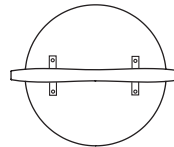

Crossbar



Transformer (For halogen fixtures only)



8-32 Crossbar Screws (2)



Bulbs



Incandescent 120V (bulbs included)
 Incandescent 240V (bulbs not included)



Halogen 120V (bulbs included)
 Halogen 240V (bulbs not included)

SAFETY INFORMATION

Only one light bulb per socket.

Only suitable for direct mounting on non-combustible surfaces.

Under no circumstances can Knotty Bubbles be mounted on normally flammable surfaces.

Suitable for dry, indoor use only. Maximum ambient temperatures: 25° C

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by Roll & Hill's service agent or a similarly qualified person in order to avoid hazard.


KNOTTY BUBBLES SCONCE | INSTALLATION

*Note: Please contact a licensed electrician.
Note: Do not use bulbs that exceed 25 watts.*

1. Remove two loosened brass screws from the cleat on the canopy assembly to release crossbar.
2. Secure crossbar onto the junction box using provided 8-32 screws (A). Make sure electrical wires are pulled out from the center hole.

For Halogen fixtures, first make connections to the transformer, and then from the transformer to the junction box wires.

3. Make electrical connections from junction box wires to sconce (B) (trimming excess wire) while carefully holding fixture.

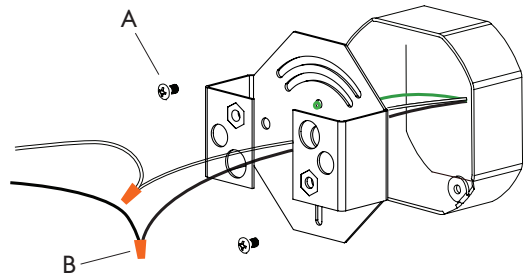

4. Tuck wires (and transformer when applicable) into canopy and tighten back on to crossbar with two brass screws.
5. Once secured to wall, hang sconce off of cleat.
6. Install bulbs by gently pushing into sockets.
7. Carefully remove any remaining packing material from the fixture.

