

Palico[®]
Handy Coffee Grinder





Set-up of the coffee machine

- 1 Start/stop button
- 2 Grinding setting (9 levels)
- 3 Casing marking ●
- 4 Closure markings ○▶ ●
- 5 Screw-top opening collection container
- 6 Hopper
- 7 Collection container
- 8 Coffee bean spoon



Operating Manual

- Children must not play with the appliance.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge if they are supervised or have been instructed on how to use the appliance in a safe way and understand the hazards involved.
- This appliance must not be used by children. Keep the appliance and its cord out of reach of children.
- Only operate the handheld coffee grinder together with the appropriate built-in mains adapter.
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- This appliance is designed for use in households and similar environments, such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By guests at hotels, motels or other residential facilities;
 - Bed-and-breakfast establishments.The appliance is not intended for purely commercial use.
- Always disconnect the appliance from the mains supply if it is left unattended and before assembling, disassembling or cleaning.
- Switch off the appliance and disconnect from the mains supply before changing accessories or approaching parts that move in use.
- After using the appliance, clean all surfaces/parts which have come into contact with food.
Follow the instructions in the "Cleaning and care" section.

Before use

Congratulations on the purchase of your new handheld coffee grinder.

The handheld coffee grinder may be used only for its intended purpose and in accordance with this instruction manual. For this reason, please read the instruction manual carefully before use because it provides instructions for using, cleaning and caring for the appliance. We accept no liability for any damage caused if the instructions in this manual are not followed. Keep this instruction manual in a safe place and pass it on to any subsequent user together with the appliance. Observe the safety precautions when using the appliance.

The decorations (e.g. the cup) are not included.



Palico



en

Technical Data Handheld coffee grinder

Rated voltage: 12 V d.c.
Power consumption: 24 VA
Protection class: III

Technical Data built-in mains adapter

Mains voltage: 100-240 V
Current consumption: max. 0.8 A
Protection class: II

Additional safety information

- This appliance may only be used to grind coffee/espresso beans.
 - Maximum bean hopper filling quantity: 30 g
 - Only connect the built-in mains adapter to earthed wall sockets that have been installed pursuant to regulations. The supply cable and plug must be dry.
 - Do not pull or clamp the connection cable over sharp edges. Do not leave it dangling. Protect it from heat and oil.
 - Only use an extension cable that is in perfect condition.
 - Never pull the built-in mains adapter out of the socket by the cable or with wet hands.
 - Do not carry the appliance by the cable.
 - Do not place the appliance on hot surfaces such as hot plates or near open flames because this could melt the casing.
 - When the appliance is not being used, unplug the built-in mains adapter.
 - Stop using the appliance and/or unplug the built-in mains adapter immediately if:
 - the appliance, cable or built-in mains adapter is damaged.
 - You suspect that there is a defect after the appliance has fallen or following a similar incident.
- In such cases, arrange for the appliance to be repaired.
- The appliance must be supervised when in use.
 - We accept no liability for any damages caused as a result of misuse, incorrect operation or improper repairs. Claims under warranty are likewise excluded in such cases.

Use

The **Palico**® handheld coffee grinder is a space-saving and energy-efficient kitchen appliance.

With the appliance, you can grind beans for 1 to 4 cups of coffee/espresso. Thanks to the extra-slow grinding process, the coffee/espresso beans are particularly gently ground (aroma protection).

Grinding degree

By turning the bean hopper, you can adjust the desired grinding degree from fine ● (level 1) to coarse ● (level 9).

When selecting the grinding degree, we suggest the following settings:

Grinding degree setting	Use	Max. bean volume
1-2 (fine)	Espresso, strainer machine, Aeropress	20 g
3-7 (medium)	Filter coffee machines, Aeropress	30 g
8-9 (coarse)	Manual brewing	30 g

Set the grinding degree before adding the coffee beans, as otherwise beans stuck in the grinding mechanism may prevent the motor from working.

Important: If you have already added the beans, only change the grinding degree when the grinding mechanism is operating.

During grinding, the setting can be changed at any time when the motor is running.

Before using for the first time

- Clean and dry the hopper and collection container carefully before using for the first time. Follow the instructions in the "Cleaning and care" section.
- Insert the collection container into the appliance from below. Gently turn in a clockwise direction until the collection container locks into place. Make sure that the screw-top opening is closed.
- Select the desired grinding degree by turning the grinding setting.
- Open the hopper by turning the casing to the ● position and remove the casing from above.
- Pour the beans into the hopper and close by replacing the casing. Turn the casing to the ● position.

Please note: The coffee grinder is only suitable for grinding coffee and espresso beans. The use of other grinding material, such as poppy seeds, nuts, sugar etc. is improper use and will void the warranty.

- Connect the power cable to the appliance and plug in. Press the Start / Stop button to start the grinding process.
- Once the desired quantity of beans has been ground, switch off the appliance by pressing the Start / Stop button.
Note: You can stop interrupt the grinding process at any time by pressing the Start / Stop button.
- You can remove the coffee grounds through the screw-top opening of the collection container.
- Note: In order to avoid aroma loss, only grind coffee for immediate use.



Palico



en

Overload protection

The appliance is equipped with overload protection.

If the appliance switches off during operation under extreme loads, proceed as follows:

- Press the Start / Stop button and disconnect the power. Allow the device to cool for approx. 30 minutes.
- Then reconnect the power and press the Start / Stop button in order to continue to process.

Cleaning and care

Unplug the mains plug and remove the cable from the appliance.

The appliance should never be placed in water, only wiped down with a damp cloth.

Never use abrasive cleaning agents.

Remove the collection container and clean with a mild detergent.

Before replacing the container, leave it to dry fully.

Remove the remaining beans from the hopper and clean it with a small brush.

For easy cleaning, you can wash the collection container and coffee bean spoon in the dishwasher.



The appliance complies with European directives 2006/95/EC, 2004/108/EC and 2009/125/EC.



At the end of its life, this product must not be disposed of in normal household waste but must instead be delivered to a collection point for recycling electrical and electronic appliances.

The materials are recyclable in accordance with their labelling. Reuse, recycling and other ways of reutilising old appliances make an important contribution to protecting our environment.

Please ask your local authorities for information about the appropriate disposal point.

Subject to change