

Functions of combination keys:

Fn+ 1 - F1	Fn+ 4 - F4	Fn+ 7 - F7	Fn+0-F10	Fn+ Shfit +Esc - ~
Fn+ 2 - F2	Fn+ 5 - F5	Fn+8-F8	Fn+ "" - F11	Fn+ Esc - `
Fn+ 3 - F3	Fn+ 6 - F6	Fn+ 9 - F9	Fn+ "=+" - F1	2

Fn+ A - Media stop

Fn+ S - Media Prev Track

Fn+ D - Media Next Track

Fn+ F - Volume down

Fn+ G - Volume up

Fn+ H - Volume mute

Fn+ Back Space - Light Effects Switch

Fn+ Spacebar - Backlit On/Off

Fn+ [{ - Backlit Brightness Down

Fn+]}- Backlit Brightness Up

Fn+;:- Backlit Speed Down

Fn+ ' " - Backlit Speed Down

Fn+ Spacebar (5Sec) - Reset the Keyboard

Fn+ U - PrtScr

Fn+ I - Scroll lock

Fn+ O - Pause/Break

Fn+ J - Insert

Fn+ K - Home

Fn+ L - Page up

Fn+ M - Delete

Fn+ ,< - End

Fn+ .> - Page Down

Fn+ Win - Win Lock/Unlock

Fn+ Menu - Switch the 4Key to Direction Key

Function



