



BLDC BLADELESS FAN WITH REMOTE

N6200DCBLFR



NO Warranty Registration is required

* Retain receipt for warranty claims



SPECIFICATIONS

MODEL	RATED VOLTAGE	RATED POWER	DIMENSIONS L x W x H (mm)	NET WEIGHT (kg)
N6200DCBLFR	100-240V~ 50/60HZ	35W	250 X 250 X 970	3.3
AC ADAPTOR MODEL		INPUT		OUTPUT
AS3603A-2401500BS		100-240V~ 50/60HZ 1.0A MAX		24.0V 1.5A 36.0W

SAFETY INFORMATIONS

Before using the appliance, it is essential to thoroughly read and understand the instruction manual provided. Additionally, please retain the manual for future reference.

This appliance is not intended for use by individuals (including children) with diminished physical, sensory, or mental abilities, or those lacking experience and knowledge, unless they have received supervision or instruction regarding its operation from a person responsible for their safety.


It is important to ensure children are supervised to prevent them from engaging in play with the appliance.

This product is designed for indoor household use only. Do not utilise this product for purposes other than those for which it is intended.


- Before using the machine, verify that the power outlet has been inspected and matches the voltage indicated on the machine's apaptor rating label.
- Do not operate a malfunctioning appliance or one that has been dropped or damaged in any manner.
- Do not operate the appliance with a damaged cord or plug.
- If the power cord is damaged, it must be replaced by the authorized service center to avoid hazards.
- Avoid using an extension cord or overloading the electrical circuit. Always
 disconnect the plug from the outlet when assembling, cleaning, or relocating
 the fan.
- Do not use inflammable aerosols or place the fan near flammable chemicals, as it poses a risk of fire or explosion.
- Avoid pouring water over the fan or immersing it in water, as it poses a risk of short-circuit or electric shock.

- Do not attempt to disassemble, repair, or modify fan components to avoid the risk of fire, electric shock, or injury.
- For repairs, please contact the place of purchase or the authorized service center.
- Refer to the instruction manual for guidance when assembling or cleaning the fan.

PRODUCT DESCRIPTIONS

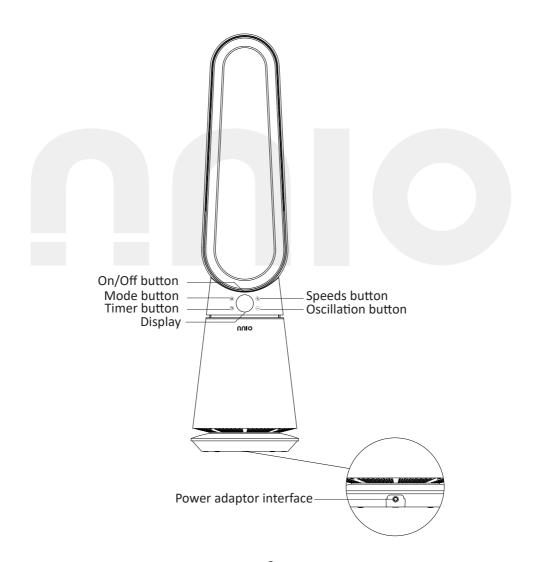

OPERATING GUIDE

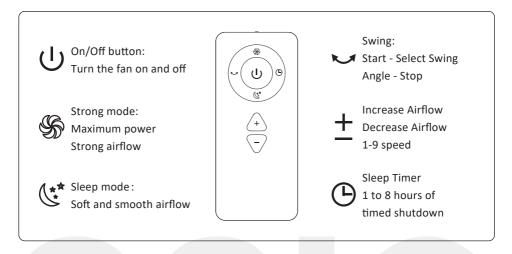

Standby Mode

Insert the jack plug from the main cable into the unit, and then plug the main adaptor into a socket. This will supply power to the unit, indicated by a short beep.

On/Off Button

While in standby mode, press the On/Off button to activate the fan; by default, it operates at speed 3. To turn off the fan, press the button again to shut it down.

Speed Selection Button

To adjust the fan speed, repeatedly press the Speed Button until the desired speed is displayed. There are a total of nine speed settings available.

Oscillation Button

Press the oscillation button to activate left/right oscillation. The oscillation angle options include 30 degrees, 60 degrees, 90 degrees and 120 degrees.

Timer Button

Press the timer button to set the timer for up to 8 hours. A small dot will flash at the bottom right of the display to indicate the timer is active.

Mode Button

Press the mode button to choose from different modes: Strong, Sleep, and Natural.

In Strong Mode, indicated by 'P,' the fan operates at its highest speed.

In Sleep Mode, indicated by 'S', the fan operates at its lowest speed with minimal noise.

In Natural Mode, indicated by 'N', the fan cycles through air speeds 3-7 in sequence.

Note: Direct the remote control towards the display panel to optimise the signal reception.



The remote control button battery is dangerous and should be kept out of children's reach. Swallowing or inserting the battery can lead to severe or fatal injuries.

CLEANING AND MAINTENANCE

- Before cleaning the appliance, make sure to disconnect the power plug from the socket and allow the appliance body to cool down.
- Do not use harsh chemical cleaning agents, such as bleach, for cleaning.
- Avoid using hard brushes to prevent scratches and corrosion to the appearance of the appliance.
- For the removal of tough stains, it is recommended to use a neutral detergent designed for dishware to clean.
- When cleaning the appliances, use a soft, damp cloth dipped in neutral detergent, and finish by wiping with a dry cloth.
- To ensure sufficient air circulation to the motor, prevent dust accumulation on the rear vents of the motor housing. Dust can be removed using a vacuum cleaner; never disassemble the motor for cleaning.
- For optimal performance during the first two years of usage, we recommend switching off the fan and allowing the motor to rest for a minimum of one hour after every ten hours of operation. Subsequently, after two years of use, we advise switching off the fan and allowing the motor to rest for at least one hour after every three hours of operation.

WARRANTY SERVICE TERMS AND CONDITIONS

E-Risen Distribution Hub Pte Ltd (E-Risen PL)/ E-Risen Distribution Hub Sdn Bhd (E-Risen SB) provides a warranty for NNIO products to the original retail purchaser/consumer. This warranty ensures that the products are free from defects in material, design, or workmanship when used in regular household, non-commercial settings, following the guidelines provided in the instruction manual.

The warranty period for Electrical Parts extends to <u>24 months</u>, while the Fan Motor is covered for <u>10 years</u>. Electrical parts encompass capacitors, oscillation motor, and PCB board, while the Fan Motor warranty pertains solely to the Main Fan Motor, excluding electrical components.

Warranty duration begins from the date of purchase. Proof of purchase (receipt/invoice) is required for servicing requests.

It is important to note that this warranty does not cover on-site service; therefore, any faulty items must be brought to the service center at the user's expense.

To the extent permitted by law, E-Risen PL/E-Risen SB shall not be liable for any indirect, special, or consequential losses or damages arising from the use of the product.

E-Risen PL/ E-Risen SB reserves the right to inspect and test defective products to assess the extent of the defect and the validity of warranty claims. Any products or components replaced under a warranty claim will become the property of E-Risen PL/ E-Risen SB.

E-Risen PL/ E-Risen SB retains sole discretion to repair or replace the product with a comparable or refurbished unit, and this decision shall be final. The purchaser agrees to abide by this determination.

The warranty does not cover the followings, not limited to:

- 1. Normal wear and tear, mishandling, misuse, negligence, improper storage, finishes, scratches, dents, rust, colour deterioration, stains, corrosion, lighting, power surge, fire, flood, accident, ingress of dust, insect, liquid into the product or if the product is dropped.
- 2. Consumables such as Fan Blades, Guards, Knobs, Remote Controls, Batteries, Plastic Covers/Casing, Fasteners.
- 3. Damages resulting from improper installation, improper assembly, the use of the wrong electrical supply/voltages, tampering, modifications, or alterations by unauthorized personnel.
- 4. Cleaning, reconditioning or lubrication.
- 5. Charges such as transportation, installation, dismantling, or labour.
- 6. Products with its model number, serial number defaced, removed, or altered.



IMPORTANCE OF RESPONSIBLE DISPOSAL

Please do not dispose of electrical appliances as unsorted municipal waste. Consult your local authorities for information on available collection and recycling programs.

Improper disposal of electrical devices may pose risk to the environment and human health if not managed, discarded, or recycled appropriately.



Distributed By

www.nnio.asia

E-Risen Distribution Hub Pte Ltd

178 Paya Lebar Road #02-05 Singapore 409030 Tel: (65) 6993 0506 UEN: 202338955N

Malaysia BRN: 202401050765 (1596608-M)

E-Risen Distribution Hub Sdn Bhd

3A-2A-2, 3A Floor, Tower 2 @ PFCC

Jalan Puteri 1/2, Bandar Puteri

47100 Puchong, Selangor

www.nnio.my