

CKS910

It's my pleasure to help you!



CKS910 SETUP GUIDE

Contents

Warning.....	1
Important notes.....	2
Fcc Warning	2
Package Contents.....	4
Location Of Contents And Indicator.....	4
Daylight Saving Time Setting.....	6
Setting The Clock Manually	7
Setting The Alarm.....	8
Listening To FM Radio.....	9
Listening To Bluetooth Speaker.....	11
Enjoying Audio Source Via Aux In Jack	12
Sleeping To Music Timer.....	12
Qi Wireless Charging.....	13
Usb For Charging.....	14
4-Level Dimmer Control.....	15
Charging The Lithium Battery	15
Care And Maintenance	16
Limited Warranty	18

WARNING

TO PREVENT ELECTRIC SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED AND THERE IS NO BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
- 2.) Do not use this apparatus near water.
- 3.) Clean only with dry cloth.
- 4.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 5.) Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- 6.) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, ask an electrician for replace the obsolete outlet.
- 7.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
- 8.) Only use attachments / accessories specified by the manufacturer.
- 9.) Unplug this apparatus during lightning storms or when unused for long periods of time.

10.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
11.) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
12.) The AC adaptor must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on apparatus.



13.) The AC plug is used as a disconnect device and it must remain readily accessible during intended use. In order to disconnect the apparatus from the AC power completely, the AC plug must be removed from the AC outlet completely.
14.) The battery must not be exposed to excessive heat such as sunshine, etc.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

IMPORTANT NOTES

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as: electric heaters, on top of other stereo equipment that radiates heat, places lacking ventilation, dusty areas, places subject to constant vibration and/or humid or moist areas.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the AC adapter is properly installed.
- When moving the set, be sure to first disconnect the AC adapter.

FCC WARNING

FCC PART 15.19 WARNING STATEMENT

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE. AND

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

FCC PART 15.21 WARNING STATEMENT

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Part 15.105 Warning Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. damage to your furniture we strongly recommend that you purchase small self adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber "feet" before you place the product on fine wooden furniture.

Power Source


This radio is designed to operate on normal AC Power Source. For North America, it works only under 120V 60Hz. For Europe, it works only under 220V-240V. Do not attempt to operate the clock on any other power source. You could cause damage to the clock that is not covered by your warranty. This clock should be connected to an AC outlet that is always "live". Do not connect it to an outlet that is controlled by a wall switch. When the power to the clock is interrupted, the built in lithium battery takes over to maintain the time and alarm settings. To maximize the life of the lithium battery keep the clock connected to a "live" outlet at all times.

PACKAGE CONTENTS

• CKS910 Clock Radio x 1



• Owner's Manual

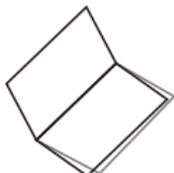


LOCATION OF CONTENTS AND INDICATOR


FRONT PANEL



TOP PANEL

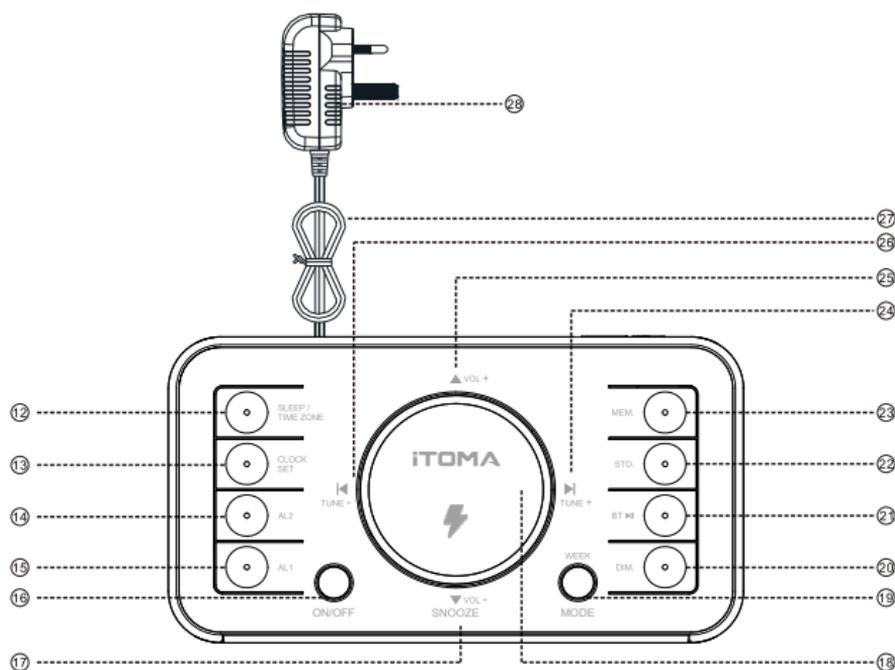

REAR PANEL

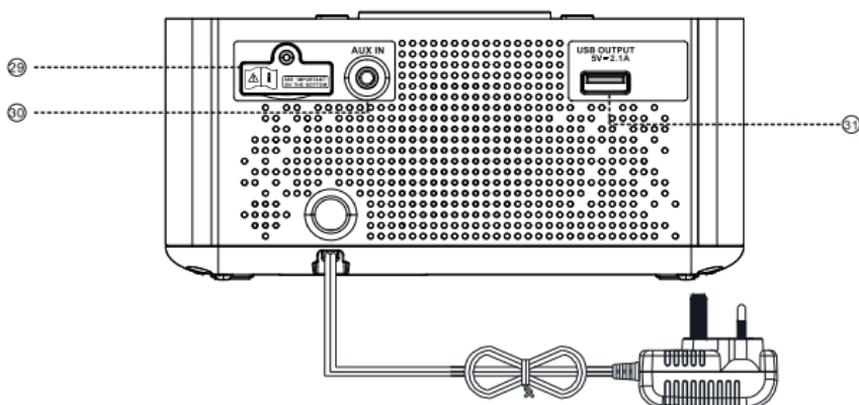

1. 1🎵 (AL 1" **Radio** ") Alarm Indicator
2. 1🔊 (AL 1" **Buzzer** ") Alarm Indicator
3. **AM** Indicator. (" **On** " =AM; " **Off** " =PM)
4. **AUX** Indicator
5. 📶) Wireless Charging Indicator
6. **DAY OF WEEK** Indicators
7. 📶 **LOW BATTERY** Indicator
8. **MHz** FM Radio Indicator
9. **BT** Indicator("Solid"= Bluetooth connected)
10. 2🔊 (AL 2" **Buzzer** ") Alarm Indicator
11. 2🎵 (AL 2" **Radio** ") Alarm Indicator
12. **SLEEP** Button
13. **CLOCK SET** Button
14. **AL2 ON/OFF/SET** Button
15. **AL1 ON/OFF/SET** Button
16. ⏻ **POWER** ("ON"/ "OFF") Button
17. ▼ **DOWN/VOL-/ SNOOZE** Button
18. Qi Wireless Charging Pad
19. **MODE/WEEK** Button
20. **DIM.(DIMMER)** Button
21. **BT▶||** (Play/Pause) Button
22. **STO.(STORE)** Button
23. **MEM.(MEMORY)** Button
24. ▶ **TUNE+** Button
25. ▲ **UP/VOL+** Button
26. ◀ **TUNE-** Button
27. Adapter Cable (acts as Antenna)
28. AC Adapter
29. Backup Battery Compartment
30. **AUX IN** Jack
31. **USB CHARGING** Port

DAYLIGHT SAVING TIME SETTING

This clock was preset Auto DST(Daylight Saving Time) for different countries as below:



PRODUCT CODE	DISPLAY INDICATION	AREA
DE	EU	Europe
NA	US	America/Canada
UK	EN	United Kingdom
AU	AU	Australia
CO	CO	Mexico
JP	JP	Japan

- When the product is set to RESET(factory setting), the DST needs to be RESET.Daylight Saving Time Settings can be set in "Time Settings" and can only be used after reset, in the order of hour, minute, month, day, year, 12/24 hours, and DST.
- You can also set the DST time by long pressing "▲" until the DST stands for the letter (OFF/EU/US/ EN /AU/ CO / JP) flashing, and then short pressing the "▲" button to switch to your local DST.(OFF means to close Daylight Saving Time;EU stands for Europe;US stands for the United States;EN stands for United Kingdom;AU stands for Australia;CO for Mexico;JP stands for Japan).

SETTING THE CLOCK MANUALLY

Checking the Current Year-Date-Day of Week-Time Settings Press briefly the **CLOCK SET** button repeatedly to see the cycle of year, date, day of week and time. To restore time display mode, leave it idle for 3 secs.

- Press and hold "**CLOCK SET**" button the HOUR and MINUTE digits will blink at the same time, Press "◀" or "▶" button to adjust the hour.Press "▲" or "▼" button to adjust the minute;
- Press "**CLOCK SET**" button again , the "**MONTH**" and "**DATE**" digits will blink at the same time, Press "◀" or "▶" button to adjust the month, Press "▲" or "▼" button to adjust the date.



- ③ Press the "CLOCK SET" button again, the "YEAR" number will flash. Press the "▲" and "▼" or "◀" and "▶" keys to adjust the year
- ④ Press the "CLOCK SET" key again. "24H" or "12H" flashes on the display (24H means 24 hour format, 12H means 12 hour format) Press "▲" and "▼" or "◀" and "▶" keys Adjust the time format.
- ⑤ Press "CLOCK SET" button again or wait for 40 seconds to return to the clock display.

SETTING THE ALARM

IMPORTANT: Alarm settings can be checked and adjusted in Standby mode

1 / 2 Wake to Radio

1 / 2 Wake to Buzzer

(Two alarm ringtones are available)

Setting Alarms for the Day(s) of the Week

EVERYDAY Monday to Sunday


WEEKDAYS Monday to Friday

WEEKENDS Saturday and Sunday

SINGLE DAY monday/Tuesday/Wednesday/
Thursday/Friday/Saturday/Sunday



SETTING THE WAKEUP ALARMS

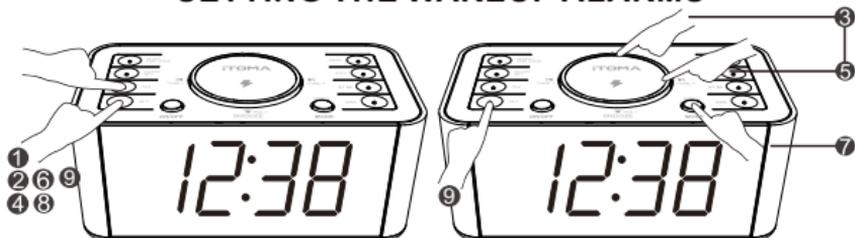

- ① Press "AL1" button repeatedly to select your alarm ringtone: When "" is on the display, Alarm 1 (Wake to Buzzer) is turned on. When "" is on the display, Alarm 1 (Wake to Radio) is turned on. If both "" and "" disappear on the display, Alarm 1 is completely turned off.
- ② After selecting your desired alarm ringtone, press and hold "AL1" button for 3 seconds and the "HOUR" and "MINUTE" digits will blink at the same time.
- ③ Press "◀" or "▶" to adjust the hour, Press "▲" or "▼" to adjust the minute.
- ④ Press "AL1" button again and the "CURRENT VOLUME LEVEL" digits will blink. The volume levels range from 1 to 15, with level 15 being the loudest.

- ⑥ Press "▼" or "▲" button to adjust to your desired alarm volume level.
- ⑥ Press "AL1" button again and the "DAY(S) OF THE WEEK" texts (MON to SUN) will blink.
- ⑦ Press "WEEK / MODE" button to select the alarm day mode (You can set the alarm days in the following 4 options:
Option 1: Everyday Monday to Sunday
Option 2: Weekdays Monday to Friday
Option 3: Weekends Saturday and Sunday
Option 4: Single Day monday/Tuesday/Wednesday/Thursday/
Friday/ Saturday/Sunday)
- ⑧ Press "AL1" button again or wait for 40 seconds to exit the alarm setting. After you have set the alarm, the alarm indicator of "1🎵" or "1🔔" will appear on the display.
- ⑨ To turn off AL 1 completely, please press the "AL1" button repeatedly until the AL1 symbol disappears
- ⑩ To set the Alarm 2, repeat the above steps 1 to 9.

Snooze Alarm

When the alarm comes On, press the **SNOOZE** button to pause it for 9 minutes. Alarm indicator will flash during Snooze Alarm mode. To turn off Snooze Alarm, press either the **POWER**, **AL1**, or **AL2** button once.

Note 1: If no operation is performed while the alarm is sounding, the alarm will stop after 60 minutes.

Note 2: The last radio station you listened to will play when you choose "Wake to radio" for your alarm ringtone.

LISTENING TO FM RADIO

Turn On / Off Radio Mode


- Keep the clock radio away from other electronic devices to avoid radio interference. Extend the power cord fully and orient it for better FM reception
- Press the **ON/OFF** button to turn the unit from Standby mode to On.
- Press the **WEEK/MODE** button repeatedly until the **MHz** and **FM** indicators light up
- Set the VOLUME by pressing the **VOL +** or **VOL -** button to a level that suits your needs.
- When you finish listening to radio, press the **ON/OFF** button to turn the radio Off. The **MHz** indicator will then turn " Off " .

Note: Wireless charging can interfere with FM reception. Please use USB charging when listening to the radio for best reception.

Receive your desired station with the TUNING

control:

- Press the **TUNE + / TUNE -** button briefly, the receiving frequency will increase / decrease by one step.
- Press and hold the **TUNE + / TUNE -** button for 3 seconds then release, Auto Station Seeking will be engaged, the receiving frequency will increase / decrease automatically until a station with acceptable reception is found.

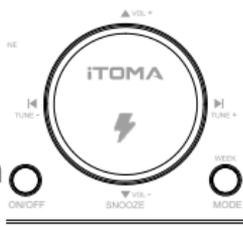

Storing and Recalling Radio Station Memory Manually

When you have a few favorite radio stations to listen to, you may like to save them in specific memory locations and pick one of them in a few seconds without the need of searching it each time. Our digital tuning technology allows you to do this easily by following the steps listed below:

Storing Station to the Memory

- Turn the unit On and select Radio mode (**MHz** indicator " **On** ").
- Tune in the desired station by the **TUNE** control as described.
- Press and hold the **STO.** button (for 2 seconds) until " **P XX** " blinks, indicating the memory location to store the station currently tuned in.
- While " **P XX** " is blinking, press the **TUNE +** or **TUNE -** button can change the memory location from 1 through 20. For example, " **P 03** " means the current listening station is about to be stored into the 3rd location of the memory.
- After deciding the memory location, press the **STO.** button again, the currently listening station is then stored accordingly.
- The display will show the frequency of the station, and after a few seconds, it will restore the current time.


Recalling Station from the Memory

- Turn the unit On and select Radio mode.
- Press the **MEM.** button, " **P XX** " shows on the display, and the station according to the memory location will then be tuned in.

- Repeatedly pressing the **MEM.** button or the **TUNE +/ TUNE -** button will change the memory location from 1 through 20, and the station stored in the location will then be tuned in once the memory location is selected and all buttons released.
- The display will show the frequency of the station, and then returns to the current time after a few seconds.


LISTENING TO BLUETOOTH SPEAKER

- Press the **ON/OFF** button to turn the unit ON.
- Press the **WEEK/MODE** button to select Bluetooth (bt) mode (BT indicator " **Flashes** " for pairing).
- Enable your Bluetooth device and select **CKS910** from its Available/ Paired device list. If pairing successful, the unit will prompt and **BT** indicator will become solid.
- Automatic connection with your Bluetooth devices is possible if they have been paired successfully with this unit before.
- After paired, you can play your music through this Bluetooth Speaker.
- Press briefly the **BT▶||** button can pause or resume playback streaming over your Bluetooth device.

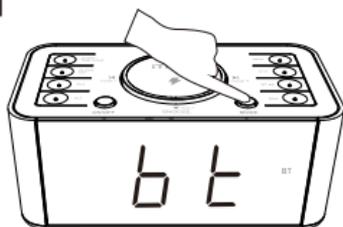

Note: If pairing unsuccessful, all previously paired Bluetooth devices around should be disconnected first by pressing and holding the **BT▶||** button until it prompts, or turn Off their Bluetooth connection, in order to avoid making any auto reconnection between them. Then, set this unit to Bluetooth mode, and tap the Bluetooth switch on your phone/device Off and back on again to refresh/search any nearby **CKS910** for pairing.

ENJOYING AUDIO SOURCES VIA AUX IN JACK

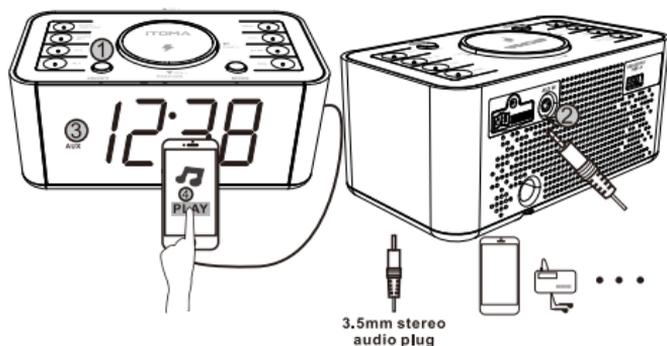


This clock radio is equipped with AUX IN jack for you to enjoy iPod, MP3 music player or other audio source.

- Connect your iPod, MP3 player or other audio source from its earphone jack to the AUX IN jack of this unit via an audio cable (not included) with both ends in 3.5mm stereo plug.
- Press the **WEEK/MODE** button repeatedly until the display switch to AUX function mode and the indicator will light up
- Start to play iPod, MP3 music player or other audio player, and set the player volume to its maximum when necessary.
- Adjust the volume of this clock radio to meet your desired level as well

Note: When alarm time comes, music playing through the AUX IN jack will be muted, and Wake-To-Music or Wake-To-Buzzer can only be heard according to your alarm setting


SLEEPING TO MUSIC TIMER

Press the **ON/OFF** button to turn ON the unit, and press the **WEEK/MODE** button to select either Bluetooth, FM Radio or AUX mode to play music or listen to radio

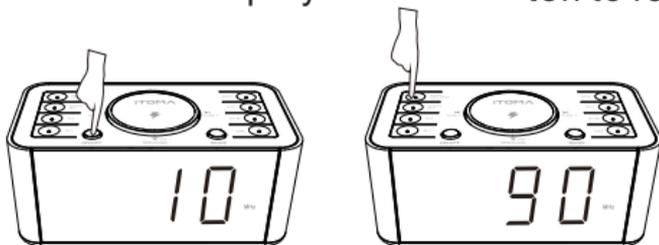

- Press the **SLEEP** button. The display will show the sleep timer.
- Press the **SLEEP** button repeatedly to choose your desired sleep timer (10-90 minutes or OFF).
- To display the sleep timer during count down process, press the **SLEEP** button.
- To cancel the timer during sleep countdown, press **SLEEP** button until the display shows "OFF" or press the ON/OFF button to turn off

QI WIRELESS CHARGING

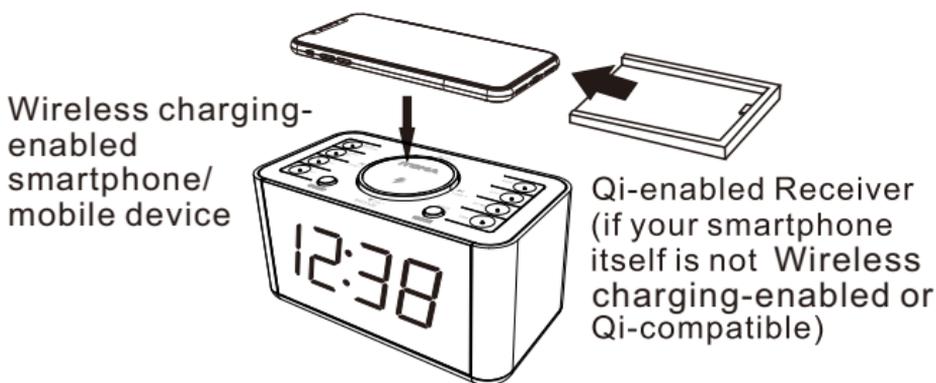

A Fast Wireless Charging Pad is built on top of this unit for wireless power transfer to any Qi-compatible smartphones or Qi-enabled receivers over a vertical distance of not more than 0.2 inches (5 mm).

- ① Place your Qi-compatible smartphone or receiver (only one set at a time) on top of the Wireless Charging Pad. The center of your smartphone or receiver must be positioned properly right at the middle of this charging pad in order to maximize the charging efficiency.
- ② While wireless charging started or detected, the ⚡ indicator will be flashing "**RED**" slowly.
- ③ To make sure wireless charging performs properly, check the charging icon and/or charging message displays on your smartphone.

- ④ While your smartphone is fully charged, the  indicator will turn solid " **Green** " (except for iPhones). Please also check the charging icon and/ or charging message on your smartphone to ensure it is fully charged, then remove it from the wireless charging pad.

Note:


- This wireless charging pad works with Qi-compatible device including 7.5W iPhone XS Max/XS/XR/X/8 Plus/8, 10W Galaxy S10 Plus/S10E/S10/S9, and 5W all Qi-enabled phones.
- Wireless charging may not work properly if the protective case or accessory placed at the back of your smartphone is thicker than 0.2 inches (5 mm), remove the protective case or accessory before placing your smartphone (screen facing upward) on the wireless charging pad.
- Do not place any foreign objects, such as coins, keys, metallic objects, magnets, and magnetic stripe cards, between your smartphone and the wireless charger, to avoid interference or overheating. While wireless charging error occurred, the  indicator will be flashing "**RED**" rapidly to alert user to get the erroneous receiver removed.

Note: Wireless charging can interfere with FM reception. Please use USB charging when listening to the radio for best reception.

USB FOR CHARGING

This clock radio has a USB port at the back, which can provide up to 5V 2.1A to charge devices like smartphone, tablet etc. via a USB cable (not provided).

Note: Electrical energy drawn from the USB port may vary due to different charging cable condition, battery characteristic or power management system of your device being charged.

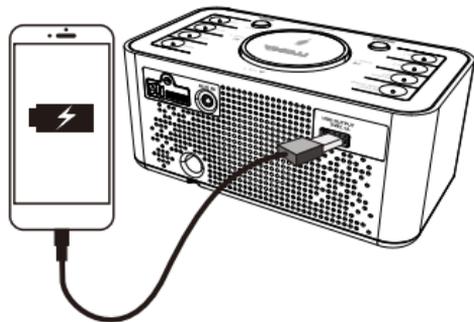



4-LEVEL DIMMER CONTROL

Press the **DIM.** button while in standby mode to select any of the four levels.

It also can be adjusted when the Bluetooth, Radio or AUX is On.



CHARGING THE LITHIUM BATTERY

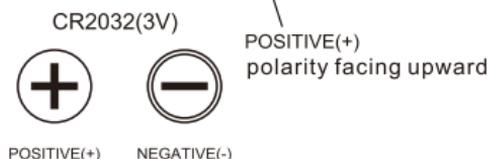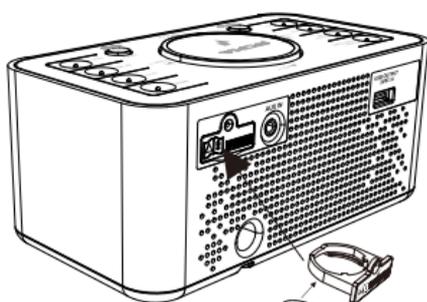

The lithium backup battery needs replacement when the **LOW BATTERY** indicator lights up, otherwise, the time and alarm settings will be lost/reset after a power outage.

- Leave the AC adapter connected to your AC outlet to retain memory while the original battery is removed.
- Unscrew the battery holder from the cabinet with a small screwdriver and insert a new battery with the same CR2032 or equivalent type into the holder the same way, observing the positive (+) polarity before sliding the holder back into the slot. The **LOW BATTERY** indicator should then be Off.

CARE AND MAINTENANCE

Care Of Cabinets

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow water or any liquid to get inside the cabinet. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your radio.

Lithium Battery Precautions

- Dispose of the old battery properly. Do not leave it lying around where a young child or pet could play with or swallow it. If the battery is swallowed, contact a physician immediately.
- The battery may explode if mistreated. Do not attempt to recharge it or disassemble it. Do not dispose of the old battery in a fire. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases must not be placed on the apparatus. This marking indicates that this product should not be disposed of with other household wastes throughout the country. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle this unit responsibly so as to promote the re-use of material resources. To return your used device, please use return and collection systems or contact the retailer where the product was purchased as they know how to safely recycle this product.

FCC WARNING

FCC PART 15.19 WARNING STATEMENT

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

FCC PART 15.21 WARNING STATEMENT

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Part 15.105 Warning Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

iTOMA

1-Year Limited Warranty

iTOMA (Hong Kong) Company Limited (iTOMA) warrants to the original consumer of this iTOMA product that it will furnish a replacement for, or, at its sole discretion, repair any part which proves (upon inspection by iTOMA) to be defective under normal use within 1 year of the original purchase date.

This warranty does not apply to cosmetic appearance and consumable items, including, but not limited to, antennas, knobs, cabinets, or cases, and in the case of batteries, for damage caused by leaking batteries. It also does not apply to the product, or to any part thereof, that damaged through misuse or negligence.

Furthermore, this warranty will become invalid if, in the judgment of iTOMA the product or any part thereof has been a more readable installed incorrectly, or has been repaired or altered other than by iTOMA.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusions and limitation may not apply to you.

For Service, Warranty, or Product Information,
Please contact iTOMA (Hong Kong) Company Limited,
www.itoma.com /contact us by email at info@itoma.com

**PLEASE SAVE THIS CARD TOGETHER WITH ORIGINAL DATED
PROOF OF PURCHASE FOR YOUR RECORDS AND FOR
CUSTOMER SERVICE.**