


BEARING GREASING INSTRUCTIONS

(APPLICATION: SM1500 AND LARGER CRANES)

TOOLS

- Grease (Waterproof High Temperature) • Flat Head Screw Driver

GREASE NIPPLE

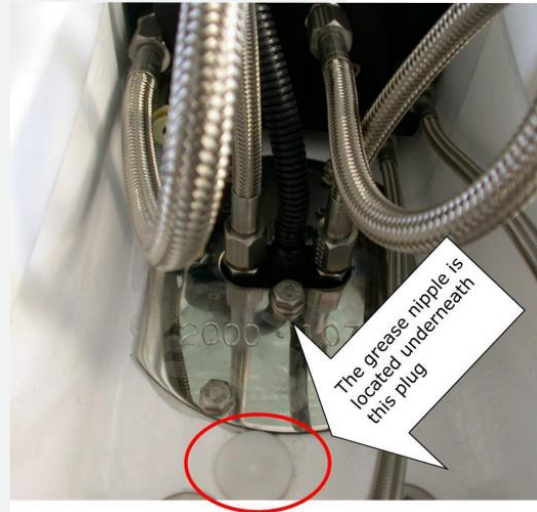

INSTRUCTIONS

The main bearing of your yacht crane (All SM & CT Series) needs to be greased thoroughly **every 3 months** to prevent corrosion.

- Raise the boom of your crane until you can access the inside of the truck.
- Look for the serial number plate, you will find a ¾" diameter plastic plug directly in front of the serial number plate.
- Carefully pry out this plug either with your ginfingers or a flat head screw driver. Underneath you will see a grease nipple.
- Using waterproof high pressure grease, insert about five (5) shots into the bearing.
- Rotate the crane 90 degrees and insert another five (5) shots. Repeat two more times so that you have greased the bearing at four (4) spaced points.
- Replace the plastic plug.
- Exercise the crane thoroughly in the rotation function to evenly distribute the grease.
- Repeat again in 3 months.

MAINTENANCE AND SCHEDULE

Date (mm/dd/yy)	Four Point Greasing				Comments
	1	2	3	4	

PARTS LIST

Description	Part Number	Notes / Checked
Waterproof High Pressure Grease		
Replacement Plug		
Grease Nipple		

