USER MANUAL

GETTING STARTED



Press to attach each pedestal onto the target shooting gallery.



If using batteries to power the device, unscrew the battery cover with a Phillips screwdriver (not included).



Place 4 (AA) batteries following the battery polarity diagram shown in the compartment.



If using USB to power the device, plug the round end of the USB cable into the device and the other end into a standard USB port.



Place 1 ball on each pedestal.



Switch on the device. (ON/OFF switch can be found on the back).




Turn the knob to adjust the air stream and make the hovering targets float higher or lower.



Load your blaster toy gun with a foam dart, cock the firing hammer, aim, and shoot!

SPECS!

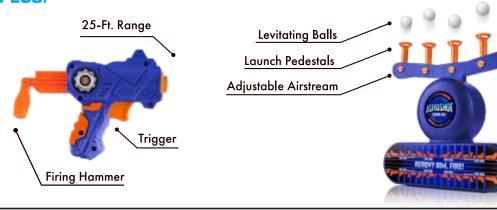

BATTERY PRECAUTIONS

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from toy.

Dispose of used batteries properly.

Remove batteries when not in use.

Only batteries of the same or equivelent type are recommended to be used.


DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries.

DO NOT use rechargeable batteries.

DO NOT short-circuit the supply terminals.
This toy is not intended for children under 3 years old.

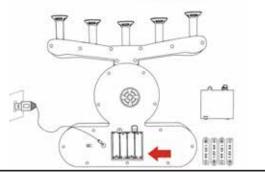



To ensure that play is both safe and fun, please review these operating instructions with your children:

Failure to follow all safety instructions may result in injury or property damage none of which USA Toyz will be held liable for as proper warnings are outlined in the manual.

- Upon use of this product the end user assumes all responsibility and USA Toyz cannot be held liable for any personal injury and/or property damage.
- This item contains fast moving parts, motors and/or other wiring. When using it, basic precautions should always be followed including but not limited to the following:
- · Keep your eye on the product at all times
- Tie back hair or wear a hat to avoid entanglement or injury
- Keep hands, hair and loose clothing away from moving parts when the power switch is turned ON.
- Please ensure the product is turned off when not in use.

