





## **Instruction Manual**

Need Technical Support? Contact us at support@force1rc.com














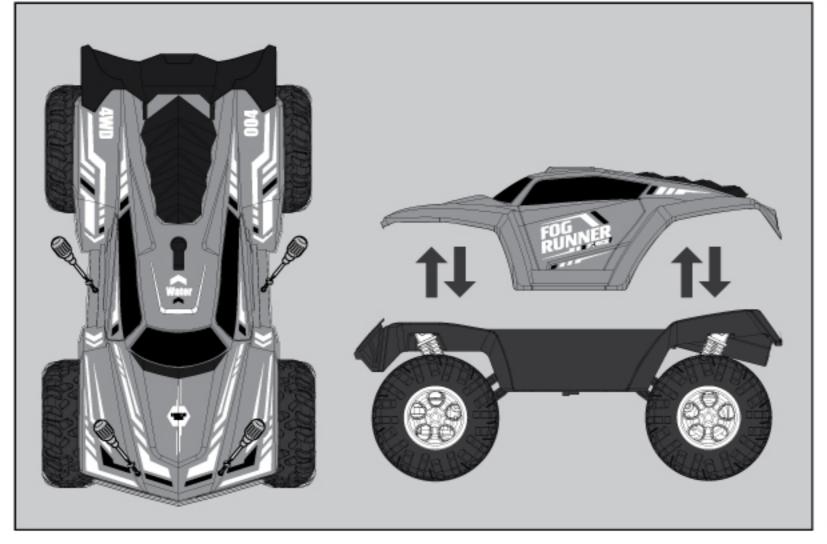




## Rechargeable Battery Installation


- Unscrew the battery cover as shown in Picture 1.
- Install batteries with correct polarity as marked +/-.
- Always store batteries in a cool, dry place.

(Picture 1)


Keep batteries out of reach of children below the recommended age.

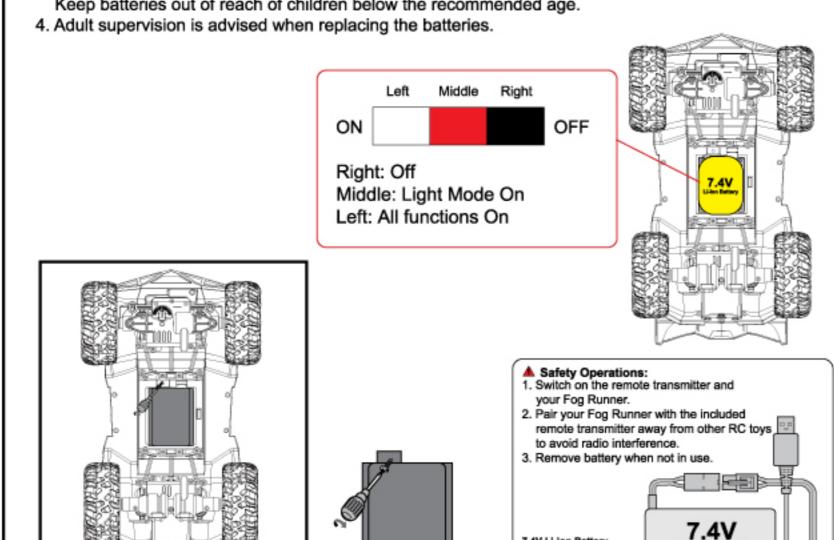

 Always store batteries in a safe place. Keep out of reach of children who are under the recommended age. Ask parents/guardians for help when replacing the batteries. Turn off controller and open cover. 4. Install batteries accurately in the battery compartment and ensure to place batteries as marked with +/-.

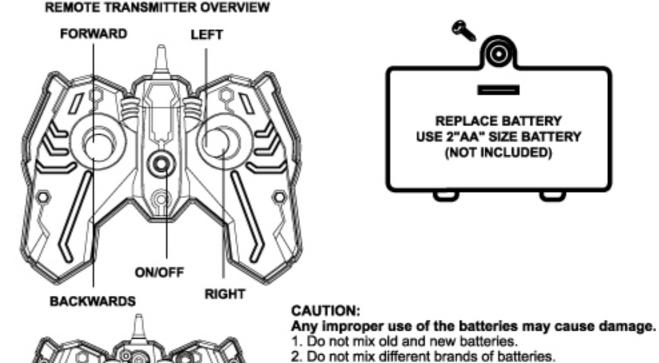



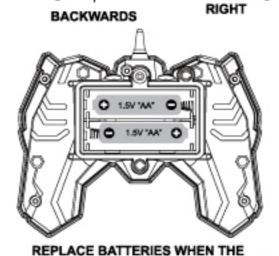

FOG RUNNER STARTS TO SLOW DOWN.

**USAGE AND SAFETY:** 

Leave time between charging and using the battery.

When installing motor parts, gently push 30 degrees

- Do not drain the batteries, leave about 20% power remaining to extend the lifetime of the battery.
- 3. Do not leave batteries exposed to direct sunlight.
- Do not overcharge batteries.

Insert batteries with correct polarity.

upwards with the tip of a finger.

- Please use genuine factory spare parts replacements from Force1RC.com
- Adult supervision recommended. Warning, small parts.

## NOTICE:

Make sure there's no water left over in the car when not in use. Please empty the water reservoir after every session.



## To ensure that play is both safe and fun, please review these operating instructions:

Failure to follow all safety instructions may result in injury or property damage none of which Force1 will be held liable for as proper warnings are outlined in the manual.

- Upon use of this product the end user assumes all responsibility and Force1
  cannot be held liable for any personal injury and/or property damage.
- This item contains fast moving parts, motors and/or other wiring. When using it, basic precautions should always be followed including but not limited to the following:
- Keep your eye on the product at all times
- Tie back hair or wear a hat to avoid entanglement or injury
- Keep hands, hair and loose clothing away from moving parts when the power switch is turned ON.
- Please ensure the product is turned off when not in use.

