



GALAXY LIGHT SWORDS

6+



LIGHT FORCE

INSTRUCTION MANUAL




Assemble the blade. Place the shortest piece inside the medium length piece. Then place the two assembled pieces into the longest piece which has the screw bottom.



Screw the assembled blade into the handle of the sword



Use a screwdriver to open the battery cover.

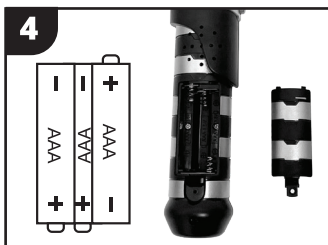

Insert 3 AAA batteries in the battery compartment using the polarity diagram above. (batteries not included)



Press the silver power button on the handle, to turn the sword on

Play Modes: Quick press the power button to move from one model to the next

1st Press: The sword will glow bright red. As the sword comes into contact with objects, it will change to other solid colors.

Long press the button to lock in your color, then press the button to change your color. Long press again to unlock.

2nd Press: The sword will flash through different colors. As the sword comes into contact with objects it will change to other colors. Long press the button to lock in your desired flashing color then press the button to change flashing colors. Long press again to unlock.

3rd Press: The sword will enter silent mode and begin cycling through the different solid colors.

4th Press: The sword will turn off.

Lock Color Mode:

- Long press to lock color
 - Short press to switch color
 - Long press again to unlock color
-

Battery Instructions:

1. Do not mix different types of batteries or old and new batteries
 2. Be sure to insert batteries with correct polarity
 3. Remove dead batteries from toy
 4. Each sword requires 3 AAA batteries (not included)
-

⚠ WARNING:

This product should be assembled by adults.
Not meant for children under 3 years of age.

Please include your order number when you contact us at
support@usatoyz.com
for fast, friendly service