

Misty Mountain Unicorn Play Tent

Step 1: Unzip the carrying bag. Inside you will find one play tent and a small bag containing 4 poles.



 
Step 2: Take out the poles and set aside for later.



Step 3: Carefully place the tent and poles into the carrying bag.



Step 4: When the poles are folded out, one side is noticeably longer. Insert the longer end into the FLOOR SLEEVE, and shorter end into the ROOF SLEEVE.






Reference pictures:







 Step 5: Tie the poles to secure.



Your play tent is now ready to be used!



Contents:

- 1 Play Tent
- 4 Poles
- 1 Carrying Bag
- 1 Unicorn Headband

Packing the play tent:

- **Step 1:** Remove the poles and lay the play tent flat on the ground to gather all the material.
- Step 2: Pick it up and twist into a figure 8.
- **Step 3:** Carefully place the tent and poles into the carrying bag Zip.







⚠ WARNING!

CHOKING HAZARD - Small parts Not for children under 3 years Keep this play tent away from all heat sources. Keep this play tent away from sharp objects.