



USER MANUAL



FOR MORE INFORMATION


Visit us online at USAToyz.com for product information and replacement parts.



TABLE OF CONTENTS

Vox Box Overview & Contents	1
Belt Clip & Battery Installation	2
Safety Precautions & Operation	3
Frequency Guide	7

 VOX BOX OVERVIEW

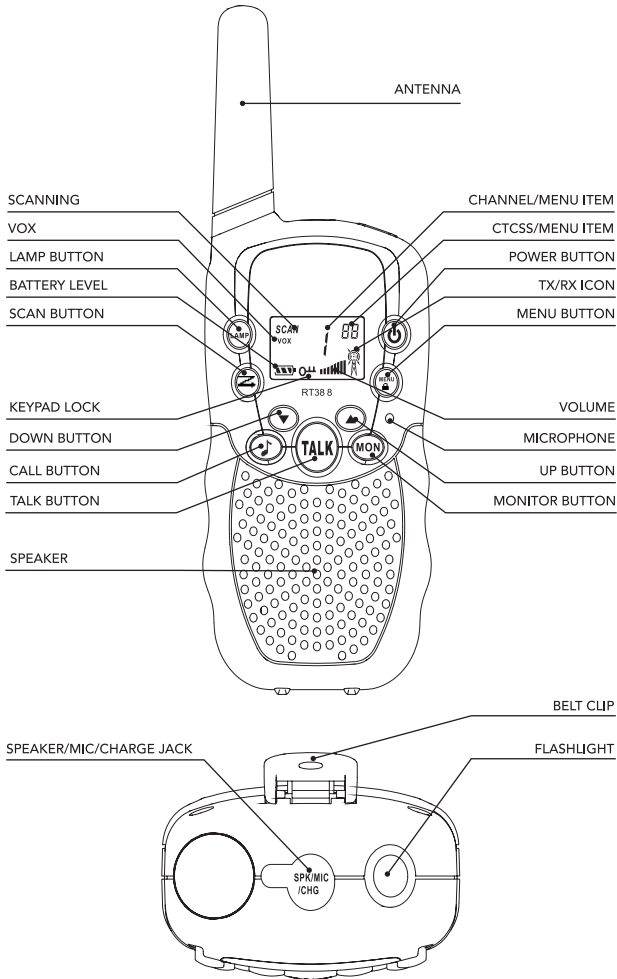

CONTENTS

 
- 2 Voice-Activated Walkie-Talkie Units
- Detachable Belt Clip

NOTE

Please read these user instructions carefully before using the equipment and retain for future consultation.


BELT CLIP REMOVAL/ATTACHMENT

To remove the belt clip, press the tab at the top of clip and slide upward. To reattach, slide clip piece down with the clip facing inward until you hear a click.

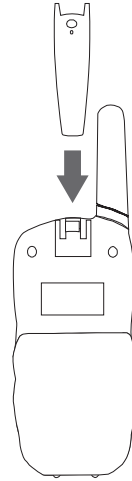

BATTERY INSTALLATION

 Press down on the back of panel of the unit and slide the battery cover off (you may need to remove the belt clip for easier access). Insert 4 AAA batteries (not included) as indicated below. Replace the cover.

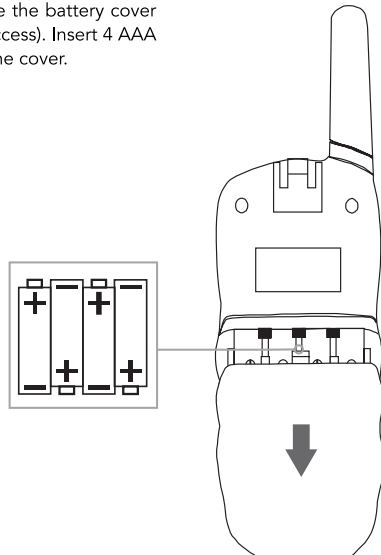

SAFETY PRECAUTIONS

- Do not use these walkie-talkies if they are damaged in any way
- Do not use near gas pumps or fuel storage areas
- Do not turn on or use on aircraft or in hospitals
- Operating these devices near a radio may cause interference
- Remove the batteries if devices will not be used for a long period of time
- Never mix new and used batteries
- For best results, direct the antenna upward when in use
- Clean with a damp cloth; do not use solvents or cleaning agents
- Do not modify these devices in any way
- Do not rely on these devices to contact emergency services

WALKIE-TALKIE OPERATING INSTRUCTIONS

ON/OFF BUTTON

Press and hold down the power button (right of LCD screen) for 3 seconds to power the device on or off – a beep will indicate operation.


VOLUME ADJUSTMENT


Press the up and down arrows (below LCD screen) to adjust volume up or down. Volume level is displayed on the screen.


BATTERY LEVEL

Look for the battery icon on the LCD screen to check your battery level.

 Battery Full

 Battery 2/3 Charged

 Battery 1/3 Charged

 Battery Empty

The icon will flash and the device will beep when the batteries need to be replaced or recharged.

WALKIE-TALKIE OPERATING INSTRUCTIONS

RECEIVE/TRANSMIT COMMUNICATION

To transmit, press and hold the TALK button while talking into the walkie-talkie at a close range (within 5cm of your face). Release the button to finish talking – when the button is released, your walkie-talkie can receive transmissions.

NOTE

- Walkie-talkies must be set to the same channel and CTCSS code
- Release the TALK button when you're finished talking to receive a response

HOW TO CHANGE CHANNELS

- Press the MENU button once; the current channel number will flash on the LCD screen
- Press the up and down buttons to change the channel
- Press the TALK button to confirm and return to Standby Mode

NOTE

If no button is pressed, the device will return to Standby Mode

CTCSS (CONTINUOUS TONE-CODED SQUELCH SYSTEM)

These walkie-talkies have an "8/20/22" channel system. This means you can always find a free channel if someone in your vicinity is using one and you don't want interference – or you want to share a channel.

Your devices also have subchannels called the CTCSS. Using the CTCSS transmits one of 99 different low-frequency tones (67-250 Hz) along with your voice signal for identification purposes.

NOTE

This feature does not impact operation or quality; to disable, select code "0F" in the menu; Press the TALK button to confirm

CHANGE THE CTCSS CODE

- Press the MENU button twice – the current CTCSS code flashes on the LCD screen
- Press the up and down buttons to change to another code
- Press the TALK button to confirm

MONITOR

You can use the Monitor feature to check for weaker signals on your current channel. Press the MON button to start and stop channel monitoring.

NOTE

The device will not transmit or receive CTCSS codes during monitoring

WALKIE-TALKIE OPERATING INSTRUCTIONS

VOX SELECTION

These devices are capable of voice-activated (VOX) control. This means the walkie-talkie will transmit any sound it picks up without pressing the TALK button – as such, it is recommended that VOX Mode not be used in a noisy or windy environment.

NOTE

- VOX Mode is overridden when you press the TALK button
- Press the Menu button 3 times and the current VOX setting will flash on the LCD screen along with the VOX icon
- Press the up button to set VOX sensitivity between 1 and 3 – the higher the number, the more sensitive the microphone
- Press the down button until you see “OF” to turn off VOX Mode
- Press the TALK button to confirm and return to Standby Mode

SCANNING FOR AN ACTIVE RADIO CHANNEL

Press the Scan button (the “Z” button) and the device will scan continuously from 1 to 22. Once an active channel is found, scanning will stop and you can listen to any transmission.

NOTE

Press TALK while on an active channel to enter Standby Mode

CALL TONES

A call tone alerts others that you want to start talking. These walkie-talkies have 10 call tones. To set the call tone:

- Press the MENU button 4 times; “CA” is displayed and the current tone flashes on the LCD screen
- Press the up or down button to change the call tone
- Press the TALK button to confirm

SENDING A CALL TONE

Press the CALL button.

BUTTON-TONE ON/OFF

Your device beeps every time you press a button. To turn this beep on or off:

- Press the MENU button 5 times until a “to” is displayed on the LCD screen
- Press the up button to enable (“ON”) or the down button to disable (“OF”)
- Press the TALK button to confirm and return to Standby Mode

WALKIE-TALKIE OPERATING INSTRUCTIONS

'ROGER' BEEP ON/OFF

Your walkie-talkie beeps every time the TALK button is released to confirm you've stopped talking. To turn this beep on or off:

- Press the MENU button 6 times until a "ro" is displayed on the LCD screen
- Press the up button to enable ("ON") or the down button to disable ("OF")
- Press the TALK button to confirm and return to Standby Mode

BUTTON LOCK

Press and hold the MENU button for 2 seconds to activate and deactivate Button Lock Mode. This locks all buttons except for the PTT button, CALL button and MON button, and the Button Lock icon will show on the LCD screen.

NOTE

Buttons will still make noise (if button tone is ON), but will not function

DISPLAY BACK-LIGHT

Pressing any button will activate the LCD back-light for 5 seconds.

EARPIECE CONNECTION

You may use earbuds with a 2.5mm jack with this device, although Vox Box walkie-talkies are not warranted for use with off-brand equipment.

Please contact support@usatoyz.com for information on Vox Box earbuds.

BATTERY-SAVER MODE

Battery-Saver Mode is activated after the device idles for 6 seconds. This does not limit operation and any incoming transmission or button use will activate the device.

BUILT-IN FLASHLIGHT

Press the LAMP button (left of LCD screen) to activate your flashlight.

FREQUENCY GUIDE

EU CHANNEL FREQUENCY

Channel	1	2	3	4
Frequency	446.00625	446.01875	446.03125	446.04375
Channel	5	6	7	8
Frequency	446.05625	446.06875	446.08125	446.09375

US CHANNEL FREQUENCY

Channel	1	2	3	4
Frequency	462.5625	462.5875	462.6125	462.6375
Channel	5	6	7	8
Frequency	462.6625	462.6875	462.7125	462.7375
Channel	9	10	11	12
Frequency	462.7625	462.7875	462.8125	462.8375
Channel	13	14	15	16
Frequency	462.8625	462.8875	462.9125	462.9375
Channel	17	18	19	20
Frequency	462.9625	462.9875	463.0125	463.0375
Channel	21	22		
Frequency	463.0625	463.0875		