


40in Saucer Tree Swing

User Manual

Please read this user manual before assembly and use, and retain it for future reference.

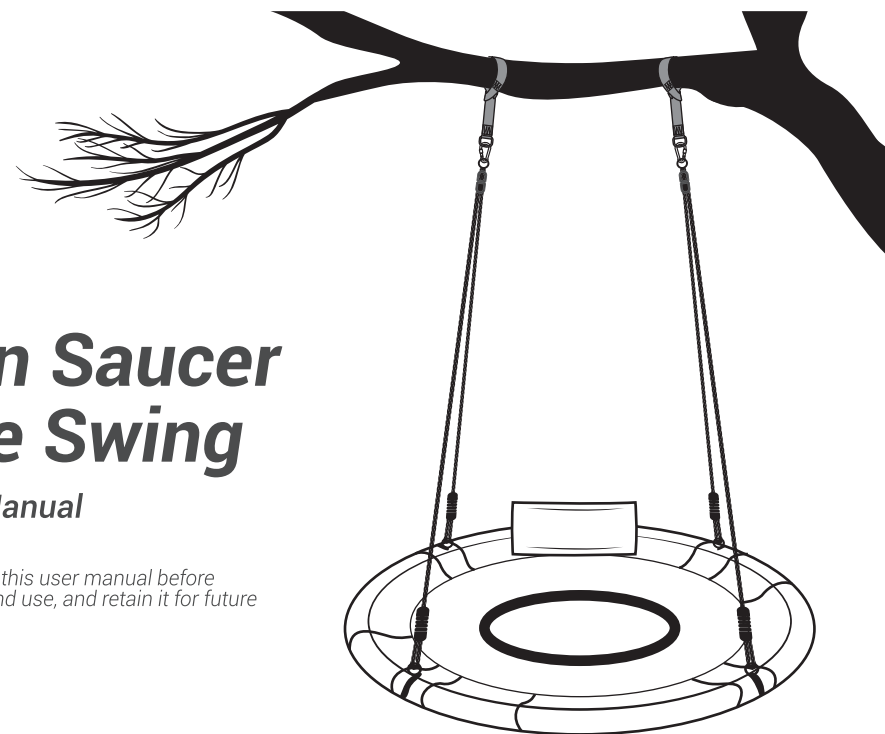

Safety Instructions

- Please preserve this manual and the packing carefully for later reference. If you give this product to a third party, remember to hand over this manual as well.
- This product is NOT meant for commercial use but is ONLY intended for domestic use. Use only under the supervision of adults. To avoid the risk of falling, never leave your child unsupervised on the swing.
- Follow the assembly and maintenance instructions to prevent your child from falling, or tumbling down and to prevent the tearing of ropes.
- We recommend that you set up the swing on an even surface and maintain a distance of at least 2m from other structures or obstacles, e.g. fence, garage, house, projecting branches, clotheslines, or electric cables.
- Not suitable for children below 3 years old. Risk of strangulation!
- Children below 3 years old are still unable to maintain their balance.
- Since children have different development levels, please check beforehand if your child is able to maintain his balance.
- The recommended height from the ground to the swing seat is 20in (50cm).

Maintenance

Always pay attention to the following points if the swing was not in use for a long period (Especially at the beginning of a new season!).

- Lubricate all metal parts. Check all the caps on screws and sharp edges and replace them if necessary. Check the swing seats, chains, ropes, and other accessories for any signs of wear.
- Check the ropes and rings constantly for decay, wear and tear resistance. The best way to check this is to turn the ropes till their inside becomes visible! Check the knots regularly for tightness. Examine the wood regularly for decay and cracks.
- Do not expose the swing to the weather during long periods of rain and sun.
- Always replace defective parts with original spares.

Parts List

A Swing Seat x 1	B Swing Pillow x 1	C EVA Foam Padded Tube x 4
D Suspension Rope X 2, Screw and Spacer X 4	E Tree Strap x 2	F M8 Carabiner x 2
G Swivel x 1	H Socket Wrench x 1	

Assembly Instructions

1. Insert 4 iron tubes into the swing seat.
2. Connect the adjacent iron tubes two by two to form a circle.
3. Cover it up with the hook & loop, then insert the bolt on the swing rope into the hole at the joint.
4. Put the washer and the nylon nut cap onto the bolt. Tighten with the T-spanner.
5. Attach the pillow to the Hooks & Loops on the swing.
6. Unlock the carabiner, and connect it to the swing rope.

How To Hang

1. Wrap the tree straps around a tree branch to the desired length, thread the D-ring through the loop end, and tighten the strap.
2. Hang the swing by buckling the carabiners to the D-ring of the tree straps. Or you could use a swivel (included) to hang the swing.

NOTICE: make sure the screw lock of the carabiner is 100% tightened.

