

# Operating instructions / swing seat

**Attention: This is the general user manual of swing,  
the actual color refers to the item you purchased**

## SAFETY INSTRUCTIONS


- Please preserve this manual and the packing carefully for later reference. If you give this product to a third party remember to hand over this manual as well.
- This product is NOT meant for commercial use, but is ONLY intended for domestic use. To be used only under the supervision of adults. Never leave your child unsupervised on the swing, in order to avoid the risk of falling down.
- Follow the assembly and maintenance instructions, in order to prevent your child from falling, tumbling down.
- We recommend that you set up the swing on an even surface and maintain a distance of at least 2m from other structures or obstacles, e.g. fence, garage, house, projecting branches, clotheslines or electric cables.
- Not suitable for children below 3 years of age. Risk of Strangulation!
- Children below 3 years of age are still unable to maintain their balance.
- Since children have different development patterns, please check beforehand if your child is able to maintain his balance.
- The recommend height from the ground to swing seat is 20in (50cm).

## MAINTENANCE

- Always pay attention to the following points if the swing was not in use for a longer period (Especially at the beginning of a new season!).
- Lubricate all metal parts. Check all the caps on screws and sharp edges and replace them, if required. Check the swing seats, chains, ropes and other accessories for any signs of wear.
- Do not expose the swing to the weather during longer periods of rain and sun.
- Always replace defective parts with original spares.

## PART LIST

**A** Swing Seat x 1

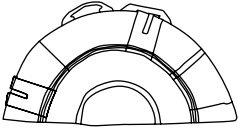


**B** tube x 4



**C** Chains with bolts and screws x 4



**D** Tree Strap x 2

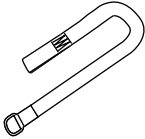

**E** Spanner



**F** Carabiner x 2




## ASSEMBLY INSTRUCTION


You can search the operation video "Trekassy swing instructions" on Youtube.

Tips: This is the general user manual of swing, the actual color refers to the item you purchased.


**Figure 1:** Insert 4 Tubes into the swing seat.

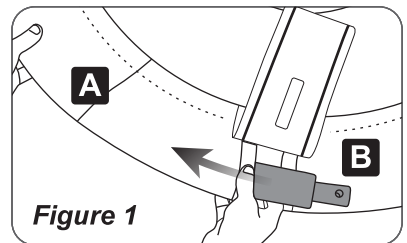


**Figure 2:** Joint random two adjacent tubes. Joint other two adjacent tubes then you will get two semi-circle tubes.

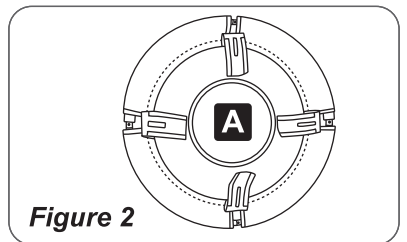



**Figure 3:** Connect left two joint and you will get a round swing seat. (Attention: A bigger tube end is matched with a smaller one. If they are in the same size, then it is unable to connect them.)

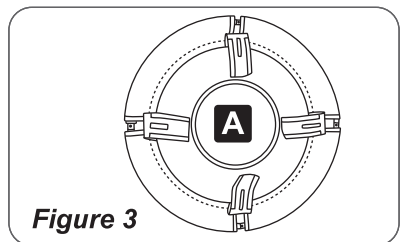



**Figure4:** Cover it up with Hook & Loop then insert the bolt into the hole at the joint.

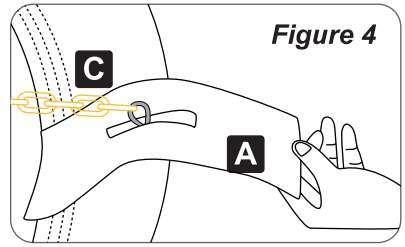

**Figure5:** Put the washer and nut onto the bolt, and tighten with a wrench. Please make sure all the screws are tightened for your safety.

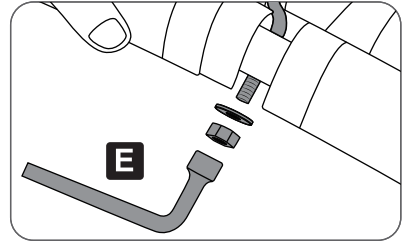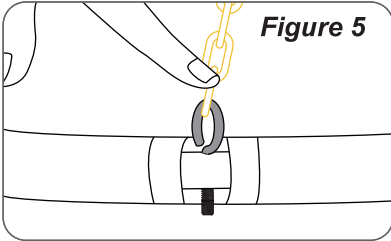



**Figure6:** Connect each two adjacent chains with carabiner.

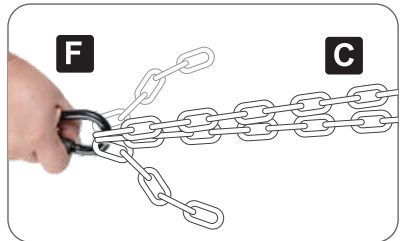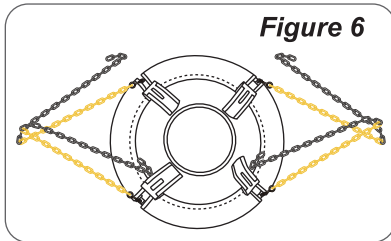



## INSTALLATION INSTRUCTION

### Tree Strap:

1. Move the cushion on the strap to the loop end.
2. Lay the strap around a tree branch. Make sure the cushion is placed on the branch. (wrap the tree twice to make it shorter if needed.)


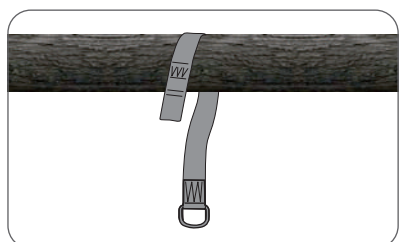
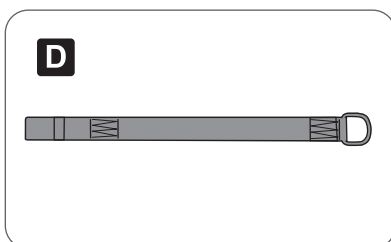


3. Pull the D-ring end through the loop end. Tighten the straps by pulling down firmly.

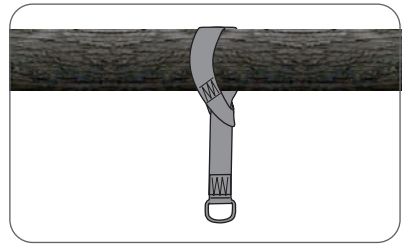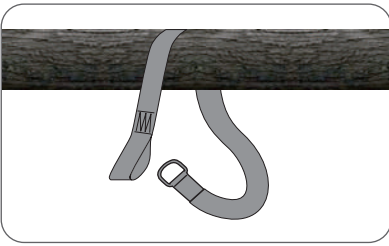

## HANGING THE SWING

1. Attach the swing to the D ring with carabiners. (Attention: make sure the screw lock of carabiner is 100% tightened.)

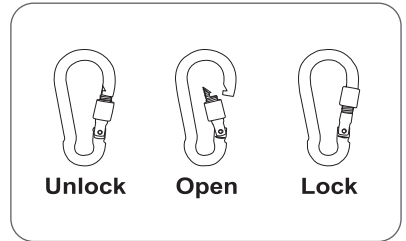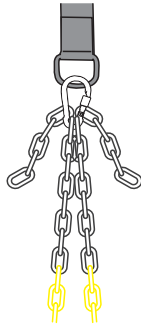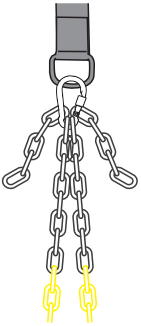

2. Adjust the chain to a desired length and keep balance.

