

By Seiko Epson Corporation



Epson iLabel

Create, store, and print labels from your Android, iPhone, iPod touch or iPad device.





Epson iLabel

Epson iLabel makes it easy to create, store, and print labels from your Android phone or tablet, iPhone, iPod touch or iPad. Use your smart device's functionality, including voice transcription, contacts and image gallery, to add a new dimension to your labeling experience. Users can easily share label makers with the Epson iLabel app.

Download **Free** - Epson iLabel from



Epson iLabel works with the LW-PX800

Supported OS:

iOS 7.0 or later

Android 4.0 and up

 
LabelWorks PX Technical Support

715.247.4440 or 800.622.6312 (8-4PM CT)


www.ksun.com/support | info@ksun.com

Installing iLabel - How to Connect Direct to Android or iPhone or iPad device.


1. Insert tape in Printer
Turn Printer On.

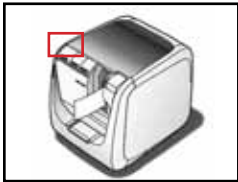

 
2. Press the button.

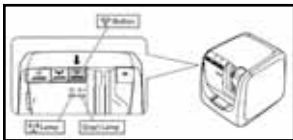

 3. On phone check Wi-Fi settings and choose DIRECT-LW-PX800XXXXXX (Illustrated here is for iPhone)

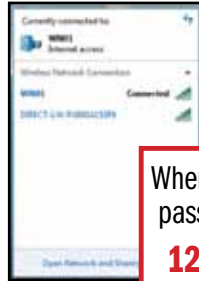

When asked for password use:
12345678

 

4. Direct light turns solid.

5. Open iLabel app on phone. Tap and configure settings. Tap Close and Choose New Label to begin.



Printer	Select a printer from the available printers
Margins	Sets the width of the label margins. Selecting Minimum cuts the label close to the content. Selecting Standard leaves more white space between the content and the label edge.
Tape Cut	Sets whether to cut the tape automatically after printing. Not available on all printers.
Half Cut	Sets whether to cut half the height of the tape automatically after printing. Not available on all printers.
Print Speed	Sets the printer's output speed. Not available on all printers.
Copies	Sets the number of copies to print
Density	Sets the density of the printed label
Tape Feed	Ejects tape without printing on it
Tape Feed and Cut	Ejects tape without printing on it and cuts the tape automatically