

BREAKAWAY AND FLEX GOALS

1. Remove cover plate (if installed) by removing the two phillips head screws on either side of the goal. Remove the net and hardware package.

Warning!

DO NOT REMOVE, LOOSEN OR OTHERWISE TAMPER WITH ANY OTHER SCREWS OR BOLTS AS ASSEMBLY IS UNDER PRESSURE AND ANY DISASSEMBLY MAY CAUSE INJURY AND INVALIDATE ALL WARRANTIES!

2. On glass backboards with two threaded studs in the front, place lower goal holes onto studs and loosely assemble with flat washers and flange hex nuts provided. Insert bolts with flat washers thru the top holes of goal and backboard, install flat washers and flange hex nuts. Tighten all hardware with the rim level and at 10'.

Note:

Tightening of the top bolts requires an open-ended wrench either 1/2" or 9/16" depending on model number. Place wrench through cutouts in the welded brace to hold hex bolt.

3. Models with grease zerks should be greased before each season or more often if they get stiff to keep warranty in force.

Caution!

The Goal breakaway pressure is factory preset. The two vertical springs can be tightened if minor looseness or rattling occurs. One or two turns of the hex nut below the spring is sufficient. DO NOT OVERTIGHTEN! as it will damage the mechanism and not allow the rim to break away at the prescribed pressure. This could cause glass breakage, goal damage and/or player injury.