

ADVANCED SETTINGS: PRO V2 / PRO-R V2

To access the advanced settings:

Step 1: Quick press the mode (M) button twice.

Step 2: Use the “ - ” button to go down and “ + ” to go up.

Step 3: Navigate down to advanced settings and press “ M ” to enter.

Step 4: Default passcode: “ 2112 ”. Use “ + ” and “ - ” to enter numbers and “ M ” to lock it in.

DESCRIPTION	PRO V2	PRO-R V2
Speed Limit: Power Output Range: 100%	Do not Change	Do not Change
Cruise Control	AUTO / MANUAL / OFF	AUTO / MANUAL / OFF
ABS	ON / OFF	ON / OFF
Speed Magnets Range: 1 - 30	Do not Change Default: 15	Do not Change Default: 15
Assist Parameter: Acceleration Control Assist Range: Assist 1 - 5 Acceleration Range: 1 - 5 1 = Weakest, 5 = Strongest	Assist 4 - 5: Do not Change Default Acceleration: 3	Assist 4 - 5: Do not Change Default Acceleration: 3
Export	Do not Change	Do not Change
Wheel Size	Do not Change Default Size: 10 inch	Do not Change Default Size: 10 inch
Power System	Do not Change Default: 52V	Do not Change Default: 60V
Zero Start Turns ON or OFF Kick Start	YES (Y) : Turns off kick start NO (N): Turns on kick start	YES (Y) : Turns off kick start NO (N): Turns on kick start
Temperature Protection	Do not Change Default: 120 Degree Celcius	Do not Change Default: 120 Degree Celcius