

ACWO®



EARBUDS

DwOTS SENSE

Manual



Appearance:

- 1 Left OWS Earbud
- 2 Right OWS Earbud
- 3 Charging Case
- 4 Left Earpiece Charging Socket
- 5 Right Earpiece Charging Socket
- 6 Type-C Charging Interface
- 7 Multi-Function Touch Area
- 8 LED Battery Indicator
- 9 Power Button

What You Will Find In The ACwO Box?

- Charging Case
- Pair of OWS Earbuds
- Warranty Card
- Scan Me Card
- ACwO X Sunil Chhetri Catalogue

Product Features:

- OWS Design - Hear Everything Better
- Quad Mic SONIC SHIELD™ ENC Technology
- 15mm BasS Boom X™ Titanium Drivers
- Up To 65 Hours Battery Life
- IPX5 Water & Sweat Resistant
- 3 EQ Modes (Normal / Cinematic / Rock)
- HYPER BOOST™ Charging
(10 Mins Charge = 120 Mins Playtime)
- Low Latency Up To 40ms
- LED Battery Indicator

Safety Guidelines:

To ensure a safe and enjoyable experience with your OWS Earbuds, please follow these important safety guidelines:

Charging & Battery Safety

Use only the provided charging cable or a compatible

- charger.

Avoid overcharging; disconnect once fully charged.

- Keep the charging case and earbuds away from water
- and moisture.

Do not expose the earbuds or charging case to extreme

- heat or direct sunlight.

Usage & Hearing Protection

Keep the volume at a moderate level to prevent hearing

- damage.

Avoid prolonged listening at high volumes to protect your

- ears.

Take regular breaks when using earbuds for extended

- periods.

Do not use earbuds while driving or in situations requiring

- full attention.

Handling & Maintenance

- Store earbuds in the charging case when not in use to prevent loss or damage.

- Clean earbuds regularly using a soft, dry fibre cloth to remove dust and debris.

- Do not attempt to disassemble or repair the earbuds yourself.
- Keep earbuds away from strong magnetic fields or electronic interference.

Water & Sweat Resistance

- Wipe off sweat or moisture before placing earbuds back in the case.
- Do not submerge the earbuds or expose them to excessive water.

Connectivity & Wireless Safety

- Keep earbuds within the recommended Bluetooth range for stable connectivity.
- Avoid using earbuds near medical devices, as wireless signals may interfere.
- If experiencing discomfort or irritation, stop using the earbuds immediately.

ACwO DwOTS Sense

Kindly Note:

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the ACwO DwOTS Sense Wireless Earbuds at least 70% before the first usage.

Charging:

- Charging Case:
Connect the type-c charging cable to the charging case to charge your ACwO DwOTS Sense Wireless Earbuds.
- Earbuds:
Place the earbuds in the charged Charging Case to charge the ACwO DwOTS Sense Wireless Earbuds.

Bluetooth Pairing Process:

- Take out the ACwO DwOTS Sense Earbuds from the Charging Case and place them in your ears.
- Go to the Bluetooth settings of your device and switch it on.
- Scan available devices.
- Search For " ACwO DwOTS Sense" from the list of available devices.
- Pair " ACwO DwOTS Sense" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS Sense will connect seamlessly to your device every time you open the charging case.

Kindly Note :

If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

Bluetooth Reset Process: ACwO DwOTS Sense

- In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
- Clear all Bluetooth data named "ACwO DwOTS Sense" from your device and disable Bluetooth.
- Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

How To Use Your ACwO DwOTS Sense?

DwOTS Sense Controls: The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the earbud's handle.

Smart Functions ACwO DwOTS Sense


- **Play/Pause:**
Single Tap on the Multi-Function Touch Area of either earbud.
- **Switch Between Normal/Cinematic/Rock Mode:**
Quickly tap four times on the Multi-Function Touch Area of either earbud.

- Next Track
Triple Tap quickly on the Multi-Function Touch Area of the right earbud.
- Repeat Track:
Triple Tap quickly on the Multi-Function Touch Area of the left earbud.
- Previous Track:
Quickly Triple Tap twice on the Multi-Function Touch Area of the left earbud.
- Activate Voice Assistant:
Long press for 3 seconds on the Multi-Function Touch Area of either earbud.
- To Increase Volume :
Double Tap quickly on the Multi-Function Area of the Right Earbud.
- To Decrease Volume :
Double Tap quickly on the Multi-Function Area of the Left Earbud.
- To Answer Calls:
Single tap on the Multi-Function Touch Area of either earbud.

- To Hang Up Calls:
Double tap on the Multi-Function Touch Area of either earbud.
- To Decline Calls:
Long press for 3 seconds on the Multi-Function Touch Area of either earbud.

Powering On/Off Your OWS Earbuds

- To Power Off:
Simply place the earbuds back into the charging case, and they will automatically turn off.
- To Power On:
Take the earbuds out of the charging case, and they will automatically power on and be ready to use.
- One need not activate Environmental Noise Cancellation as the built-in mic is already equipped with the same and activated by default to make your conversations smoother and clear without any disturbances no matter how noisy your environment is.

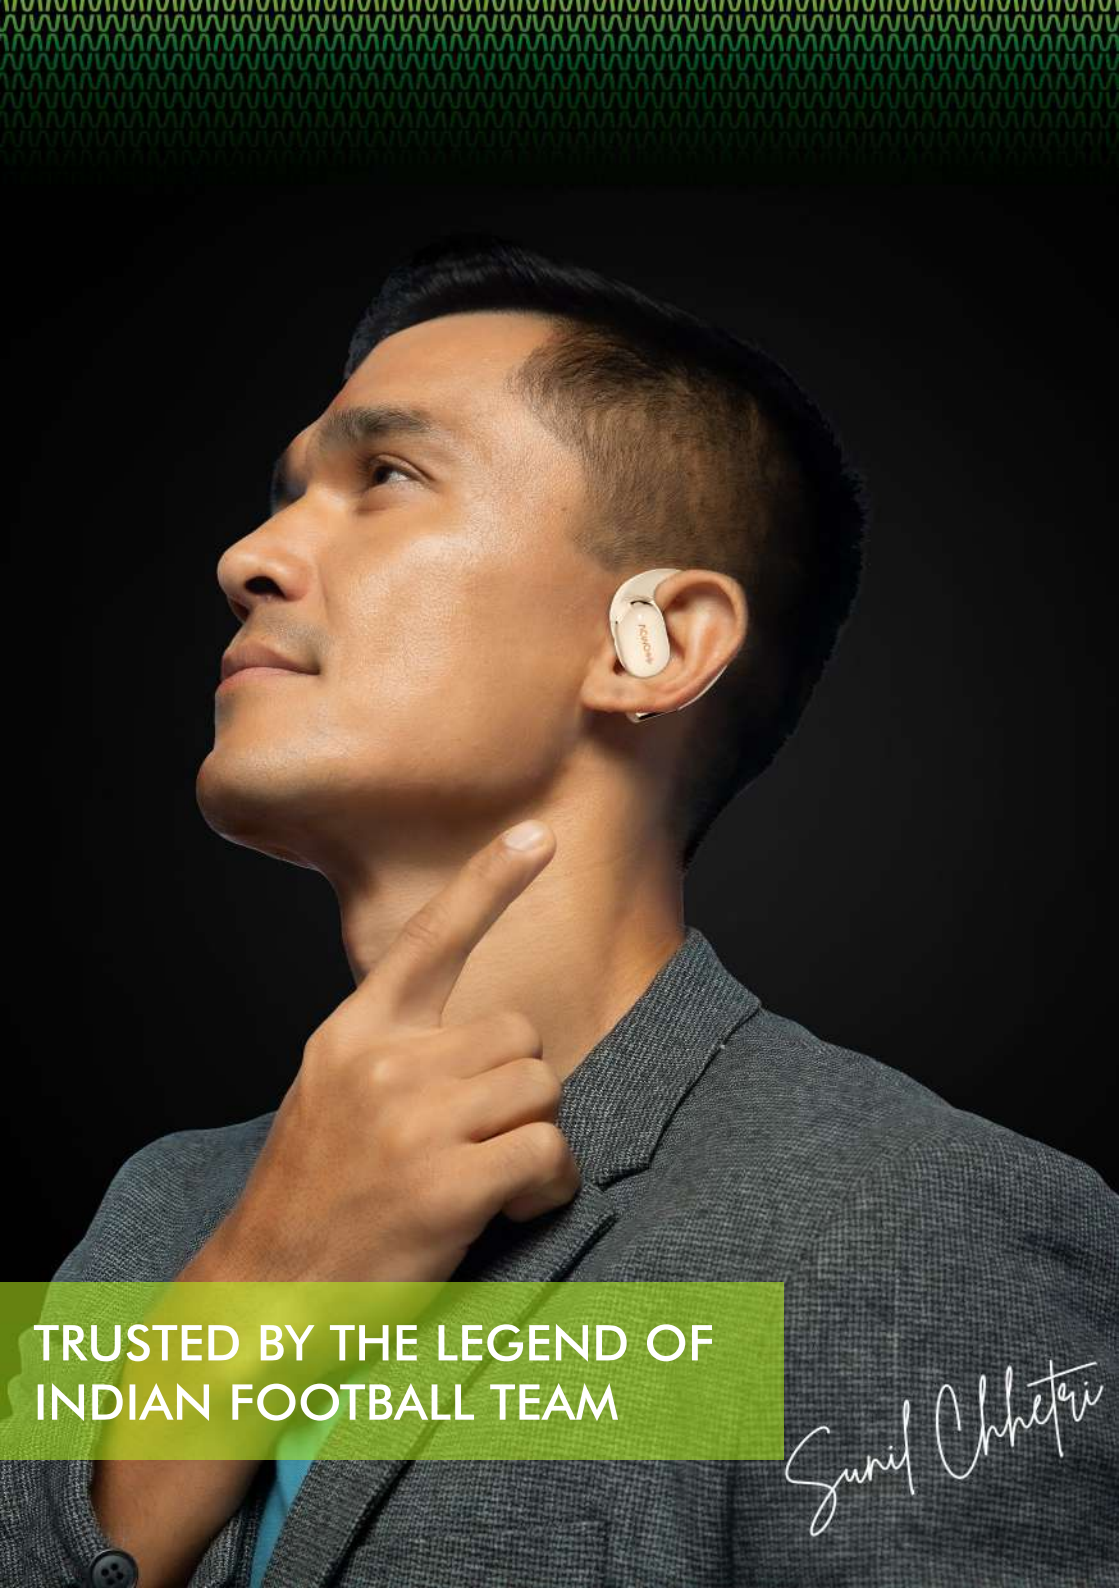

TRUSTED BY THE LEGEND OF
INDIAN FOOTBALL TEAM

Sunil Chhetri