


ACWO®



DwOTS Muze
earbuds

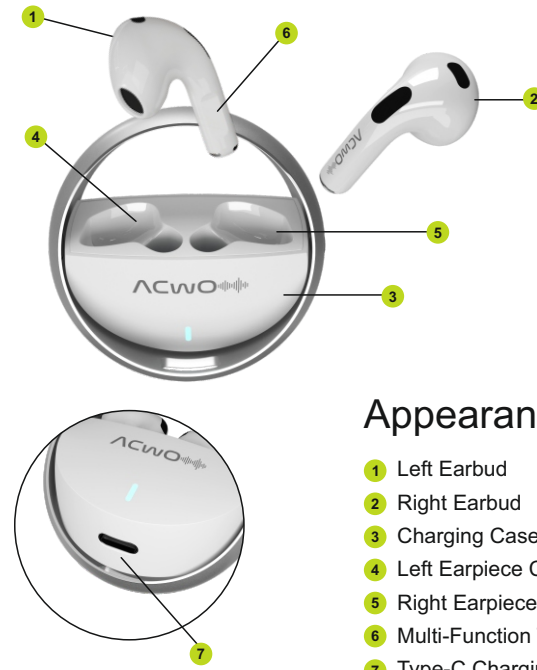

Appearance:

- 1 Left Earbud
- 2 Right Earbud
- 3 Charging Case
- 4 Left Earpiece Charging Socket
- 5 Right Earpiece Charging Socket
- 6 Multi-Function Touch Area
- 7 Type-C Charging Interface

What You Will Find In The ACwO Box?

- Charging Case
- Pair Of Earbuds
- Type-C Charging Cable
- Warranty Card
- Scan Me Card
- ACwO X Sunil Chhetri Catalogue

Kindly Note:

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the DwOTS Muze Wireless Earbuds at least 70% before the first usage.

Charging:

Charging Case:

Connect the type-c charger to the charging case to charge your DwOTS Muze..

Earbuds:

Place the earbuds in the charged Charging Case to charge the DwOTS Muze.

Note: Please take off the sticker peels attached below the earbuds before you charge them.

Bluetooth Pairing Process:

- 1 Take out the DwOTS Muze Earbuds from the Charging Case and place them in your ears.
- 2 Go to the Bluetooth settings of your device and switch it on.
- 3 Scan available devices.
- 4 Search For "ACwO DwOTS Muze" from the list of available devices.
- 5 Pair "ACwO DwOTS Muze" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS Muze will seamlessly connect to your device every time you open the charging case thereafter.

Kindly Note :

If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

Bluetooth Reset Process:

- 1 In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
- 2 Clear all Bluetooth data named "ACwO DwOTS Muze" from your device and disable Bluetooth.
- 3 Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

Product Features:

- HYPER BOOST™ (15Mins Charge - 120Mins Playtime)
- Sonic Shield™ Environmental Noise Cancellation
- 13mm Balanced Sound Bass Boom X™ Drivers
- NFS™ Gaming Ready 50ms Low Latency
- Voice Assistant ("Ok Google" & "Hey Siri")
- IPX5 Water & Sweat Resistant
- 30 Hours Of Music Playtime
- Type-C Charging Interface
- Bluetooth Version 5.3
- Instant Auto Connect

How To Use Your ACwO DwOTS Muze?

Touch Controls:

The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the earbud's handle.

Safety Guidelines:

- Please refrain from dismantling the product or attempting to remove its battery. Such actions can pose a fire hazard or cause electrical malfunctions. Seek the services of a qualified technician or the manufacturer for any necessary maintenance or repairs.

- When cleaning the earbuds, exercise caution by using a damp, soft cloth. Avoid using any oily or volatile liquids for cleaning purposes. Additionally, ensure that the earphones are kept away from extreme temperature conditions, both hot and cold.

- Please be aware that any damage to the earbuds that is not attributed to a manufacturing defect will render the product's warranty null and void.

- Do not wear them in situations where it is unsafe, such as when operating a vehicle, crossing streets, or engaging in activities requiring full situational awareness.

- To safeguard your hearing, ensure that the volume on your music player is set at an appropriate level when using the earphones. Prolonged exposure to high noise levels can gradually lead to hearing impairment.

- Do not wear the earbuds for a long period of time as it can lead to possible hearing loss or major hearable issues.

Smart Touch Function:

Play/Pause:

Single tap on the Multi-Function Touch Area of either earbud.

Repeat Track:

Triple tap on the Multi-Function Touch Area of the left earbud.

Next Track:

Triple tap on the Multi-Function Touch Area of the right earbud.

To Increase Volume:

Double tap on the Multi-Function Touch Area of the left earbud.

To Decrease Volume:

Double tap on the Multi-Function Touch Area of the right earbud.

To Answer Calls:

Single tap on the Multi-Function Touch Area of either earbud.

To Hang Up Calls:

Single tap on the Multi-Function Touch Area of either earbud.

To Decline Calls:

Tap and hold for 2 seconds on the Multi-Function Touch Area of either earbud.

Call Voice Assistant:

Tap and hold for 2 seconds on the Multi-Function Touch Area of either earbud.

Power Off Both Earbuds:

Tap and hold for 5 seconds on the Multi-Function Touch Area of either earbud.

Power On Right Earbud:

Tap and hold for 5 seconds on the Multi-Function Touch Area of the right earbud.

Power On Left Earbud:

Tap and hold for 5 seconds on the Multi-Function Touch Area of the left earbud.



TRUSTED BY THE CAPTAIN OF
INDIAN FOOTBALL TEAM

Sunil Chhetri