



Instructions for interior downlight

Our interior downlight is a direct replacement for the existing lens.

Please note that if you have map-reading interior light, this item is not compatible.

It is very simple to connect.

1. The earth cable will directly connect to the body or an existing earth cable.
2. You require to use approx. 2.5 metres of any colour cable, as thin as possible, as there is very little power going through.
3. You need to connect the cable to the live wire on our downlighting. The wire will need to pass through the roof lining, go through the gap on the A-pillar by the windscreen, down the dashboard, through the dashboard and over the cupholder, down to the fuse box. This is the most direct route.

4. In the fuse box, we recommend to connect the cable to the headlamp switch, here is a sample of the fuse box card on your vehicle, it may differ slightly but it will be similar to this diagram.



5. You can use either a split-fuse or manually connect it to the fuse box.
6. If you connect it to the headlamp switch it means the light will come on when the headlamps are on.