


Brodware

Typical Tapware Installation Instructions

(Excluding SQ73, SQ LUX, Halo, Minnum, Nanobar and Yokoto Ranges)

- 1) Important - Flush water lines
- 2) Measure basin tap hole centres and cut 1" piece to length
- 3) Install centre outlet with fibre washer on underside of basin
- 4) Remove handles and flanges from taps, and for the spindle assembly to the tap body (refer to ceramic disc cartridge instructions section for ceramic disc spindle installation).
- 5) Connect the "T" piece to the bodies - tighten nuts - push assembly into position connecting "T" piece to centre outlet.
- 6) Fit top locknut and washer (where supplied) so that it is flush with the top of the tap body. NOTE: not all models use top lock nuts. Screw down flanges.
- 7) Fit handles using allen key supplied.

NOTE: If benchtop thickness exceeds 25mm, the 1.8100.BS.0.00 extended basin body pack is required (sold separately).

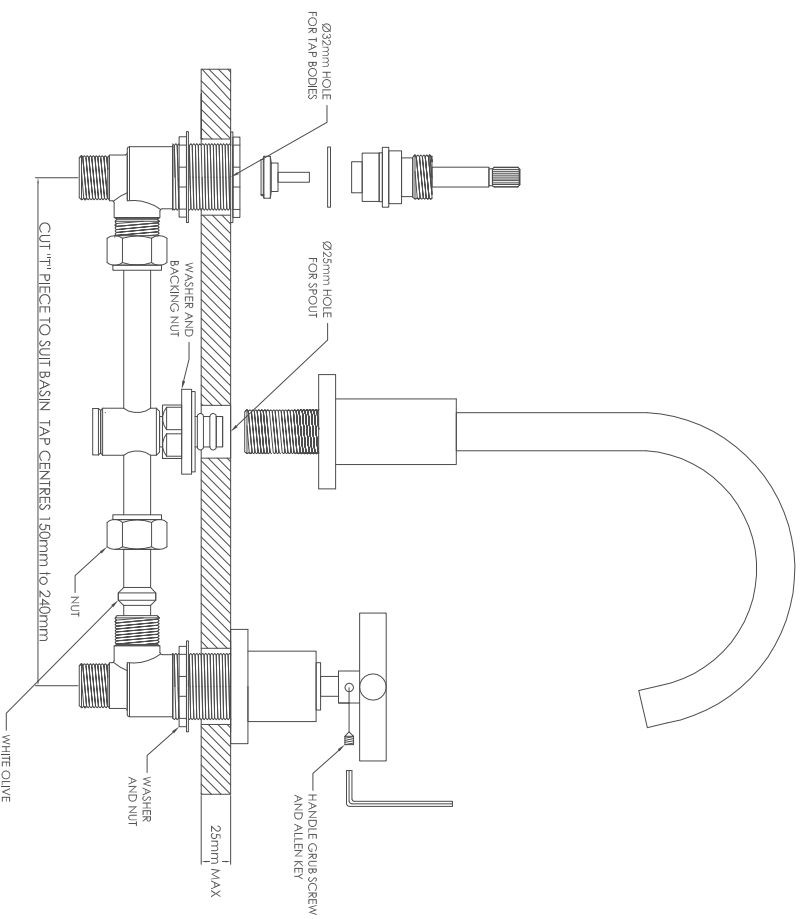

Ceramic Disc Cartridge Instructions Installation and handle alignment



- 1) Set back in wall for standard installation is 7-10mm from tile face, to face of the breach. Leave a sufficient opening in the tile to allow the cartridge to be serviceable.
- 2) IMPORTANT - Flush water lines on new installations to avoid damage to the valves.
- 3) If retrofitting into existing plumbing, the tap seat must be resealed with a sealing tool to ensure there is a uniform flat surface, square to the tap body.
- 4) Unscrew and separate cartridge lock nut from ceramic disc spindle. (FIG B.)
- 5) Install ceramic disc spindle with 15mm tube spanner until the spindle comes to a firm stop. Do not over tighten or use multigtips. Do not use the top handle to tighten the spindle into the tap body.
- 6) Lever handle tops with ceramic disc spindles rotate anticlockwise "ON" for hot and clockwise for cold (except in vertical mount applications). When fitting a ceramic disc spindle, it is important to first check the position of the handle on the spindle before fitting the locknut. Lever handles should be fitted so that they point away from each other, they should be parallel. This is done by trial fitting the handles before fitting the lock nuts.
- 7) To align the handle (see instructions below), trial fit the handle first, to check the handle position. If it is not sitting parallel, slightly tighten or slightly back off the spindle. Once the handle is in the correct position, fit washer over spindle and screw down the lock nut using a 25mm or 1" tube spanner. Do not use multigtips.
- 8) Fit handle. Fit handle using allen key supplied.

IMPORTANT All tapware and showers are to installed by a licensed plumber, and to Australian Standards. Fit tempering and pressure reduction valves where required. Flush lines before fitment to avoid damage to valve.


WATER TEMPERATURE is not to exceed 500Kpa as per AS3500.

PRESSURE DIFFERENCE


Hot - Cold water pressure difference is not to exceed 150kpa. This product cannot be used with unpressurised storage heaters. All plumbing must be tested before concealing /sheeting the wall, as per AS3500

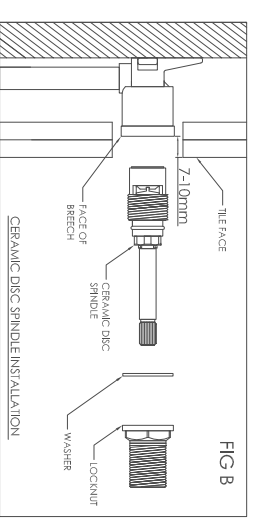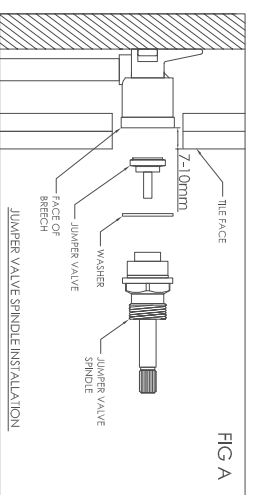


Ceramic Disc Handle Alignment Process

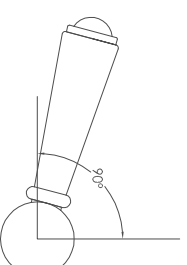

Step 1

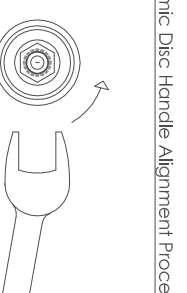

Step 2

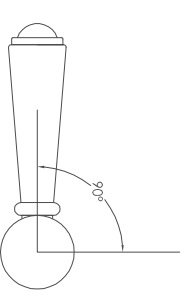

Step 3

- Step 1) Remove lock nut off spindle. Screw spindle into the tap body. Do not over tighten. Trial fit the handle first, to check the handle position. Step 2) If the handle is not sitting square, slightly tighten or slightly back off the spindle. You should not need to tighten or back off the spindle more than 1/16th of a rotation. Step 3) Once the handle is in the correct position, fit washer over spindle and screw down the lock nut using a 25mm or 1" tube spanner. Do not use multigtips