

DWA6314B2

Product Family Dishwashers 60 cm Commercial width Commercial height 85 cm Installation Free-standing

N° baskets 3, Flexi Motor Single phase EAN code 8017709278809



Programs / Functions















N. of programmes 5+5 quick programmes **ECO Quick** Yes Washing temperatures 38, 45, 50, 65, 70 °C **Delicate and Quick** Yes Soak **Daily Quick** Yes Rapid 27' Yes Strong and fast Yes **ECO** Intensive 65° Yes Yes **Normal ECO** Ultraclean Yes Yes

Options







Delay timer option 1/2 load FlexiZone option

3-6-9-12 hours

Yes

Options for tabs FlexiTabs

Quick Time option

Yes

Yes

Baskets



With 4 foldable racks Lower Basket **Basket colour** Grey

Basket components Lower basket with anti- Yes Grey colour

drip inserts

Handle In plastic with stainless Largest loadable dish in 30,0 cm

steel insert on upper and lower basket

lower basket With central fixed racks Colour Inner Blue **Upper Basket**

Components



Height adjustment of

On three levels

Cutlery basket

13 place settings sliding

the upper basket

Largest loadable dish in 19,0 cm upper basket

Technical Features

ORBITAL SYSTEM





Width (mm) 598 mm

Depth (mm) 600 mm

Product Height (mm) 848 mm

Controls Electronic

Display Delayed start

Programme graphics Symbols
On/off indicator Yes
Rinse aid indicator Light
Progress indicator Yes

End of cycle indicator Led on display, with acoustic signal

Washing system Orbital
Third spray arm Single

Flood protection system Total Acquastop

Water supply Single; cold/hot water max.

60°C - energysave with hot

water up to 35%

Stainless steel

Stainless steel

Max water hardness 100°fH;58°dH

Drying system Natural condenser drying

Drying system
Child safety system

(door lock)
Tub material

Filter
Concealed heating

element

Hinges Self balancing with fixed

hinges

1168

Yes

Adjustable feet Just for levelling

Back cover Yes, with covered counterweight

Depth of dishwasher with open door (mm)

Removable top

Yes, with optional KIT

Electrical Connection

Plug (I) Australia
Connected power 1800 W
Current 10 A
Voltage 220-240 V

Frequency (Hz)
Type of connection
Power supply cable
length

50 Hz Single-phase 140 cm





Not included accessories

KITPLV2



Kit extension for dishwasher and washing machine: lenght mt. 2

KITGH



Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



Symbols glossary (TT)



Anti-drip: Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying.



Child lock: some models are fitted with a device to lock the programme/cycle so it cannot be accidentally changed.



Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.



Flexitabs: Flexitabs adjusts the wash cycle to give the best possible results regardless of the type of detergent used.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



Daily Quick: The daily program is suitable for quick daily washing of dishes.



Delicate Quick: Program Delicate Quick is suitable for quick washing of delicate dishes.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



Strong&Fast: This special programme takes less than 1 hour to eliminate the most stubborn dirt and dried on residues.



The symbols show the number of plate settings of the dishwasher.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.