



MIMOSA CAROUSEL CRUISER STROLLER User Manual




Singapore Importer/Distributor:
Kim Hin Innovation Labs Private Ltd
601 Sims Drive, Pan-I Complex,
Singapore 387382
Email: kil.cs@khi.global

Hong Kong Importer/Distributor:
Trade Solutions Ltd
Unit D, 13A/F, Gemstar Tower,
23 Man Lok Street, Hunghom,
Kowloon, Hong Kong
Email: sales@khi.global

Malaysia Importer/Distributor:
Global Product Solutions Sdn. Bhd.
200501023023 (705154-M)
Wisma Pang Cheng Yean, Lot 5205C,
Jalan Perindustrian Balakong Jaya 1/3,
Taman Perindustrian Balakong Jaya,
43300 Seri Kembangan,
Selangor Darul Ehsan, Malaysia
Email: sales.support@khi.global

MMS17084,85,86,87

<https://mimosa-online.com>

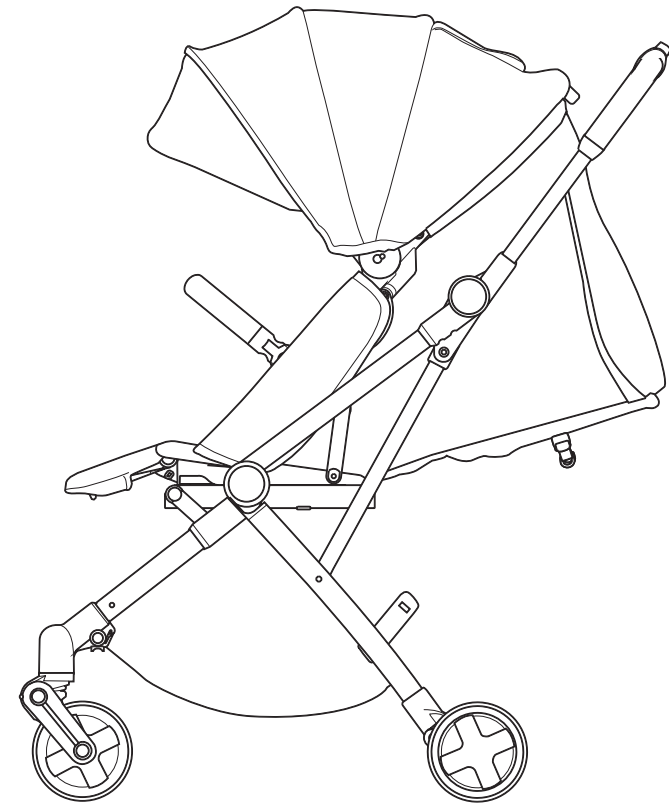

This stroller is suitable for children from birth to 22kg/48 months (whichever is earlier). The maximum load is 22kg. The stroller is approved to European safety standards EN1888-2:2018

Important – Please read the instruction before assembly.

1. SAFETY INFORMATION	2
2. STROLLER PARTS AND COMPONENTS.....	3
3. USE INSTRUCTIONS.....	4
4. ROTATION OF THE SEAT.....	7
5. SEAT DISASSMBLY.....	8
6. FRONT ARMREST REMOVAL AND INSTALLATION.....	9
7. USE OF SAFETY BUCKLES.....	10
8. TROLLEY FOLDING METHOD.....	11
9. HOW TO USE THE REAT BRAKE.....	12
10. CLEANING AND MAINTENANCE.....	14

Please read this user manual carefully before using this product.
Important - Keep these instructions for future reference.


- Please read this manual carefully before use and keep it for future reference. Failure to follow this instruction may affect the safety of children.
- Please do not leave the child unattended
- Please buckle the seat belt when the child is in the stroller.
- When children are riding, the caregiver should not leave.
- When children ride, they must use seat belts.
- This product is suitable for children aged 0-36 months. Do not use it for children over 4 years old or weighing more than 22kg (48 lbs).
- Please make sure all locking mechanism is locked before using the stroller.
- Please make sure that all locking devices are locked before using the stroller. Placing any load on the handle will affect the stability of the vehicle.
- Do not use the front armrest as the handle of the stroller to lift the stroller or children, so as to prevent the front armrest from falling off and causing unnecessary injury.
- Do not leave the stroller on the slope.
- The maximum load-bearing capacity of the basket is 2kg(4.4 lbs).
- The braking device should be activated when the child is placed in the stroller or taken out of the stroller.
- Do not fold the stroller when the child is in the stroller.
- Do not disassemble the stroller or adjust any parts of the stroller while the child is in the stroller.
- Do not put plastic bags or bags beside the stroller to prevent children from suffocating.
- The use of accessories not provided by the manufacturer is prohibited.
- When the angle between the backrest and the seat cushion is adjusted to less than 150 degrees, it is not suitable for children under 6 months.

WARNING: Never leave child unattended.

WARNING: Avoid serious injury from falling or sliding out. Always use seat belt.


WARNING: Parcels or accessory items, or both, placed on the unit may cause the unit to become unstable.

2. STROLLER PARTS AND COMPONENTS

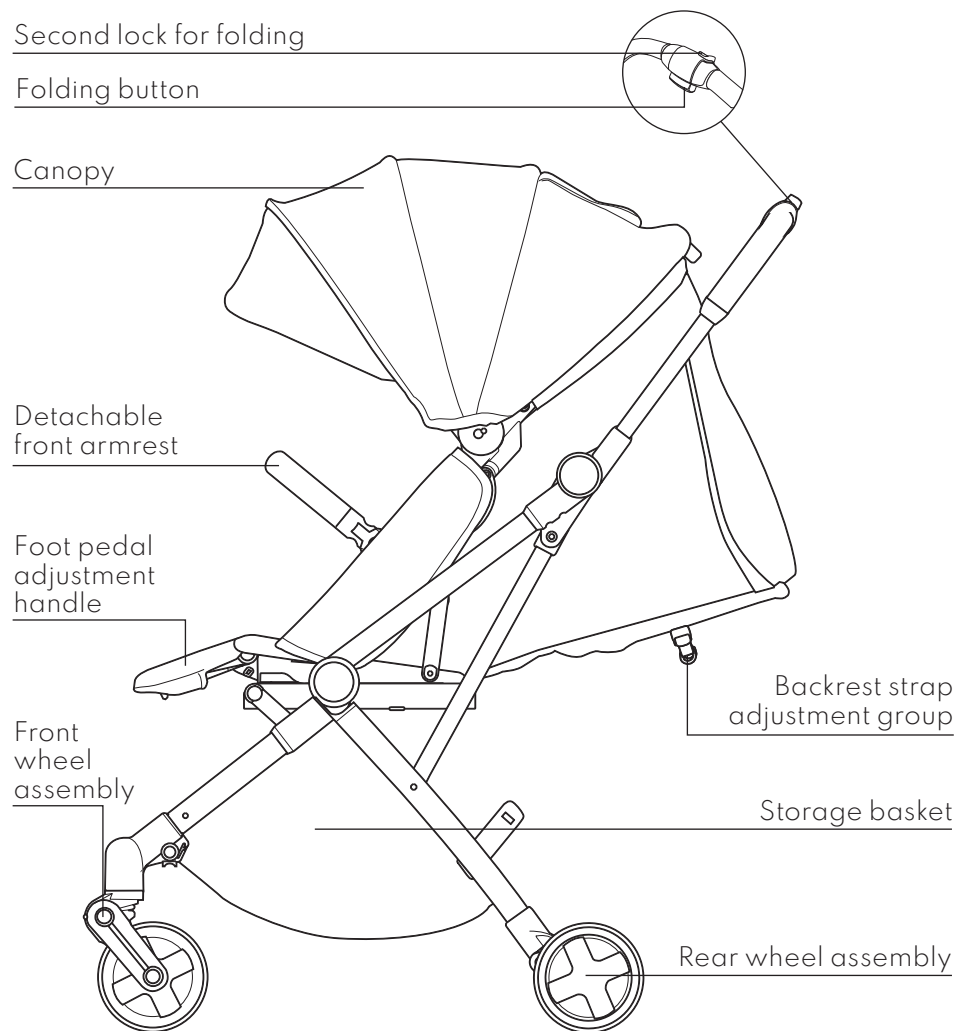


3. USE INSTRUCTIONS


	1. Open the retracting hook , use your thumb to push the retracting second lock② in the direction shown to the top, and then press the folding button ③.
	2. Then lift up and push the handle ④, and open the main frame ⑤ while lifting.
	3. After unfolding, turn the seat up in the direction of the arrow.

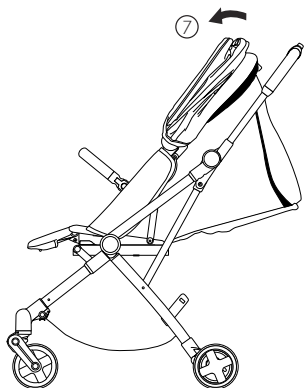


4. Unfold the seat canopy ⑦, and adjust the front armrest to the upright position.

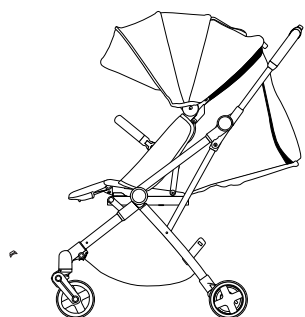


5. The stroller is unfolded.

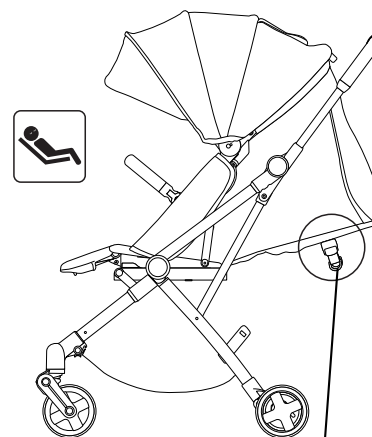

6. The adjusting buckle can be found at the back of the backrest.

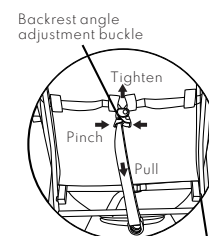


A. As shown in the figure, the backrest angle adjustment buckle clip (I). Hold the backrest adjusting buckle clip with one hand, pull the backrest adjusting ribbon up and down to adjust, then the angle of backrest can be raised or lowered.

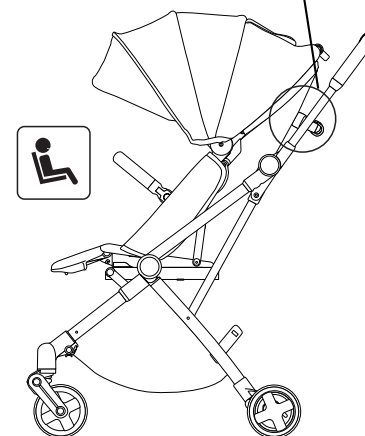


B. Tighten the backrest adjustment clasp upward to adjust the seat. Similarly, the reverse operation will return to the flat state.


4. ROTATION OF THE SEAT

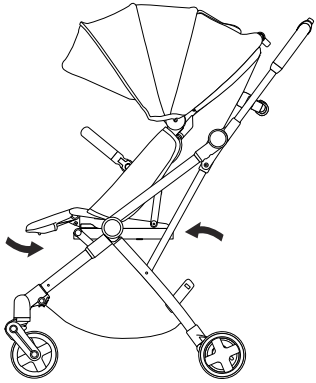

1. The seat does not need to be disassembled, it can be directly rotated and adjusted to the forward and reverse mode.

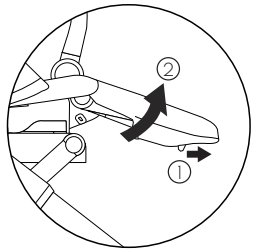


2. As shown in the figure, stretch the adjusting handle under the seat pedal outward①, and then lift the pedal upward to an upright state②, and it can rotate.

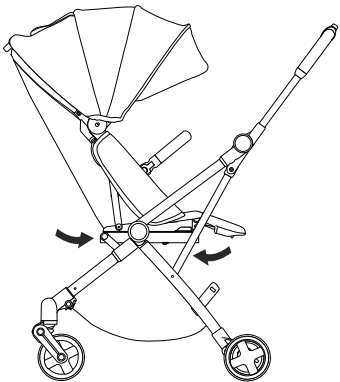


The reverse state after rotation.

Note: The rotation of the seat is only operated when the back rest is upright.

5. SEAT DISASSEMBLY

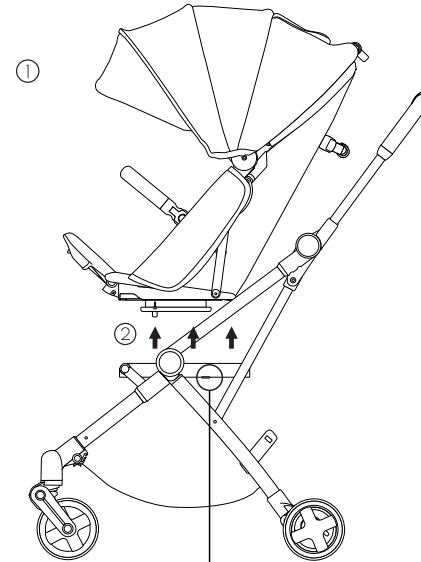


1. When disassembling the seat, first pinch the quick release handle①under the seat, and then directly lift the seat to separate the frame from the seat

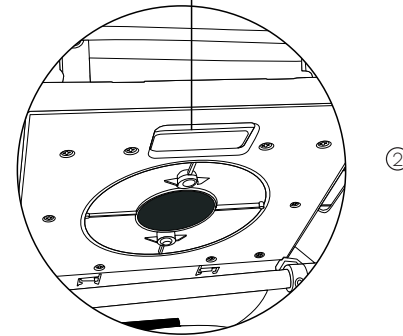


2. When installing, just snap the seat directly onto the frame.

6. FRONT ARMREST REMOVAL AND INSTALLATION

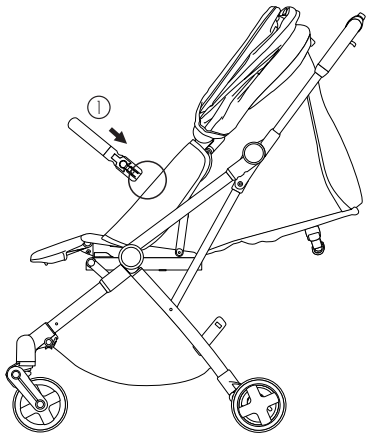


1. Front armrest disassembly: Press the front armrest quick release button ② on the outer sides of the front armrest to remove the front armrest as shown in status ①.

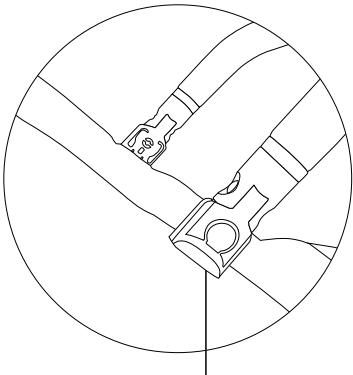

② Front armrest quick release button


2. Front armrest installation: Just align the front armrest with the holes on both sides of the seat and insert it until you hear a "click" sound to indicate that the installation is complete.

7. USE OF SAFETY BUCKLES

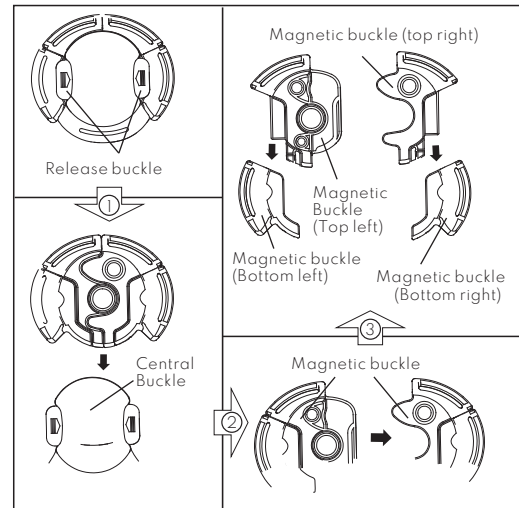

1. To release the harness, press the release buckle and remove the left and right components of the magnetic buckle.




To fasten the buckle, assemble the right and left buckle components respectively. Finally, piece the left buckle onto the right, followed by the central buckle.

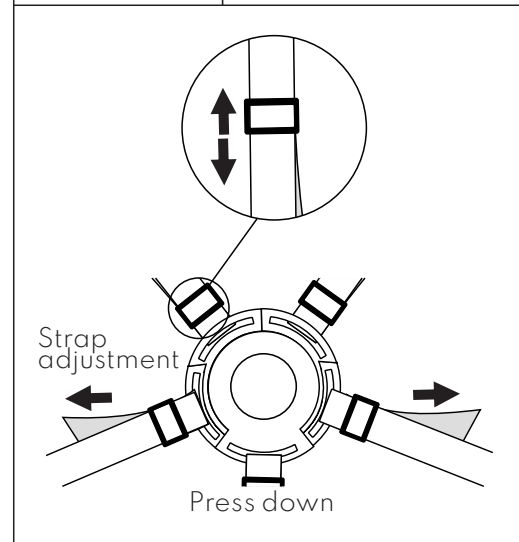



2. Seat belt adjustment:

Pull one end of the safety strap and slide the buckle up and down to adjust the length of the belt.


8. TROLLEY FOLDING METHOD

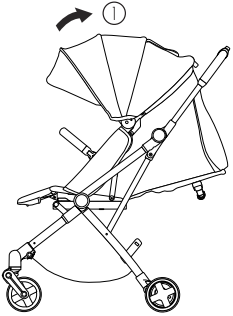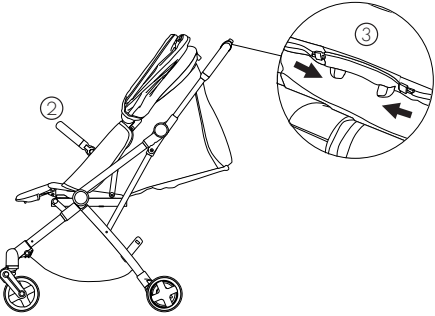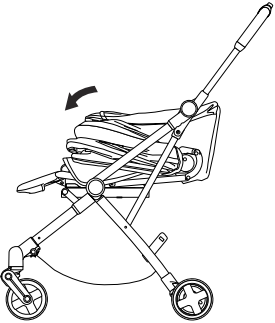	1. Fold the canopy ①.
	2. Fold the front armrest ②, and then pinch the seat folding button ③.
	3. Fold the seat forward.

9. HOW TO USE THE REAR BRAKE

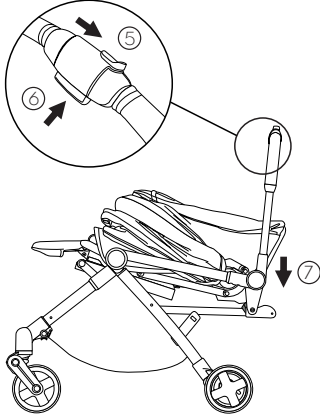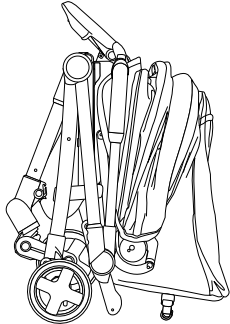	4. As shown in the figure, use your thumb to push the second lock ⑤ in the direction of the arrow to the top, then press the folding button ⑥, and then push the handle down ⑦.
	5. As shown in the picture, when the retracting hook is automatically buckled, it indicates that the stroller has been folded.

10. CLEANING AND MAINTENANCE

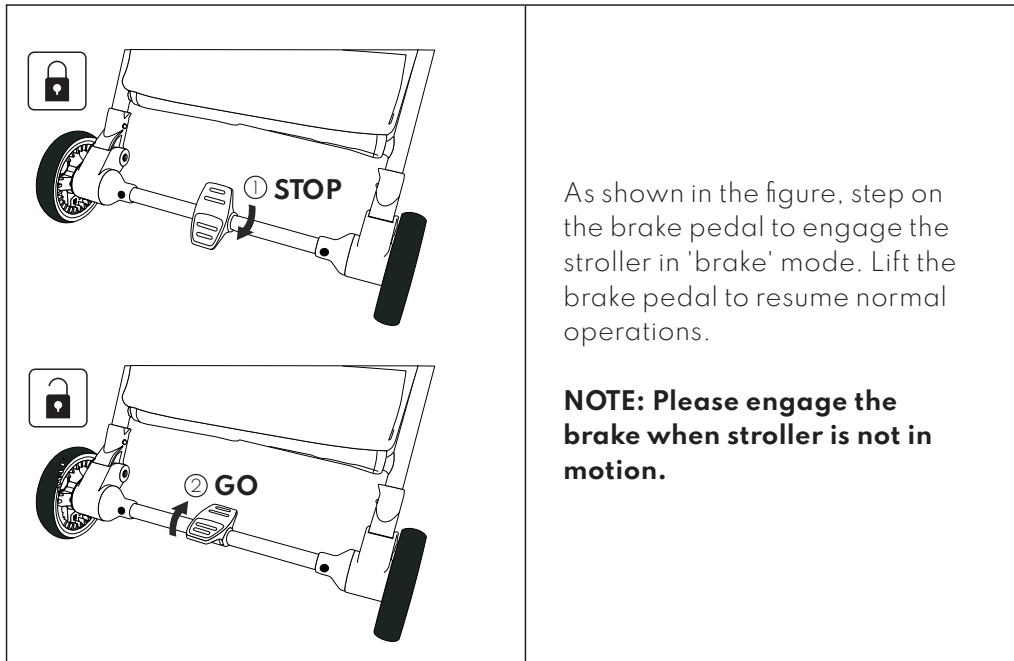

- Please use non-toxic, non-abrasive cleaners to clean your stroller. Mix water and a small amount of mild non-toxic detergent into a solution. Wipe it to the frame with a damp cloth. Never use abrasive cleaners or solutions.
- If you need to leave the stroller idle for a period of time, do not store it in a humid or high temperature environment, otherwise it will easily lead to rust and aging of the parts. Allow air to circulate around the seat, and do not stack any objects on the seat. So as not to affect the service life of the product or cause danger.
- Please use a rain cover when it rains. Dry the stroller before it can be folded and stored.
- Regularly check whether there are loose screws, damaged parts or broken sutures. If the part is damaged, please stop using it.
- When disassembling and assembling, please follow the instructions carefully to avoid unnecessary damage.