



MIMOSA TABLEMATE User Manual



Singapore

Kim Hin Innovation Labs Private Ltd.
601 Sims Drive, Pan-I Complex
Singapore 387382

care.il@kimhinintl.com


Hong Kong

Trade Solutions Ltd.
Unit D, 13A, Gemstar Tower,
No. 23 Man Lok Street, Hung Hom,
Kowloon, Hong Kong
Tel: (852) 2264 1282

Malaysia

Global Retail Network Sdn. Bhd. (921399-V)
Wisma Pang Cheng Yean,
Lot 5205C, Jalan Perindustrian Balakong Jaya 1/3,
Taman Perindustrian Balakong Jaya,
43300 Seri Kembangan,
Selangor Darul Ehsan, Malaysia
Tel: (03) 8940 6638
contactus@globalretail.com.my

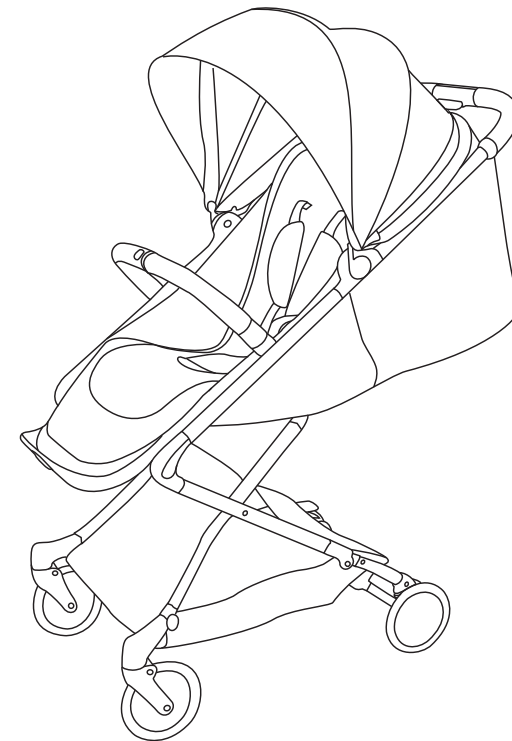MMS17034



This stroller is suitable from birth to 36 months and the maximum load is 15kg. This stroller has been designed to comply with EN1888-1:2018.

Important – Please read the instruction before assembly.

MIMOSA

1. SAFETY INFORMATION.....	1
2. STROLLER PARTS AND COMPONENTS.....	3
3. ASSEMBLING THE STROLLER.....	4
4. SECURING THE HARNESS.....	5
5. OPERATING THE BUMPER BAR.....	6
6. ADJUSTING THE BACKREST.....	7
7. ADJUSTING THE FOOTREST.....	7
8. ADJUSTING THE BRAKE.....	8
9. FOLDING THE STROLLER.....	9
10. REMOVING THE CANOPY.....	10
11. CLEANING AND MAINTENANCE.....	11

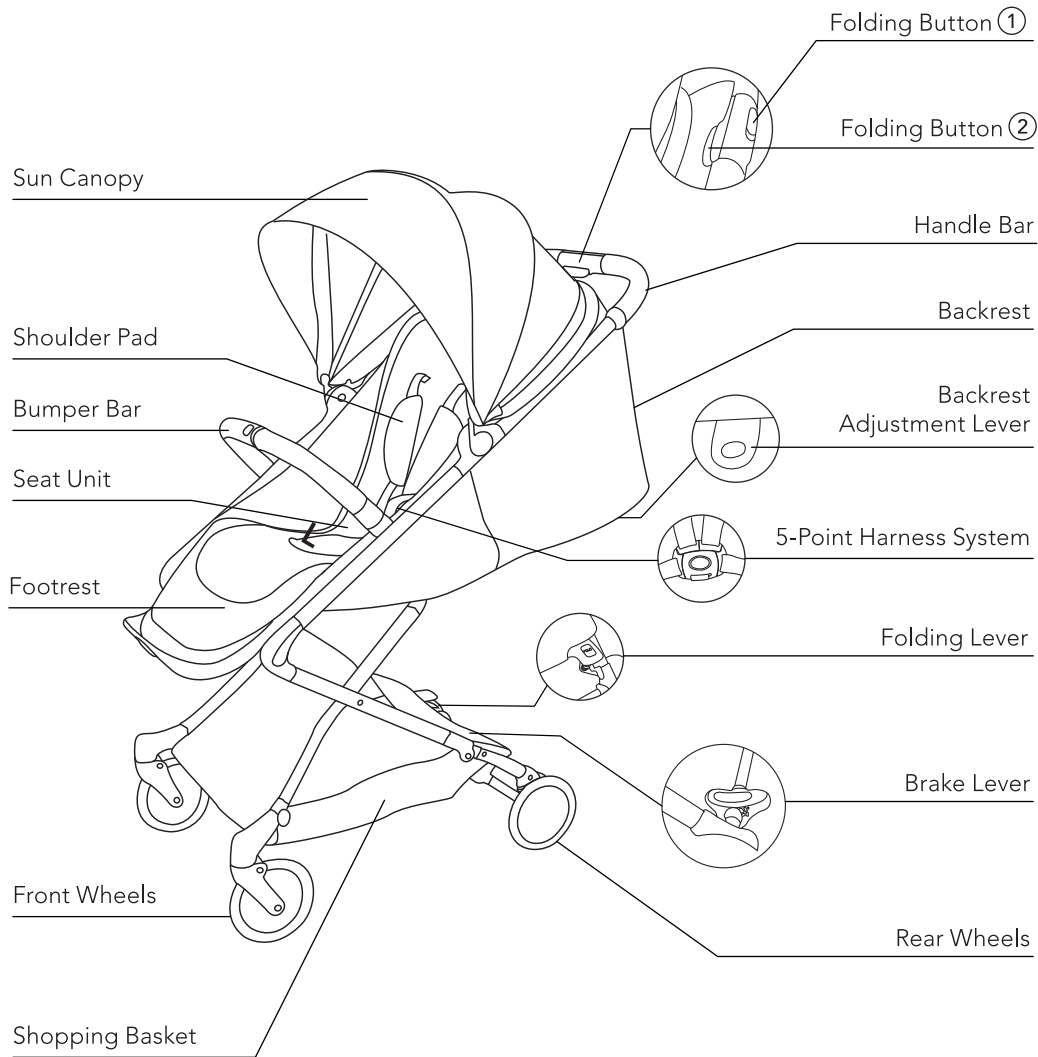
1. SAFETY INFORMATION

Please read this user manual carefully before using this product.
Important - Keep these instructions for future reference.

- **WARNING Never leave your child unattended.**
- **WARNING Ensure that all locking devices are engaged before use.**
- **WARNING To avoid injury, ensure that your child is kept away when folding and unfolding this product.**
- **WARNING Do not let your child play with this product.**
- **WARNING Always use the restraint system.**
- **WARNING This product is not suitable for running and skating.**
- **WARNING** This product suitable for children from 0 to 36 months. The max load of this product is 15kg. Never overload.
- **WARNING** This product is suitable for children from 0 to 36 months when the backrest angle is > 150°; This product is suitable for children from 7 to 36 months when the backrest angle is ≤150°.

- **WARNING** The maximum permissible loading for shopping basket is 2kg.
- **WARNING** Any load attached to the handle and/or on the back of the backrest and/or on the sides of this product will affect the stability of this product.
- **WARNING** Use this product for only one child at a time.
- **WARNING** Accessories which are not approved by the manufacturer/distributor shall not be used.
- **WARNING** Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.
- **WARNING** The brake system must be engaged when placing your child in this product or taking the child out of this product.
- **WARNING** Do not use if any part is broken, torn or missing.
- **WARNING** Avoid placing this product near naked heat sources such as electric bar fires, gas fires, etc., or where a child could gain access to any other kinds of hazards.
- **WARNING** Always use the crotch strap in combination with the waist belt.
- **WARNING** Always use the harness provided and ensure that the harness is correctly fitted.
- **WARNING** Do not allow child to stand on the seat unit.
- **WARNING** Do not pull this product by bike, motorbike and car, or any vehicle.

2. STROLLER PARTS AND COMPONENTS



3. ASSEMBLING THE STROLLER

	<p>1. Hold on to the handle bar, lift open the handle bar by following the direction of the arrow in the diagram. Continue to lift up the handle bar to unfold the stroller frame.</p>
	<p>2. Flip out to lock the rear wheels in position.</p>
	<p>3. Push down the handle bar until you hear a 'click' to make sure that upper part of the stroller frame is locked in place.</p>
	<p>4. To open the sun canopy, extend it forward and press down on the each edge of the canopy until you hear a 'click' to make sure it is locked in place.</p> <p>To close the sun canopy, retract it to the rear of stroller.</p>


4. SECURING THE HARNESS

	<p>1. Put buckle tongues ① and ② together. Repeat for buckle tongues ③ and ④. Ensure the buckle tongues are firmly placed together. Insert the joined ① and ② tongues into the left side of the buckle and the joined ③ and ④ tongues into the right side of the buckle.</p>
<p>Adjustment Guides</p>	<p>2. To adjust the shoulder belt length, move the adjustment guides up to shorten or down to lengthen.</p>
<p>Shoulder Belt Slot</p>	<p>3. The shoulder straps can be adjusted to 3 positions. To adjust the height of the shoulder strap, insert the shoulder strap into the most suitable shoulder belt slot. Make sure both shoulder straps are at the same height setting.</p>


5. OPERATING THE BUMPER BAR

<p>Release Button</p>	<p>1. Press the release button on the bumper bar to unlock it. Pull open the 2 sides of the bumper bar by following the direction of the arrows.</p>
	<p>2. To remove the bumper bar:</p> <ol style="list-style-type: none"> Unlock the bumper bar as per step 1 above. Rotate one side of the bumper bar all the way in towards the seat unit. Pull out the bumper bar from the stroller frame by following the direction of the arrow. Repeat for the other side of the bumper bar.
<p>click</p>	<p>3. To install the bumper bar:</p> <ol style="list-style-type: none"> Insert both sides of the bumper bar onto the stroller frame. Lock the 2 sides of the bumper bar together by inserting the side with the release button into the other side of bumper bar until you hear a 'click'.

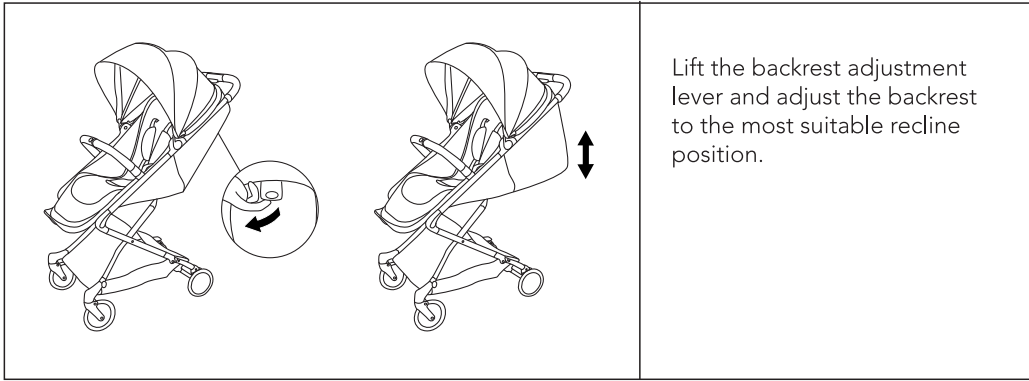
6. ADJUSTING THE BACKREST






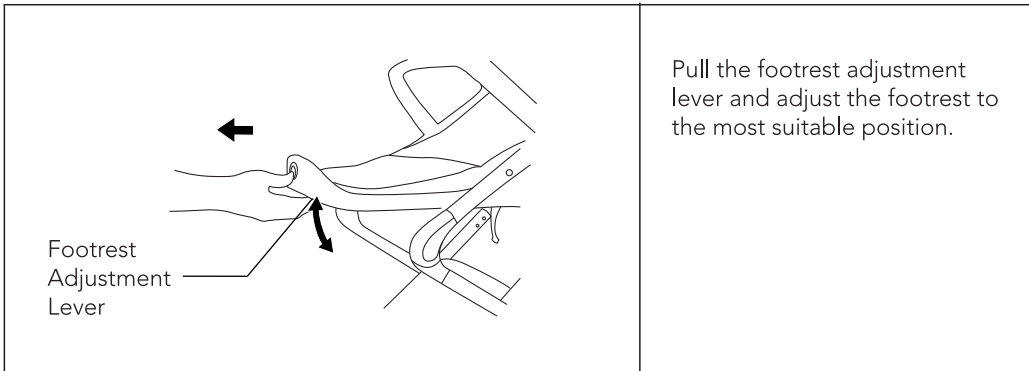
7. ADJUSTING THE FOOTREST





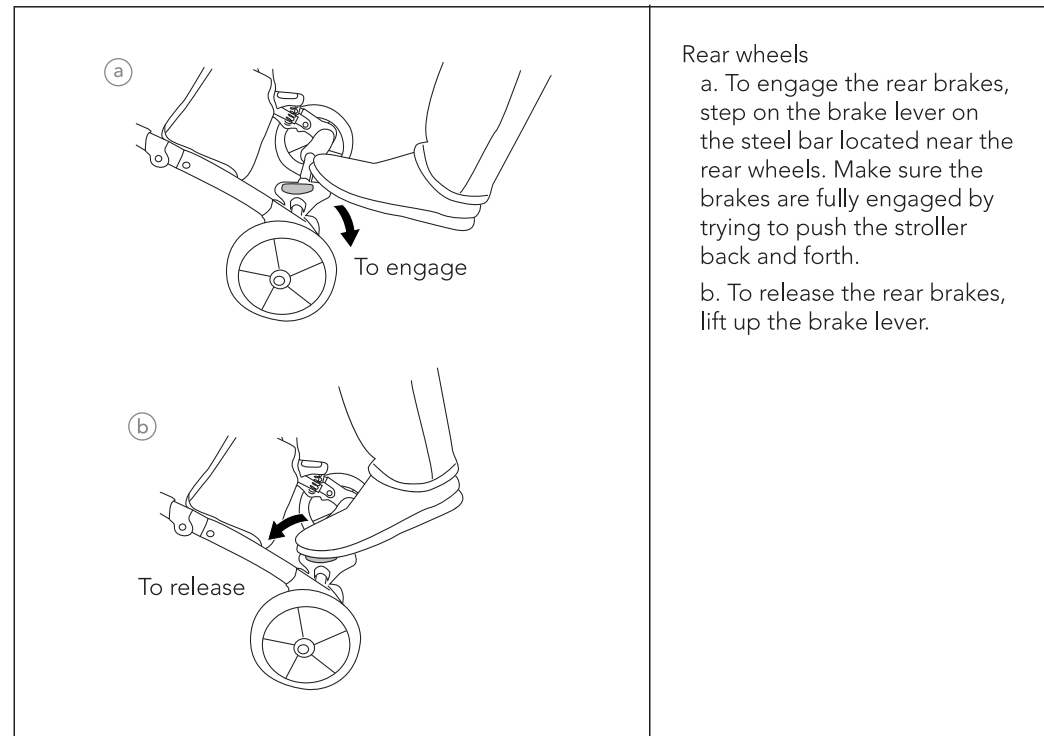
8. ADJUSTING THE BRAKE



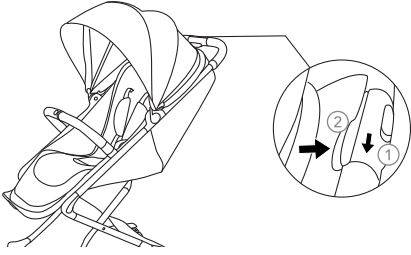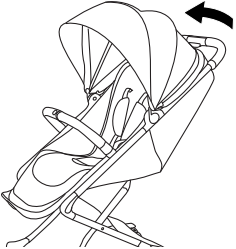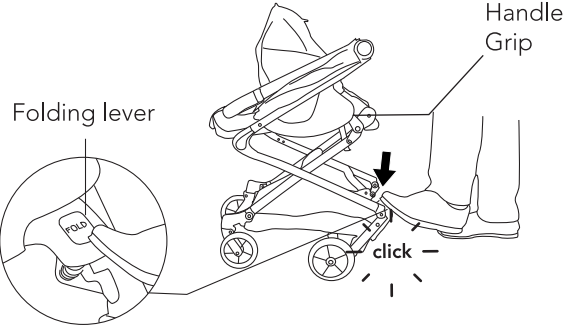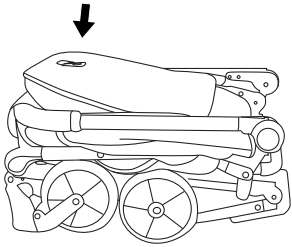9. FOLDING THE STROLLER

	<p>1. Slide the folding button ① on the handle bar to the direction indicated by the arrow, and press the folding button ② at the same time.</p>
	<p>2. Push the handle bar forward, following the direction of the arrow.</p>
	<p>3. Step down on the folding lever, and hold on to the handle grip until you hear a 'click' and the rear wheels will fold inward.</p>
	<p>4. Push the backrest all the way down to fold it completely. The stroller will auto-lock to stay in folded position.</p>

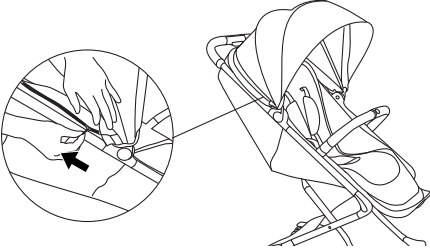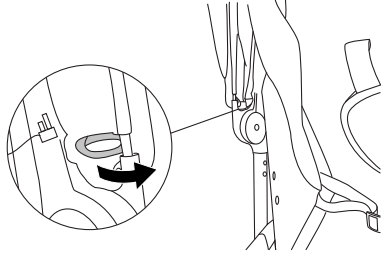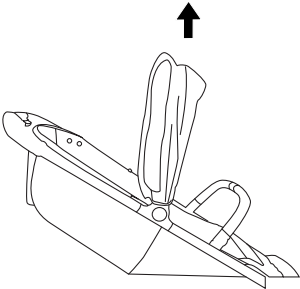10. REMOVING THE CANOPY

	<p>1. Unzip the sun canopy.</p>
	<p>2. Unhook the rubber bands on both side of the stroller frame.</p>
	<p>3. Release the sun canopy from stroller frame by following the direction of the arrow in the diagram.</p>

11. CLEANING AND MAINTENANCE

Maintenance Tips

These tips will help you take care of your Mimosa Tablemate and ensure a smooth ride.

- Periodically check the stroller for damaged or worn parts. Do not use this stroller if any part is damaged or worn.
- Periodically remove the swivel wheels and brush off any dirt or sand. Use a brush and water to clean dirt off the wheels. Do not submerge the wheel bearings in water.
- Use a soft brush to clean sand and dirt off the chassis. Take care to brush dirt away from rotating or sliding parts.
- Clean the chassis with a soft towel and lukewarm water and wipe off any remaining water with a dry cloth.
- Use a sponge, warm water and liquid soap to gently rub off any dirt on the handlebar foam. Wipe clean any soap residue left on the handle bar.
- Store your Mimosa Tablemate and its accessories in a dry place and leave them unfolded when wet to prevent mould.

Cleaning the fabrics



- Maximum temperature 30 °C / 85 °F (cold wash).
- Do not use bleach or aggressive detergents.
- Do not tumble dry.
- Do not iron.
- Do not dry clean.
- Some colour run will be expected. Please wash different colours separately to preserve colour vibrancy.