


# ULTRAMAX

## UXDC16 Underwater Digital Camera

### QUICK INSTALLATION GUIDE

**Step 1 Remove tape and packing materials**

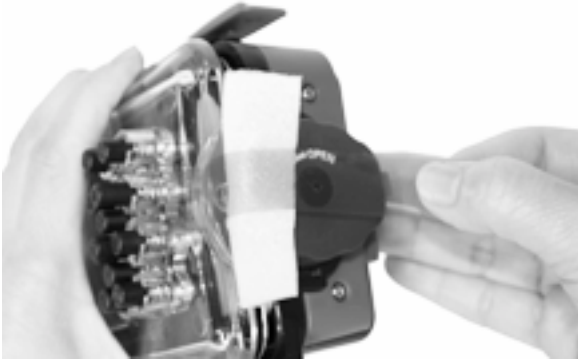

**Step 2 Install battery in Camera**  
(insert external memory card here if needed)



**Step 3 Open back of housing and gently install camera**  
make sure the camera is firmly seated



**Step 4 Gently close back of housing. DO NOT FORCE.**  
If housing does not close properly, check to ensure  
that camera is seated correctly



**Step 5 Turn swivel locking knob clockwise until safety locking lever is seated**  
( "Click " sound will be heard ).



**Step 6** Remove protective file from Caseback LCD Display



**Step 7** Remove protective films from Lensport before starting to take photos underwater



## HOUSING CARE AND MAINTENANCE

1. *Rinse housing thoroughly with fresh, clean water after each use. Be sure to rinse buttons well as salt residue will cause buttons stick.*
2. *Check both O-Rings on housing front and case back every time housing is opened or closed to ensure they are clean and free of debris,*
3. *Keep O-Rings lightly lubricated with Silicone Oil.*
4. *Do not try and remove inner O-ring housing front unless replacing it. Inner O-ring is glued in.*
5. *Store housing in open, unlocked position so O-ring does not flatten.*
6. *Store in a cool and dry place.*
7. *Remove batteries from camera when storing*

## INSTALLATION OF OPTIC CABLE CONNECTOR FOR EXTERNAL FLASHES

*Step 1 Peel-off backing film of the adhesive tape*



*Step 2 Gently press and fit the Connector base onto the camera flash window*



*Step 3 Plug the Optic Cable Jacks into the connector holes*



*Step 4 Connect the other end of the Optic Cable Jacks to your external flash*



### **NOTICE:-**

**IF ONLY SINGLE EXTERNAL FLASH IS USED, INSERT THE SOFT JACK INCLUDED TO COVER ONE HOLE OF THE OPTICAL CABLE CONNECTOR TO AVOID ACCIDENTAL TRIGGERING OF OTHER DIVER'S EXTERNAL FLASHES USING SLAVE SENSORS**

## **ULTRAMAX Product Warranty**

Ultramax provides warranty on products purchased from authorized dealers OR official ULTRAMAX website online store only. Copy of the purchase receipt must accompany all warranty returns. Warranty will not be supported for Purchases from unauthorized dealers.

### **STANDARD LIMITED WARRANTY**

ULTRAMAX warrants its products against defects in material and workmanship for ONE year from Date of Purchase. Pursuant to this Limited Warranty, ULTRAMAX will, at its option, repair or replace the defective products. Repair and/or replacement may include the use of refurbished parts or products. "Refurbished" means products or parts that have been factory restored to their original specifications and qualities.

Warranty coverage only applies to the original purchaser purchased from ULTRAMAX's authorized dealers or official ULTRAMAX website online store. **Proof of Purchase must be included with all warranty returns.**

To obtain warranty service, contact ULTRAMAX to obtain a Return Authorization number (RA No) AND Return Address details (FOR USA ONLY). Product and Proof of Purchase must be returned, freight prepaid, to ULTRAMAX with RA number clearly marked on the package. Product must be sent in original or comparable packaging that safely protects the contents. It is the owner's responsibility to back up and save all data, video files and photos or software. ULTRAMAX will not be responsible for loss or damage to data, video files, photos and / or software.

#### **Contact Details:**

**Ultramax Enterprises Inc. – Customer Service**

Email:- [Info@ultramaxincorp.com](mailto:Info@ultramaxincorp.com)

Toll Free:-1-877-22-ULTRA (5872)

#### **Authorized Returns Mailing Address (FOR CANADA ONLY):**

**Ultramax Enterprises Inc.-Customer Service**

P.O. Box 97062 Stn Main

Richmond, BC, Canada V6X 8H3