ULTRAMAX UXDV-3HD

FULL High Definition Digital Video Camera QUICK START GUIDE

IMPORTANT: The DV Camera MUST be set to <u>ALWAYS ON</u> MODE and it must be <u>POWER ON</u> before inserted to the Underwater DV Housing

Setting the DV Camera to ALWAYS-ON MODE:

Step 1



Flip out the LCD panel (or press the ON/OFF power button) to turn on the DV Camera

Step 3



Choose SETTING menu, press to enter

Step 5



Move Joystick to highlight "Off", press to activate

Step 2



Flip the LCD Panel clockwise until it faces outwards

Step 4



Highlight "Auto off", press to enter

Step 6



Move Joystick leftwards back to MODE menu. Press camera "Shutter" or "Video Recording" button to standby mode

Set the DV Camera to Diving Mode before Installing to Underwater Housing:

The Special Diving Mode program installed in the DV Camera corrects the Mirrored Image showed onto the Reflected Viewing Panel of the Underwater Housing which provides Normal Views convenience for the user. To activate the Diving Mode, please follow the steps mentioned below:-

Step 1




Flip out the LCD panel (or press the ON/OFF power button) to turn on the DV Camera

Step 3



Press the "Playback "Button until it shows preview ready screen or your latest took image

Step 5

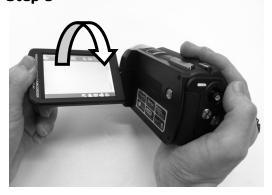

Step 2



Turn the Display clockwise until it faces outwards, then flip it back to its original position with the Display facing outwards

Step 4



KEEP ON pressing the "Playback" button and then press the "Shutter" button for approx. 3 seconds until the image & all icons are displayed in "mirrored" images


WARNING (Step 4):

When running the "Diving Mode" Setting, DO NOT press the "Playback" and "Shutter" Buttons AT THE SAME TIME as this will "FREEZE" all functions of the DV camera and you will need to take out and re-install the Lithium Battery Pack to reset the DV camera

To turn the "Diving Mode" OFF after using the DV Camera with the Underwater Housing, simply flip the Display Panel out and turn counter clockwise to its normal position, all images and icons will return to its normal view.

Mounting and Installing the DV Camera to Underwater Housing:

Step 1

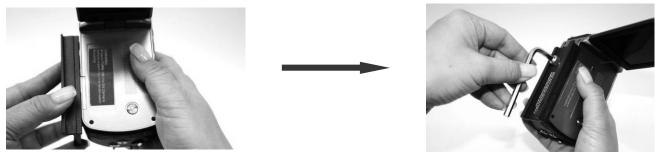

Position the "Support Tray" to the mounting hole of the DV Camera, tighten the screw using the hexagon key provided. Make sure the "Support Tray" is straightly aligned with the DV Camera

Step 2



Tie in the "Pulling Strap" to the strap hole for pull out convenience of the DV Camera

Step 3



Flip the LCD Panel back to the original position with the display facing outward

Step 4







MAKE SURE to TURN ON the DV Camera, slide the DV Camera into the underwater housing thru the "Guiding Slot" of the housing until it was fully inserted and securely seated

Step 5






Place the "Pulling Strap" buckle underneath the support tray

Step 6



Clamp and slide the Locking Latch to securely close and lock the housing caseback.

Step 7

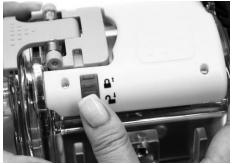

Slide and push the Safety Lock upwards to "Lock position to prevent accidental opening of the caseback underwater

Step 8



Flip the external Mirror View Panel outwards until it stops at approx 40 degree position

Step 9



Push the RED Locking Knob upwards to secure the Mirror View Panel in place and prevent it from flipping back underwater due to the resistance of the water current (Slightly flip the view panel backwards during push-to-lock process if you found it difficult to lock the Locking Knob)