

ProBreeze®

Instruction Manual



Model PB-04

Rechargeable Mini Dehumidifier

IMPORTANT INSTRUCTIONS
- RETAIN FOR FUTURE USE

Probreeze® | RECHARGEABLE MINI DEHUMIDIFIER MODEL PR-04

Thank you for choosing to purchase a product from ProBreeze. Please read the entire manual carefully prior to first use and keep in a safe place for future reference.

IMPORTANT SAFETY INSTRUCTIONS

 ↑ PLEASE READ AND SAVE THESE IMPORTANT SAFETY **INSTRUCTIONS.** When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

- Use this device only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children must be supervised not to play with the appliance.
- Cleaning and user maintenance shall not be made by children unless continuously supervised.
- Children of less than 3 years should be kept away unless continuously supervised.
- Avoid placing the device in areas where it can become a tripping hazard.
- Do not place any objects on top of the device when it is not in use.
- This device is intended for indoor household use and similar applications. Do not use outdoors.
- Do not wipe or wash the device with chemical solvents.


- The moisture absorption speed is not the same in different environments. Humidity and temperature will especially influence the speed of the indicator color changing.
- The surface will become warm when recharging. Keep away from flammable objects. Keep all objects at least 10cm (4 inches) away to increase air convection.
- It is normal to see steam on the indicator when the unit is releasing moisture.
- In order to avoid damage or leakage, do not soak in water.
- Do not use in conjunction with medical products.
- Keep away from fire, gas stoves and other flammable places.
- Do not operate the device if there are any signs of damage to the device or accessories supplied.
- Do not attempt to repair or adjust any electrical or mechanical elements in the device. Doing so may be unsafe and will void your warrantv.
- Do not place the device on the power cord while it is charging.

SPECIFICATION

- Voltage: AC100-240V 50/60Hz
- Power: 20W
- Hydroscopic Capacity: 150ml
- Net Weight: 0.40kg
- Size: W165 x D102 x H43 (mm)

FEATURES

- 1. Body
- 2. Moisture Absorbing holes
- 3. Indicator
- 4. Charging indicating light
- 5. Plug (back)

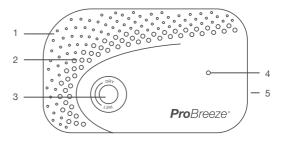

INSTRUCTIONS

- If the indicator is dark green before first
 use, plug in the device and recharge for
 12-15 hours. When the crystal indicator
 has changed from green to orange, the
 mini dehumidifier is ready for use.
- Once the indicator is orange (photo 1), place the dehumidifier into the location you wish to keep free from moisture (e.g. Wardrobe, Cupboard, Jewellery Box)
- When the dehumidifier has filled with moisture the crystal indicator will turn from orange to green. Remove the dehumidifier and connect the power cord to the back (photo 2/3). The charging light will turn on to indicate that the dehumidifier is in recharging mode and releasing moisture.
- 4. After 12-15 hours, the crystals will change back from green to orange indicating that the stored moisture has been removed and the dehumidifier is recharged.
 Note: Please keep on charging for a few extra hours if the indicator hasn't completely changed back after 15 hrs.
- 5. Remove the power adaptor to end recharging.
- 6. The mini dehumidifier is ready for use once again.







INTENDED USAGE

This product is designed for use in small spaces to protect items from damp and moisture. Examples include shoe cabinets, wardrobes, bookcases, cupboards, jewellery boxes, CD cabinets, pianos, food cabinets and more. For larger spaces, please use the ProBreeze 500ml (1100 Cubic Feet) or 1500ml (2200 Cubic Feet) dehumidifier.

RECYCLING & DISPOSAL

Waste electrical and electronic products (WEEE), batteries, accumulators and packaging should not be disposed of with general household waste. This is to prevent possible harm to the environment and human well-being, and to help conserve our natural resources. Most electrical products with a plug, battery, or cable can be recycled. Contact your local council, household waste disposal service, or the store where you purchased the product for information regarding the collection schemes in your area.

Waste Electrical and Electronic Equipment (WEEE)

This symbol on the product and/ or packaging indicates that Waste Electrical products (WEEE) under Directive 2012/19/EU which governs used electrical and electronic appliances, should not be disposed of with general household waste.



The Mobius Loop

This symbol indicates that the product or packaging is capable of being recycled.



Take-Back Scheme

Waste electrical products (WEEE) can be sent to One Retail Group for recycling and disposal when you purchase a new product from One Retail Group, on a like-for-like basis. For more information on how to recycle this product please visit www.probreeze.com

The end-user of electrical and electronic products (WEEE) is responsible for separating old batteries and lamp bulbs before they are handed over to a designated disposal and recycling service. Waste batteries can also be disposed of in collection bins, which can be found in most local supermarkets and household waste recycling centres.

www.probreeze.com

One Retail Group, Ryland House, 24a Ryland Road, Kentish Town, London, NW5 3EH, UK

EU Authorised Representative: Brandrep Limited, The Black Church, St Mary's Pl N, Dublin, D07 P4AX, Ireland

