


E-DASH

User Manual for E-Dash Scooter

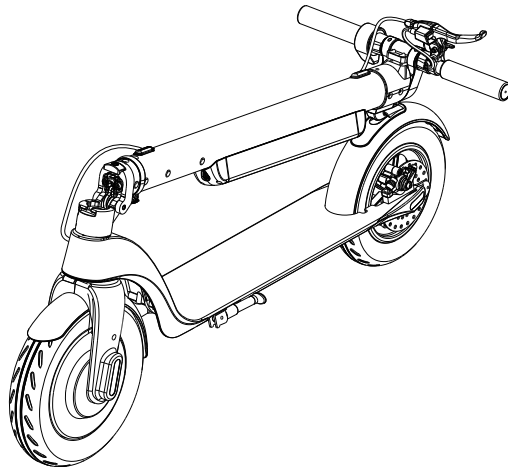

About the Manual

- Thank you for choosing our E-Dash Scooter!
- This manual illustrates the instructions and precautions for the E-Dash electric scooter. Please read them carefully before use. If the scooter is not used according to the manual, it may endanger you or others. Please follow the manual as E-Dash will not bear any responsibility for the personal injury or property loss caused by it. For safety, please read the manual carefully before use to ensure correct and safe riding.
- If you have any questions when using the scooter or cannot get the information you need from the manual, please contact us directly.
- **For optimal riding performance, please ensure the tyres are pumped to the required pressure (320-340kPa)**



Please always keep the manual for reference.

Contents


1. Safety Notes.....	3-5
2. Product Introduction	6-10
3. Riding the Scooter	11-12
4. Scooter Operating Settings.....	13-14
5. Battery Instruction	15-16
6. Specification	17
7. Maintenance.....	18
8. Troubleshooting	19
9. Package Contents	19
10. Product Quality Certificate	20
11. Product Warranty.....	20


Safety Notes

1.1 General Safety


For your safety, please learn to ride safely and obey the local rules when riding.


- Before riding the scooter, please check whether the fastening screws of the body are loose, and whether there are sharp edges on the exterior decorations and movable parts, whether the brake, vertical lever folding buckle, front and rear lights, and tyre pressure are normal. If there is any abnormality, please stop riding and contact your dealer for repair.
- Please do not do anything that may harm other people or their properties.
- Any conversion of the e-scooter is prohibited as it will change its performance or damage the structure, which may bring serious injury.
- Please do not submerge the electric scooter in water, which will not only damage the electric scooter but also cause a safety accident.
- It is forbidden to attach any load to the handlebar, which will affect the stability of the vehicle.
- Do not allow any user who has not read the manual to use the electric scooter in order to avoid accidents and ensure their safety.
- It is recommended to check the tyre pressure before driving to ensure optimal safety. Tyre pressure standard: 320kpa ~340kpa.
- Electric scooter age restrictions are for riders 17 and over.
- Electric scooter is only for personal use, not for acrobatics or extreme sports.
- Only accessories or spare parts certified by the manufacturer can be used for maintenance. Using spare parts not certified by the manufacturer may damage the vehicle or cause danger.

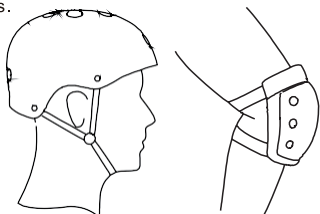


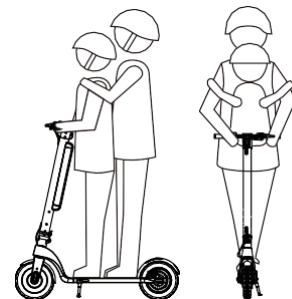
 **WARNING!**
You must wear a helmet and protective gear before riding.




 Do not ride on wet surfaces as this poses multiple hazards.

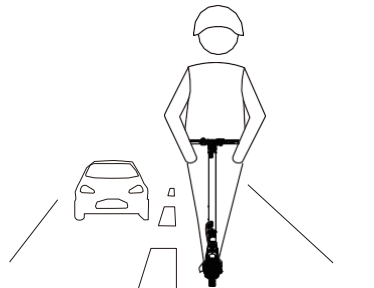


 E-scooters are not to be used on public roads or pavements, only on private land with the owner's consent.




 Do not have more than one person riding the scooter at the same time or do not carry any excess weighted goods.




 Do not ride intoxicated or under the influence.

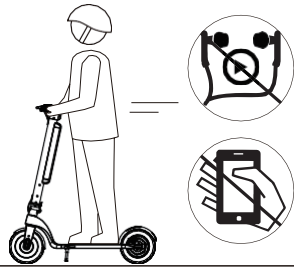


⚠ Do not call or listen to music when you ride the e-scooter.

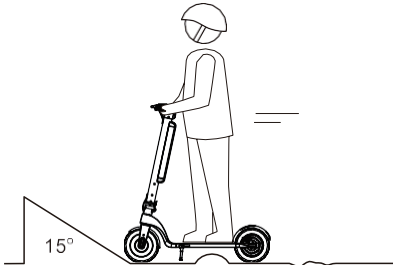

⚠ Be careful on surfaces with: sandstone, ponding, mud, wet, ice and snow, slope (angle >15°) and stairs.

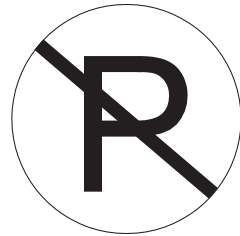


⚠ Do not park in the building foyer, evacuation corridor or safety exit.


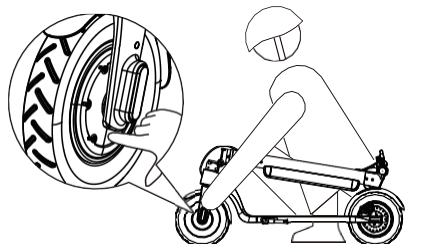


⚠ After riding for a long time, the motor hub and brake disc will be at a high temperature. Please don't touch them directly to avoid scalding!

Product Introduction

2.1 Overall View

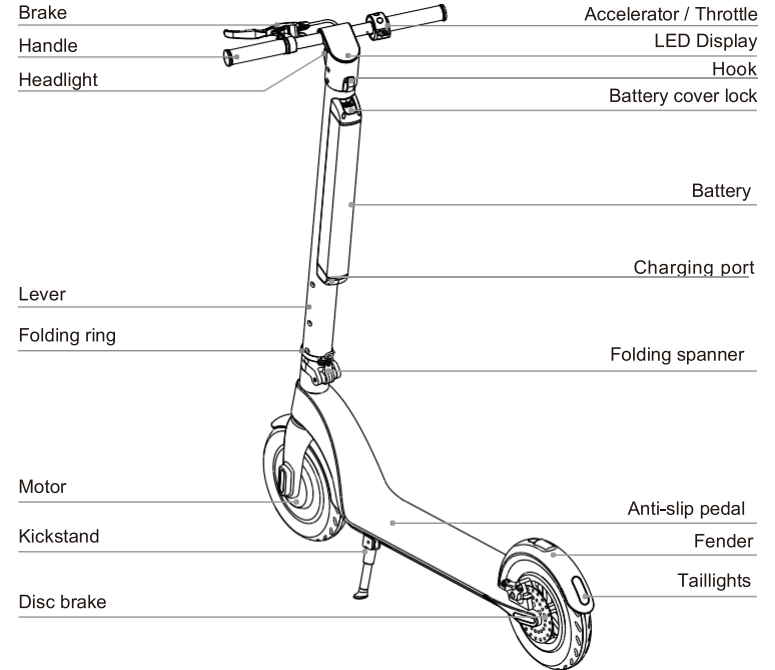

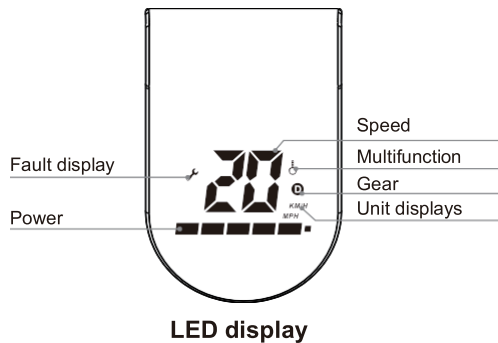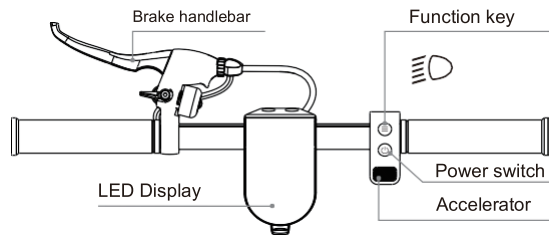

Button Instructions

1. **Power Switch:** Hold the power button to turn on/off.

2. **Function key:**

A: Press the function key to change between gears;

① Pedestrian mode: The gear indicator is not displayed.

② Normal mode: Gear indicator shows white.

③ Sports mode: Gear indicator shows red.

B: Press the function key twice: turn on / off the front and rear lights.



3. **Accelerator:** Press the accelerator to start riding.

4. **Brake:** Hold the brake handle to brake. Lightly step on the rear fender to assist the brakes.

5. **Cruise Control:** If you maintain a certain speed for 6 seconds (speed > 6km/h) then the scooter automatically enters cruise control. To exit cruise control, either accelerate or brake.

Note: Cruise Control can be turned off, please refer to page 13.


2.2 Pre-Assembly Instructions

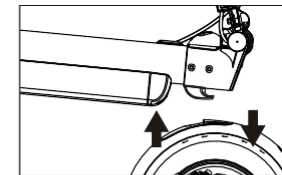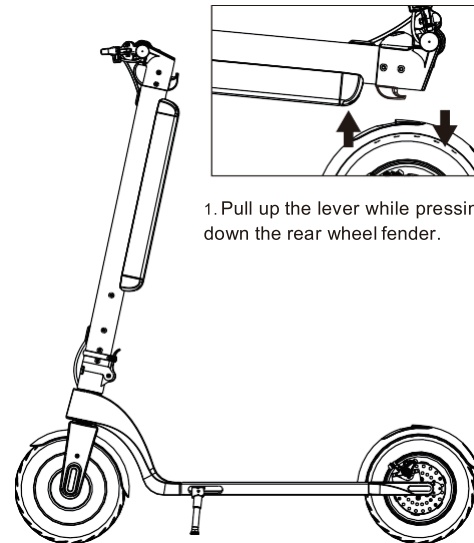


1. Pull up the lever while pressing down the rear wheel fender.




2. Fasten the folding spanner and use the folder fixing ring to fix the folder wrench.

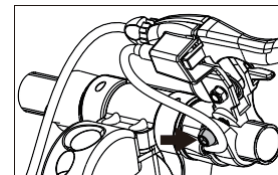

3. Fix the brake lever with an M5 hex wrench.

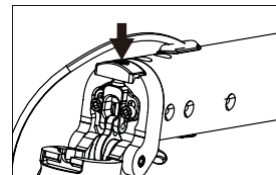

4. During riding, the fixed buckle may be loose. If so, you may need to adjust the screw in a clockwise motion.

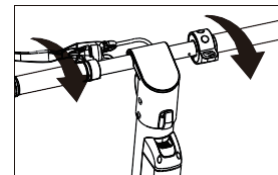


5. Tighten handlebars (Pay attention to the direction of rotation when tightening).


2.3 Folding the Scooter





1. Loosen the folder fixing ring.

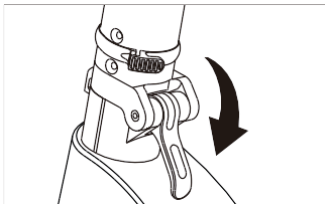

2. Open the folder wrench.

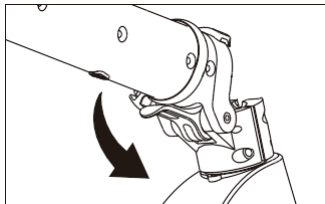


3. Lower the pole.

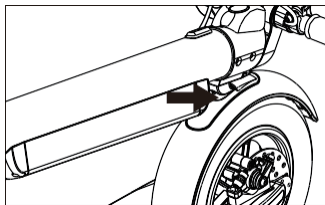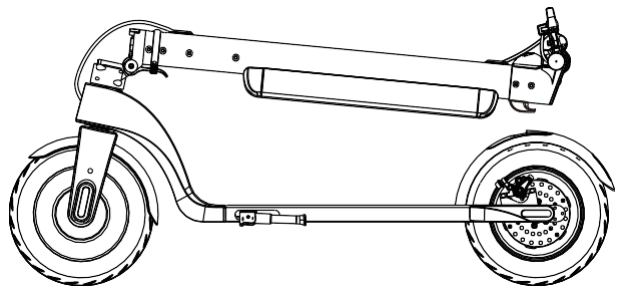


4. Align the hook with the hole of the rear fender and press down.


2.4 Assembling/Dismantling the Battery

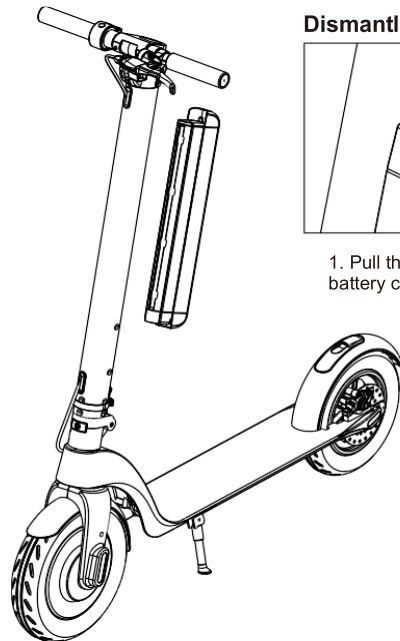


Dismantling

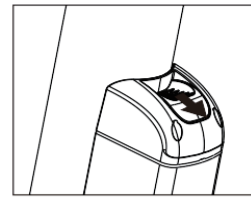

1. Pull the lock on the battery case.

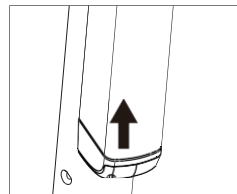


2. Push the battery up from the bottom.

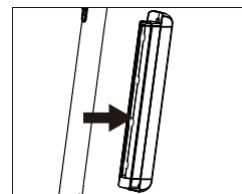


3. After pushing the battery up, pull it out horizontally.

Assemble

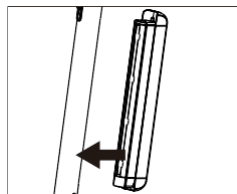


1. Insert the battery horizontally into the pole.

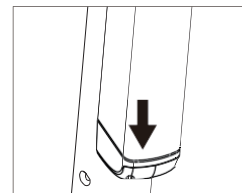

2. Push down until the lock latch of the battery box is tightened.


Riding the Scooter

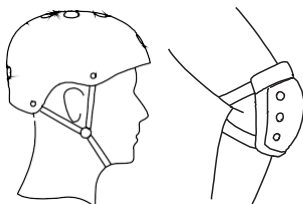


Please wear a helmet, kneecaps and elbow pads when riding the scooter.




Stand on the pedal with a single foot, press the accelerator, and push the opposite foot backwards.

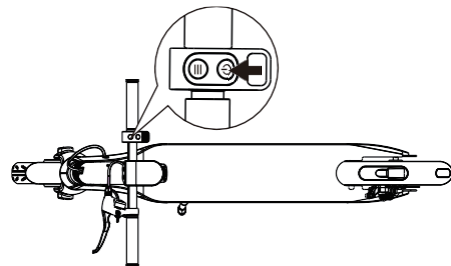

Long-press the power button for 2 seconds.

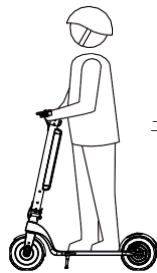


When the electric scooter starts to move, the other foot needs to step on the pedal to ensure stable riding.

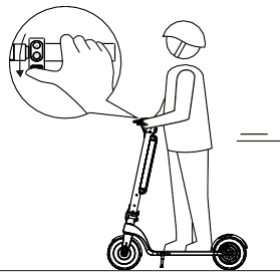


Press the accelerator to speed up and turn the grip to adjust the direction.



When the scooter slows down and stops, you are then able to erect the kickstand and step off it.

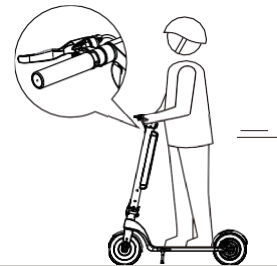

Hold the brake handle and lightly step on the rear fender to assist braking.

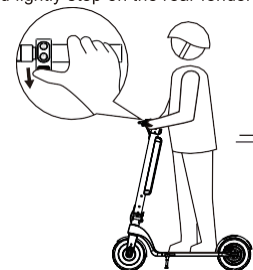

To avoid accidents, please always watch your speed.











Note

When riding on wet surfaces, the braking distance will be extended, so it is necessary to slow down. 2. Sudden braking may cause the scooter to slide, particularly on wet surfaces. Hence it is recommended to ride slowly.

Scooter Operating Settings

Method of use:

1. Press  and  at the same time to display **P0**
2. Press  to alternate between settings **P0-P4**
3. Press  to access **P***
4. Press  to set required values (*please refer to table.*)
5. Press  and exit **P*** setting function
6. Press  and  key at the same time to exit menu setup.

Items	Value Settings	Value Settings
P0 – Shift (km/miles)	KM – 0	Miles – 1
P1 – Cruise (ON/OFF)	Cruise – 1 – ON	Cruise – 0 - OFF
P2 – Starting Mode	Zero Start – 0	Non-zero start – 1 (>3km/h, Default)
P3 – Wheel Diameter Selection	8.5 – 85	10 inch – 10 (Recommended)
P4 – Gear 3 Maximum Speed	Limit 20KM/H - 20	Limit 25km/h – 25 – No Limit - FF

Battery Instructions

This is about how consumers charge and maintain their battery. Please refer to this manual to ensure a long lifespan and high battery performance.

4.1 Battery Parameters

Name	Parameter	Name	Parameter	Name	Parameter
Type	Li-ion battery	Working Temperature	0°C-35°C	Store Time (-10°C-40°C)	3 months (full charge)
Charging Time	5-7 hours	Charging Temperature	0°C-35°C	Initial Volume	10Ah
Voltage	36V	Max Charging Voltage	42V	Max Charging Current	2A

4.2 Battery Warnings

1. The battery must be charged and used within the temperature range required by the battery specification to make the electric scooter work correctly and efficiently.
2. Please make sure you take off the charger when you assemble the battery to avoid any accidents.
3. It is not allowed to dissolve or damage the battery. Make sure no metal objects get in contact with the battery pin electrode to prevent the battery from failing.
4. It is forbidden to disassemble or pierce the battery pack casing to avoid any short circuits caused by metal objects impeding the battery contacts as this may cause battery damage or personal injury.
5. There is the potential to cause a fire or explosion if water enters the battery circuit. If this occurs, please stop using the battery immediately.
6. You must only charge the battery with the original charger.
7. If the battery breaks or produces any smell, you need to stop using it and keep away from flammable objects.
8. It helps prolong the lifespan if battery is stored after it is 100% fully charged.
9. It is not allowed to store the battery under -20°C or over 50°C conditions.
10. You must charge the battery to at least 80% capacity if the battery is not used for more than 30 days. It is better to charge it to 100% every 90 days to protect the battery function.
11. It will help prolong the battery lifespan significantly if you charge it accordingly to the manual after every ride. At room temperature, the battery can have a higher range and performance. The battery life and performance will degrade if used at temperatures below 0°C. Typically, the range may be half or less than at temperatures of -10°C.
12. Do not charge and park electric scooters in residential buildings. Keep away from flammable objects when charging.


13. Please abide by local regulations when disposing of this battery.

- ⚠ When the internal temperature of the battery exceeds 50°C, the battery is in a protected state and cannot be charged.
- ⚠ After full charge, the electric scooter exhausts its stored power after about 90-120 days of standby. If it is not charged in time, it may cause damage to the battery due to excessive fatigue. This damage is unrecoverable, and it is beyond our warranty.

4.3 Charging

- Open the charging port cover, make sure the charging port is clean and dry.
- Connect the charger with the battery and the other end with power(100V-240V;50/60Hz), make sure the charging indicator is on.
- When the indicator light is on the charger light changes, indicating that the charging process is normal, otherwise check if the line connection is good.
- When the indicator on the charger has changed color, it indicates that the battery has been filled to 99%, Please do not overcharge as it will affect the battery life.

Charging method:

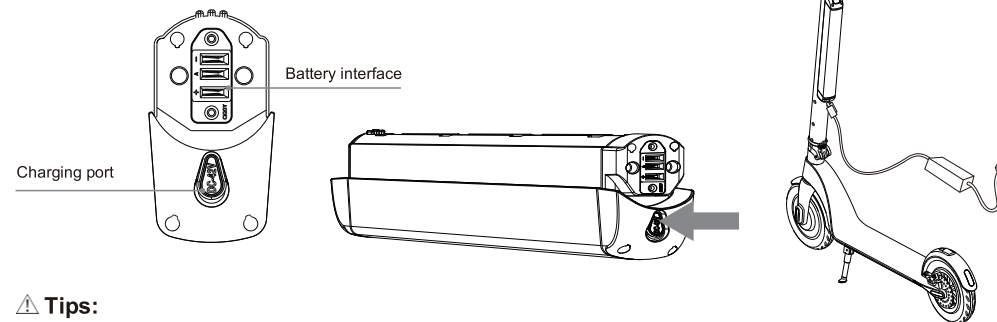


⚠ Tips:

Remove the battery to open the silicone charging port, plug the charger DC plug into the battery charging port; plug the power cord into the charger, then connect the other port to the socket (100V-240V; 50/60Hz), and confirm the charger indicator is on normally.

Cover the charging port with the anti-dust cap to prevent any metal objects from coming into contact with the charging port, thus creating a short-circuit.

Specification

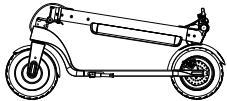Item	E-Dash Scooter
Product	
Unfolded size	1083*401*1186mm
Folded size	1083*401*460mm
Height from pedal to the ground	115mm
Net weight	15kg
Capacity	36V 10Ah
Motor power	36V 350W
Mileage per charge	20 - 45km
Max speed	25km/h (restricted) / 32km/h (unrestricted)
Max loading	100kg
Climbing angle	15°
Input voltage	100-240Vac
Frequency	50-60Hz
Output voltage	42V
Output current	2A
Store temperature	-10°C-35°C

Maintenance

Maintenance Considerations:

- Make sure the electric scooter charger and charging line are disconnected and ensure that the electric scooter is off.
- Wipe the shell with a soft cloth to clean the electric scooter. Please do not use any lubricating oil when undertaking this process.
- It is recommended to check the tyre pressure before driving to ensure driving safety. Tyre pressure standard: 320kpa ~340kpa.
- Please check the brake discs and tyre tread at least once a month as they are vulnerable to wear.
- Please do not replace the accessories which are not provided by the manufacturer without permission, to avoid a safety hazard.
- Please only clean the e-scooter by wiping it with a cloth as any water could cause permanent damage to the electronic devices in the scooter.
- In order to protect the user's safety, the user cannot take apart the electric scooter, otherwise, the user will give up the warranty rights of the product.

⚠ Storage

- Please charge your electric scooter before storing, to prevent the battery from fatiguing for too long. Please ensure charge at least once every three months.
- If the storage environment temperature is lower than 0 °C, please don't charge the electric scooter. Please put it in inside environment temperature (above 10 °C) and then charge, storage temperature is - 10 °C to 35 °C.
- Please keep the electric scooter in a suitable place indoors, in a dry and appropriate climate. You can cover the electric scooter to prevent from dust.

Troubleshooting

Description of adverse phenomena	Solution
Not Starting Up	Check to see if the battery is connected and powered
Cannot Charge	<ol style="list-style-type: none">1. Check whether the plugboard has electricity;2. Check the charger light is on;3. Check the plug of the charger and the charging port of the whole scooter have been inserted correctly.

Package Contents

Electric scooter package contents:

E-Scooter: 1PC

Charger: 1PC

Manual: 1PC

Screws & Wrench: 1Set

Product Quality Certificate

This product is qualified by passing QC inspection and allowed to be sold on the market.

The warranty takes effect upon delivery of the scooter to the customer.

Product Warranty

We shall provide warranty services should problems arise due to manufacturing defects.

1. 1 Year Cover - Main body including handlebar stem, motor & charger
2. 6 Months Cover - Battery
3. No Cover - Plastic decorative cover, handlebar, and rear wheel
4. Any damage caused due to lack of care and maintenance will resort to invalidating the warranty.