

Thank you for choosing to purchase a product from ProBreeze. Please read the entire manual carefully prior to first use and keep in a safe place for future reference.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

- Use this device only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children must be supervised not to play with the appliance.
- Cleaning and user maintenance shall not be made by children unless continuously supervised.
- Children of less than 3 years should be kept away unless continuously supervised.
- Avoid placing the device in areas where it can become a tripping hazard.
- Do not place any objects on top of the device when it is not in use.
- This device is intended for indoor household use and similar applications. Do not use outdoors.
- Do not wipe or wash the device with chemical solvents.
- The moisture absorption speed is not the same in different environments. Humidity and temperature will especially influence the speed of the indicator color changing.
- The surface will become warm when recharging. Keep away from flammable objects. Keep all objects at least 10cm (4 inches) away to increase air convection.
- It is normal to see steam on the indicator when the unit is releasing moisture.
- In order to avoid damage or leakage, do not soak in water.
- Do not use in conjunction with medical products.
- Keep away from fire, gas stoves and other flammable places.
- Do not operate the device if there are any signs of damage to the device or accessories supplied.
- Do not attempt to repair or adjust any electrical or mechanical elements in the device. Doing so may be unsafe and will void your warranty.

ProBreeze®



Scan for
additional
information

Rechargeable Mini Dehumidifier

USER MANUAL

FEATURES

- 1 Body
- 2 Indicator
- 3 Moisture Absorbing holes
- 4 Charging indicating light
- 5 Plug (back)



Voltage | AC120V~ 60Hz

Power | 20W

Hygroscopic Capacity | e 150ml (9 cubic inches)

Net Weight | 0.40kg (14 ounces)

Size | W165 x D102 x H43 (mm)

Size | W 6.7 x D 4.3 x H 1.8 (inches)

INSTRUCTIONS

1. If the indicator is dark green before first use, plug in the device and recharge for 12-15 hours. When the crystal indicator has changed from green to orange, the mini dehumidifier is ready for use.

2. Once the indicator is orange (photo 1), place the dehumidifier into the location you wish to keep free from moisture (e.g. Wardrobe, Cupboard, Jewellery Box)

3. When the dehumidifier has filled with moisture the crystal indicator will turn from orange to green. Remove the dehumidifier and connect the power cord to the back (photo 2/3). The charging light will turn on to indicate that the dehumidifier is in recharging mode and releasing moisture. (photo 4)



photo 1



photo 2

4. After 12-15 hours, the crystals will change back from green to orange indicating that the stored moisture has been removed and the dehumidifier is recharged.

*Note: Please keep on charging for a few extra hours if the indicator hasn't completely changed back after 15 hours.

5. Remove the power adaptor to end recharging.

6. The mini dehumidifier is ready for use once again.



photo 3

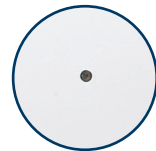


photo 4

INTENDED USAGE

This product is designed for use in small spaces to protect items from damp and moisture. Examples include shoe cabinets, wardrobes, bookcases, cupboards, jewellery boxes, CD cabinets, pianos, food cabinets and more. For larger spaces, please use the ProBreeze 500ml (1100 Cubic Feet) or 1500ml (2200 Cubic Feet) dehumidifier.



Keep your personal electronics safe and dry



Moisture-proof food and perishables



Maintain a dry and damp-free wardrobe



Keep your personal belongings safe and dry

DISPOSAL

This marking indicates that this product should not be disposed of with other household waste throughout the EU. This is to prevent possible harm to the environment and human wellbeing. Contact your local authority for information regarding the collection systems available. If possible, recycle it responsibly to promote the sustainable reuse of resources.

