



BullX Deluxe Lure Machine (Continuous Loop Model)

TOP TIPS



- NOTE: THE TYPE OF BATTERY VRLA AGM IN YOUR MACHINE SHOULD BE KEPT ON CHARGE WHEN NOT IN USE (OR AT LEAST FULLY CHARGED AFTER USE) TO GET MAXIMUM LIFE.
- RC CONTROLLER REQUIRES 4 x AA BATTERIES (NOT INCLUDED)
- THE CONTINUOUS LOOP MACHINE IS DESIGNED FOR DOGS TO CHASE, NOT FOR PERSONAL VIEWING A LURE GOING ROUND AND ROUND THE FIELD AT MAXIMUM SPEED.
- ONLY USE THE GUIDE LOOP ON YOUR MACHINE WHEN DRAGGING A LURE IN, THE GUIDE LOOP IS NOT TO BE USED WHEN USING AS A CONTINUOUS LOOP MACHINE.
- YOU MUST USE THE M8 SPLIT WASHER AND M8 WASHER IN THE ORDER I HAVE FIT YOUR WHEEL TO YOUR MACHINE. FAILURE TO USE THESE WASHERS WILL RESULT IN YOUR CHOSEN WHEEL BECOMING LOOSE WHEN SPINNING.
- PLEASE WATCH OUR INSTRUCTIONAL VIDEO ON YOUTUBE:
• <https://youtu.be/QHzBMyAQsXw>
- IT IS VERY IMPORTANT TO LET THE MACHINE COOL FOR 5 MINUTES AFTER 1,000 METERS OF LOOPED LINE HAS BEEN PULLED IN ONE GO.
- DO NOT HAMMER OR STAMP ON THE PULLEY WHEELS, YOU WILL DAMAGE THEM! IF THE GROUND IS HARD, MAKE A PILOT HOLE FIRST SO THAT IT MAKES IT EASIER TO PUSH THEM IN TO THE FIELD.
- CHOOSE A SHORT GRASS FIELD TO TRAIN IN.
- THE MACHINE LEGS SCREW INTO THE BASE OF THE MACHINE.
- THE ANTENNA SCREWS ONTO THE BRASS THREAD LOCATED ON THE TOP CORNER OF THE MACHINE.
- THE ANTENNA IS INSIDE YOUR RC BOX.
- MACHINE LEGS, MOTOR SPANNERS ARE INSIDE THE RC BOX.
- TO OPERATE THE MACHINE, SIMPLY TURN THE MACHINE AND RC CONTROLLER ON WAIT FOR THE GREEN LIGHT TO COME ON THE MACHINE, PRESS THE TRIGGER AND YOU ARE AWAY!
- PLEASE ONLY USE A VERY LIGHT AND FLEXIBLE LURE FOR CONTINUOUS LOOP TRAINING.
- MUZZLE YOUR DOGS!
- TRY NOT TO LET YOUR DOGS CATCH THE LURE...
- IF YOUR MACHINE STOPS WHILST YOU ARE USING IT, DO NOT CONTINUE TO USE IT. YOUR MACHINE WILL EITHER NEED CHARGING OR YOU ARE PUTTING THE MACHINE UNDER TOO MUCH TENSION.



If you need further help, please contact us for more information on how to use our products.

- We accept no responsibility for any damage or injury caused by the misuse of these machines.
- 2 years warranty on all products, free replacements or repairs within this time period. Products will need to be sent back to us for repair or be replaced.
- Shipping costs back to us are not covered by BullX.
- Warranty is void if the machines are used with third party accessories such as home made pulley's.
- Returns accepted within 14 days of purchase. Products **MUST** be returned in the exact same condition (**BRAND NEW**) as they were received for a full refund. Partial refunds will be made if the products are used in any way.

danny@bull-x.co.uk



CLICK THE PICTURE TO VIEW THE VIDEO

