 





Because keeping you safe is our top priority... You must read the Instruction Manual *before* you use the spotlight. After reading the Instruction Manual, this care and use instructional sheet will help you properly use your new spotlight.

1 The NoCry Spotlight

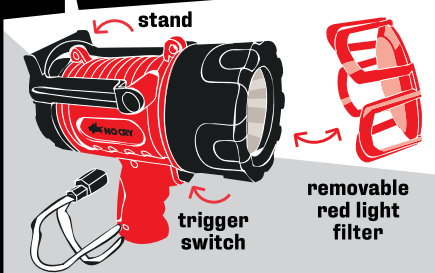

Heavy-duty waterproof 1000lm spotlight with rechargeable battery.

 2 Using your spotlight

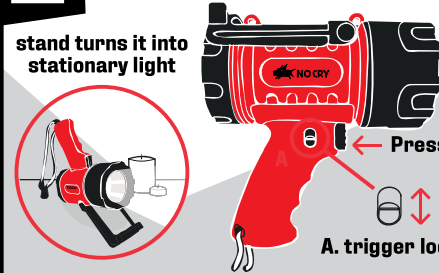

stand turns it into stationary light

Press trigger switch to turn on the spotlight and cycle through power options. Use the safety trigger lock to lock light on or off. The trigger lock should also be engaged before charging. Do not allow to completely discharge.

- Press trigger
- x1 1000 lumens 6 hrs
 - x2 500 lumens 12 hrs
 - x3 100 lumens 20 hrs
 - x4 power off

dim light -



submerge max 3ft depth

max 3min




make sure back cap is screwed on tight!

3 Charging your spotlight

Use only the NoCry charging adapters provided with the product. Using a different charger could result in electrical issues, including fire, which could result in serious injury, death, and/or property damage.



power off before charging

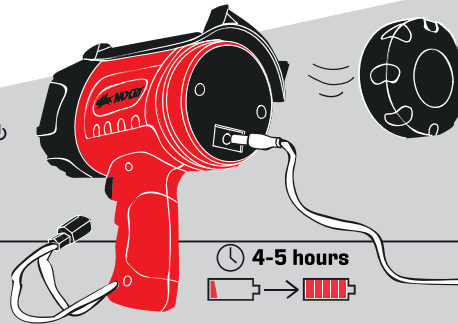

4-5 hours

back cap must be screwed back on tight



A. Charge light



Unscrew the rear cap and plug in the charger. Always make sure the cap is screwed back on before submerging the spotlight. Following exposure to water, do not attempt to charge the spotlight without first drying for a period of 24-hours and ensuring that the charging port is completely dry. Failure to follow these instructions could result in electrical issues, potentially resulting in serious injury, death, and/or property damage.

4 Be careful with this powerful spotlight



make sure back cap is screwed on tightly!


Never look into the light when it is on. Never shine it into someone else's face.

5 This product is not a toy



Do not allow children to handle or operate this spotlight!

6 Attention!

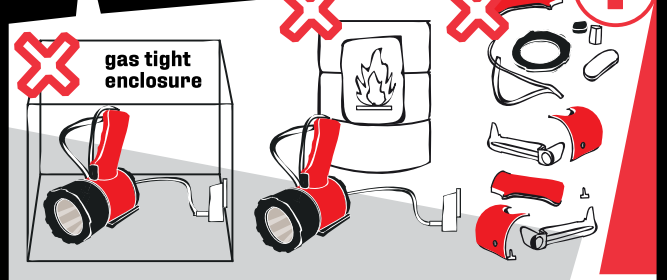

gas tight enclosure

Do not charge in gas tight enclosure or next to flammable materials. Do not disassemble.

7 Contact us



wecare@nocry.com

Feel free to contact us if you have any problems.

HOW WATERPROOF IS MY NEW SPOTLIGHT?

Your spotlight is rated IP67 waterproof. This means you can use it in certain humid or wet environments. But just how waterproof is your new spotlight? What happens if you dropped it in the water while fishing or boating? No need to worry. Not only is the spotlight waterproof for continuous submersion of up to 3 minutes at depths no greater than 3 feet, it also floats to the surface, making it easy to find and retrieve.

WHAT IS AN IP67 RATING?

The IP67 rating shows the Ingress Protection level. This rating shows the level of protection the spotlight has from various solids or liquids.

The number “6” indicates that the spotlight is protected from harmful dust and other solid objects, while the number “7” shows the protection level against immersion in water. The spotlight is waterproof up to 3 feet deep and designed to be submerged for up to 3 minutes.

WHAT MAKES THE SPOTLIGHT WATERPROOF?

The spotlight has a rubber “O” ring at the back and near the front lens. When the back cap is tightened properly, these rings preserve the waterproof qualities of the spotlight. When the back cap of the spotlight is screwed on, the “O” ring forms a seal which prevents water from entering the cap.

HOW TO SAFELY USE YOUR SPOTLIGHT IN OR NEAR WATER

Before exposing the spotlight to water / moisture, ensure proper IP67 rating:

- ✓ Always screw the rear cap on tightly. The cap should fully enclose the rubber “O” ring. There should be no gap between the cap and the spotlight’ body.
- ✓ Make sure the front lens is screwed on tightly. The transparent lens and rubber bezel should fully enclose the rubber “O” ring and there should be no gap between the bezel and the spotlight’ body.
- ✓ This is not a diving spotlight. While accidental drops and spills are fine, this spotlight is not suited for prolonged or continuous underwater use. Don’t submerge it for longer than 3 minutes.
- ✓ Following exposure of the NoCry spotlight to water, do not attempt to charge without first drying for a period of 24 hours and ensuring that the spotlight is completely dry. Failure to follow these instructions could result in electrical issues potentially resulting in injury, death, and/or property damage.

I JUST DROPPED MY SPOTLIGHT IN THE OCEAN. WILL SALTWATER AFFECT IT DIFFERENTLY THAN FRESHWATER?

Yes. Saltwater can corrode electronics. Keep that in mind when you take your electric gear out on the ocean or near any other body of water that contains salt. If the spotlight comes in contact with salt water, immediately rinse the exterior with freshwater and follow the steps below:

IMPORTANT: FOLLOW THESE STEPS IF YOU GET WATER ON YOUR SPOTLIGHT

- 1.** Thoroughly dry the exterior of the spotlight.
- 2.** Take off the back cap and shake the light gently to pour out any water that might have gotten inside.

If the spotlight was in contact with salt water and moisture got inside the back cap, use a clean, dry cloth and a small amount of freshwater to remove any salt. Never immerse the light in water without the back cap completely screwed on.

- 3.** Remove any remaining visible moisture using a dry cloth or a paper towel.
- 4.** Put the opened up spotlight on the stand and let it dry out for 24 hours in a dry room between 50°F and 104°F (10°C and 40°C). This prevents corrosion and makes sure that the moisture has evaporated.

After the spotlight is fully dry (see steps above), recharge it on a non-flammable surface and carefully monitor the process. If the spotlight isn't charging properly, unplug it immediately and contact us at [**wecare@nocry.com**](mailto:wecare@nocry.com)

Did you lend your spotlight to a friend? Better safe than sorry. Open it up and let your spotlight dry just to be safe.

Questions or concerns?

Contact us via [**wecare@nocry.com**](mailto:wecare@nocry.com)

We read every message and strive to reply within 24 hours.

ES

Porque mantenerte a salvo es nuestra mayor prioridad... Debes leer el manual de instrucciones antes de usar el foco. Después de leer el Manual de Instrucciones, esta hoja de instrucciones de cuidado y uso le ayudará a utilizar correctamente su nuevo foco.

- ✓ El foco NoCry es una resistente luz de 1000 lm a prueba de agua con una batería recargable y cargador.
- ✓ Presione el interruptor de activación para encender el reflector y recorrer las opciones de potencia. Utilice el seguro del gatillo de seguridad para bloquear la luz en el encendido o en el apagado. El seguro del gatillo también debe estar activado antes de la carga. Utilice sólo los adaptadores de carga NoCry suministrados con el producto. El uso de un cargador diferente podría causar problemas eléctricos, incluyendo fuego, lo que podría resultar en lesiones graves, muerte y/o daños a la propiedad. No permita que se descargue completamente.
- ✓ Para cargar su foco, desenrosque la tapa trasera y enchufe el cargador. Asegúrese siempre de que la tapa esté atornillada de nuevo antes de sumergir el foco. El foco puede sumergirse a 3 pies de profundidad durante un tiempo máximo de 3 minutos. Después de la exposición al agua, no intente cargar el foco sin antes secarse durante un período de 24 horas y asegurarse de que el puerto de carga esté completamente seco. Si no se siguen estas instrucciones se podrían producir problemas eléctricos, lo que podría provocar lesiones graves, la muerte y/o daños a la propiedad.
- ✓ Ten cuidado cuando uses este foco – no mires directamente hacia la luz cuando esté encendido y nunca alumbres directamente a la cara de nadie. No cargue el proyector en un recinto estanco al gas o cerca de materiales inflamables. No lo desmonte.
- ✓ Este producto no es un juguete, no dejes que los niños lo manejen o usen.

Si tienes alguna pregunta o duda, crítica o reconocimiento háznoslo saber en wecare@nocry.com.

FR

Parce que votre sécurité est notre priorité absolue... Vous devez lire le manuel d'instructions avant d'utiliser le projecteur. Après avoir lu le mode d'emploi, cette fiche d'entretien et d'utilisation vous aidera à utiliser correctement votre nouveau projecteur.

- ✓ Le projecteur NoCry est un projecteur de 1000 lm résistant à l'eau avec une batterie rechargeable et un chargeur.
- ✓ Appuyez sur la gâchette pour allumer le projecteur et faites défiler les options d'alimentation. Utilisez le verrou de sécurité de la gâchette pour verrouiller la lumière. Le verrouillage de la gâchette doit également être enclenché avant la charge. Utilisez uniquement les adaptateurs de charge NoCry fournis avec le produit. L'utilisation d'un autre chargeur pourrait entraîner des problèmes électriques, y compris un incendie, qui pourrait provoquer des blessures graves, la mort et/ou des dommages matériels. Ne laissez pas le produit se décharger complètement.
- ✓ Pour charger votre projecteur, dévissez le capuchon arrière et branchez le chargeur. Assurez-vous toujours que le capuchon est vissé avant de submerger le projecteur. Le projecteur peut être immergé à une profondeur de 1,5 m pendant une durée maximale de 3 minutes. Après une exposition à l'eau, n'essayez pas de charger le projecteur sans l'avoir préalablement séché pendant une période de 24 heures et en vous assurant que le port de chargement est complètement sec. Le non-respect de ces instructions peut entraîner des problèmes électriques, pouvant entraîner des blessures graves, la mort et/ou des dommages matériels.
- ✓ Soyez prudent lorsque vous utilisez ce projecteur – ne regardez jamais directement la lumière quand il est allumé et ne le dirigez jamais vers le visage d'une autre personne. Ne pas recharger dans une enceinte étanche aux gaz ou à proximité de matériaux inflammables. Ne pas démonter.
- ✓ Ce produit n'est pas un jouet. Ne laissez pas les enfants manipuler ou utiliser ce projecteur.

Si vous avez des questions, des préoccupations, des commentaires ou des critiques, faites-le nous savoir à l'adresse wecare@nocry.com.




1000LM WATERPROOF SPOTLIGHT INSTRUCTION MANUAL

*We've tried to make this manual useful, simple, and understandable.
Please read it carefully before using your spotlight, and keep it safe for future reference.*




GENERAL SAFETY WARNINGS


READ ALL SAFETY WARNINGS AND ALL INSTRUCTIONS

 **WARNING:** Failure to follow the warnings and instructions may result in electric shock, fire, property damage, and/or serious injury or death. Before use, be sure everyone operating this spotlight reads and understands all safety instructions and other information in this manual. Review frequently prior to use and when instructing others.

Save all warnings and instructions for future reference.



Pay attention to all the signs and symbols shown in these instructions.

 **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury or death, and/or property damage.




 **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury and/or property damage.

ELECTRICAL SAFETY

 **WARNING:** WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:














-  To reduce the risk of injury, close supervision is necessary when the spotlight is used near children.
-  Only use attachments recommended or sold by the manufacturer.

 **WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK:

-  Charge indoors only. Do not expose chargers to water or any other liquid.
-  Use only the chargers supplied by the manufacturer and intended for this product to recharge.
-  Never connect a charger to a wet spotlight.

 **WARNING: FIRE HAZARD:** Keep spotlight away from anything flammable.

 **CAUTION:** TO REDUCE THE RISK OF SERIOUS INJURY, DEATH, AND/OR PROPERTY DAMAGE:

-  The 18W LED may get hot. Do not touch hot lens, guard or enclosure.
-  Never look directly into the light or shine the light into another person's eyes.
-  Keep sharp objects away from the lens – they can crack or break it.
-  Do not expose the spotlight to temperatures exceeding 140°F (60°C)
-  Do not drop or throw spotlight. It contains a lithium-ion rechargeable battery pack and the impact may damage the battery. Dropping the spotlight may void the warranty.
-  Use only with the NoCry AC or DC charging adapters that are provided with the spotlight. Plug in the charging adapter at the spotlight first, then plug into the power source.
-  Do not overcharge: recharge up to 6 hours maximum.
-  After charging, disconnect charging adapter and wait 5 minutes before use.
-  Do not crush, cut, pull or expose charging adapter cords to extreme heat.
-  Do not open the spotlight interior body casing, or the casing on the NoCry AC and DC chargers. There are no user-serviceable parts inside.
-  Do not operate the spotlight without the lens in place.
-  To reduce risk of damage to electric plug and cord, only pull by the plug. Never pull by the charging cord when disconnecting from the power source or spotlight.
-  Do not attempt to charge the unit if the charger is damaged – contact us at NoCry.

INSTRUCTIONS REGARDING WATERPROOF OPERATION

The spotlight has a rubber “O” ring on the back end and near the front lens. When the back cap is properly tightened, this ring preserves the waterproof qualities of the spotlight. When the back cap of the spotlight is screwed on properly, the “O” ring forms a seal which prevents water from entering the cap and damaging the spotlight.

 **WARNING:** TO REDUCE THE RISK OF INJURY, DEATH, AND/OR PROPERTY DAMAGE:

- ✓ Do not remove the rubber “O” rings or use the unit with damaged or removed “O” rings, back cap, rubber bezel or front lens. Improper sealing of the waterproof end cap and/or submerging this spotlight in depths greater than 3 feet may cause it to no longer be waterproof. Submerging the spotlight when these conditions exist could lead to serious injury and/or death, property damage, and/or permanent damage to the spotlight.
- ✓ Submerging the spotlight in depths greater than 3 feet and/or operating it in water temperature lower than 41°F (5°C) or higher than 104°F (40°C) could result in leakage, warping or malfunction, causing injury and/or death, property damage, and/or permanent damage to the spotlight. Failure to follow these warnings will void the warranty coverage for the spotlight.

Steps to follow after using the spotlight in or near water:

- ✓ Thoroughly dry the outside of the spotlight, wiping any saltwater off with a towel and clean, fresh water.
- ✓ Take off the back cap and gently shake the spotlight to pour out any water that might have gotten inside.
- ✓ If the spotlight was in contact with salty sea water, use a clean, dry cloth and a small amount of fresh water to remove any salt residue.
- ✓ Remove any visible moisture using a dry cloth or a paper towel.
- ✓ Put the spotlight on the stand and let it dry out for at least 24 hours in a dry room between 50°F and 104°F (10°C and 40°C). This prevents corrosion and makes sure that any residue moisture has evaporated.

- ✓ Do not attempt to charge the Spotlight until after it has dried for at least 24 hours and all moisture has evaporated.
- ✓ Place the end cap back on the unit, screwing clockwise until it fits securely.

 **WARNING:** FAILURE TO FOLLOW THE STEPS ABOVE MAY RESULT IN SERIOUS INJURY, DEATH, AND/OR PROPERTY DAMAGE.:

CHARGING/RECHARGING THE SPOTLIGHT

This spotlight is shipped in a partially charged state. Charge unit after purchase and BEFORE first use using either the provided wall charger or the optional car charger for approximately 4-5 hours. Charge after each use until the battery/charge status LED indicator lights green.

IMPORTANT: When the unit is not in use, we recommend that the battery is charged at least every 30 days.

 **WARNING:** TO REDUCE THE RISK OF SERIOUS INJURY, DEATH, AND/OR PROPERTY DAMAGE:

Make sure the spotlight is thoroughly dry before charging or recharging. Do not charge if the spotlight has not been dried and/or shows signs of moisture. If water leaks into the charging port the unit can sustain permanent damage. Additionally, water leakage into the charging port can result in electrical issues, and can pose the risk of electrical fire, resulting in serious injury, death, and/or property damage.

Charging/recharging using the wall charger

- ✓ Make sure the spotlight is turned off and the trigger lock is engaged.
- ✓ Unscrew (counterclockwise) the waterproof end cap on the back of the unit and remove it.
- ✓ Ensure that no moisture is present in the charging portal. Failure to ensure a dry charging environment can lead to electrical fire resulting in injury, death, and/or property damage, and will void the warranty on your NoCry spotlight.

- ✓ Insert the barrel connector of the charger into the charging port on the back of the unit. Insert the plug end into a (powered) standard North American 120 volt 60Hz outlet.
- ✓ Use only with the NoCry AC charging adapter provided with the spotlight. Failure to use a NoCry charger specifically intended for this product could result in electrical issues, potentially resulting in injury, death, and/or property damages. Using any charger other than a NoCry charger intended for the spotlight will void the warranty on your NoCry spotlight.
- ✓ Charge until the battery/charge status LED indicator lights green (approximately 4-5 hours).
- ✓ Replace the end cap on the unit, screwing clockwise until it fits securely.

Charging/recharging using the car charger (optional accessory)

- ✓ Before charging, make sure the spotlight is turned off and the trigger lock is engaged.
- ✓ Unscrew the waterproof end cap on the back of the unit counterclockwise and remove it.
- ✓ Ensure that no moisture is present in the charging portal. Failure to ensure a dry charging environment can lead to electrical fire resulting in injury, death, and/or property damage, and will void the warranty on your NoCry spotlight.
- ✓ Insert the barrel connector of the charger into the charging port on the back of the unit.
- ✓ Use only with the NoCry DC charging adapter provided with the spotlight. Failure to use a NoCry charger specifically intended for this product could result in electrical issues, potentially resulting in injury, death, and/or property damages. Using any charger other than a NoCry charger intended for the spotlight will void the warranty on your NoCry spotlight.
- ✓ Insert the car charger plug end into the accessory outlet of your vehicle or another 12 volt DC power source.
- ✓ Charge the unit until the green battery status LED lights up (approximately 4-5 hours). **DO NOT CHARGE FOR LONGER THAN 5 HOURS USING THIS METHOD.**

Note: When using a vehicle's 12 volt DC accessory outlet as a charging source, be aware that some vehicles require you to turn on the ignition to power the accessory outlet.

Important Notes: If either of the chargers is plugged into the spotlight while it is operating, the unit will not charge. The unit will begin charging once the spotlight is turned off.

PROPER USE


The spotlight is designed to be used as a consumer-grade spotlight with an IP67 waterproof rating.

The spotlight is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user/operator and not the manufacturer will be liable for any damage or injuries caused as a result of misusing the spotlight.

Please note that this spotlight has not been designed for use in commercial, trade or industrial applications. Use of the spotlight in commercial, trade or industrial businesses or for equivalent purposes voids the NoCry warranty.

WARNING:

- v** Never operate this spotlight unless the rubber "O" ring, rubber bezel and lens are intact and properly seated and the waterproof end cap is securely in place.
- v** Never operate the spotlight in areas with high strength magnetic fields, such as in the vicinity of an AC power generator etc.
- v** Never operate this spotlight at depths greater than 3 feet.
- v** Never operate this spotlight in water temperatures lower than 41°F (5°C) or higher than 104°F (40°C).
- v** This spotlight is designed to operate for up to 3 minutes under water. Longer exposure could damage the spotlight permanently, or cause electrical issues resulting in injury, death, and/or property damage.

 **WARNING:** RISK OF UNSAFE OPERATION. Improper operation, maintenance or modification of the spotlight could result in serious injury, death, and/or property damage. Under no circumstance should this product be modified and/or used for any application other than that for which it was designed. Read and understand all warnings and operating instructions before using the spotlight. Failure to use the product as set out in the instructions will void your warranty and could result in serious injury, death, and/or property damage.

CARE AND MAINTENANCE

Make sure the spotlight is thoroughly dry before storage. If the unit has been submerged, follow the drying instructions accordingly.

If the unit gets dirty, gently clean the outer surfaces of the spotlight unit with a soft cloth moistened with a mild solution of water and detergent.

There are no user-replaceable parts. To maintain the spotlight, periodically inspect the condition of seals, adapters, connectors and wires. Contact manufacturer to replace any components that have become worn or broken. Do NOT attempt repairs yourself.

STORAGE

When storing the spotlight for a longer period, charge the battery to about 50% and store in a dry, dark place. We recommend that the battery is checked and charged at least every 30 days.

All batteries lose energy from self-discharge over time. This happens even more rapidly at higher temperatures. Avoid battery from being fully drained, as this will shorten battery life.

BATTERY REPLACEMENT/DISPOSAL

The battery should last the service life of the unit. Contact manufacturer for any additional information you may need.

 **WARNING:**

- v** Do not dispose of the battery in fire as this may result in an explosion.
- v** Before disposing of the battery, protect exposed terminals with heavy-duty electrical tape to prevent shorting (shorting can result in injury or fire).
- v** Do not expose the battery to fire or intense heat as it may explode.

TECHNICAL DATA

Model	MX-6001-E
Lumen capacity	1000 lumen
Waterproof Rating	IP67
Battery capacity	3000 mAh
Battery charge voltage	8.4V
Battery charge current	1000mA
Battery charger supply	100-240V 50/60Hz 0.3A (wall charger) DC12V-24V (car charger)
Charging time	4-5 hours
Weight	15.2oz / 430g

DISPOSAL AND RECYCLING

The unit is supplied in packaging to prevent it being damaged in transit. This packaging is raw material and can therefore be reused or can be returned to the raw material system. Electrical products should not be discarded with household products. Electrical products used must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.

WARRANTY

All NoCry products are inspected and tested to ensure their quality before leaving the factory. If you're not happy with your NoCry product, please contact us within 30 days of receiving it at wecare@nocry.com to return it for free for a replacement product or to receive a full refund. The choice is yours.

Each NoCry electric product is warranted to be free of defects in material and workmanship for the period of FOUR years from the date of original purchase. Warranty does not cover normal wear and tear, abuse, altered products, modifications, and products that have been repaired or attempted to be repaired by any parties other than NoCry. At NoCry's discretion, a defective product will be repaired or replaced. Additionally, failure to use the product in accordance with these instructions will void the warranty.

If you think you might have a defective product, please contact us at wecare@nocry.com. Our customer care team will be happy to help and start the (free) procedure to determine whether your product is defective. NoCry's warranty applies to ONLY products being sold by Authorized Resellers. We regretfully will not provide any warranty for products sold by any other sources. Proof of purchase will be required to obtain warranty. Please review the warranty carefully, and contact us if you have any questions.

HOW TO CONTACT NOCRY

We're glad to have you join the NoCry community, and we hope you are happy with your new NoCry Rechargeable Spotlight. If you have any questions or concerns, let us know by emailing wecare@nocry.com.

We'd also love to connect with you via social media. You can find us on Instagram, Facebook and Pinterest by searching "NoCry Tools & Gear".

US & CA Distribution by: NoCry, LLC. 10785 W. Twain Ave. Suite 210,
Las Vegas, 89135, NV, USA.

www.nocry.com
wecare@nocry.com

Batch Number : NCS-2020-06