


CLAYMORE MULTI FACE L/X

User Manual

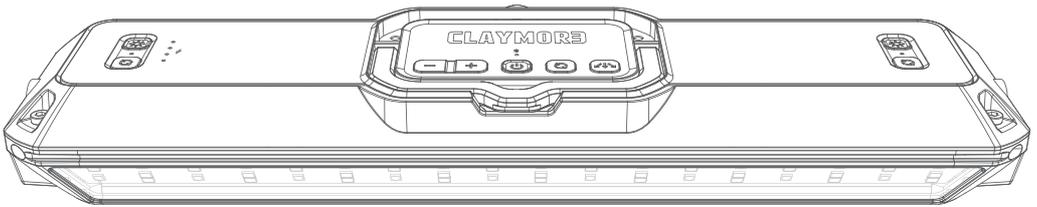


This portable light contains a Li-ion battery. Please follow the user manual before use. If any abnormality is found in the product, discontinue use and contact the dealer or a service center where the product was purchased. Any modifications of this product will void the warranty. Misuse of CLAYMORE products may cause user harm.


Caution

- ① Do not use near high temperatures such as fires or heating equipments. It may cause explosion or ignition.
- ② This product is water resistant. However, if left in the rain for a long time, it may cause malfunction. If the product gets soaked, please quickly wipe it off.
- ③ Do not store or use in vehicles exposed to direct sunlight. It may cause explosion and malfunction.
- ④ Do not touch the light source directly as it may become very hot during use. Use handle to carry out.
- ⑤ Do not use if it exceeds the operating temperature range (-10 °C to 40 °C).
- ⑥ Please do not place in the reach of infants. It may cause swallowing of parts or injury.
- ⑦ Adult supervision is necessary when used by children. Misuse of light may cause injury or electric shock.
- ⑧ Do not insert any metal parts into the terminal block of the connector. It may cause heat, explosion or electric shock.
- ⑨ Do not disassemble or modify the product.
- ⑩ Do not touch the connector with wet hands. There is a danger of electric shock.
- ⑪ After use, be sure to turn off the power.
- ⑫ Do not forcefully fold handle, It may damage hinge.
- ⑬ If the product is dropped or experiences physical shock, damage may be accumulated inside the product and unexpected malfunction may occur even during normal use. Be careful not to apply physical shocks to the main unit.
- ⑭ Please keep in a dry place without moisture.

1. Components

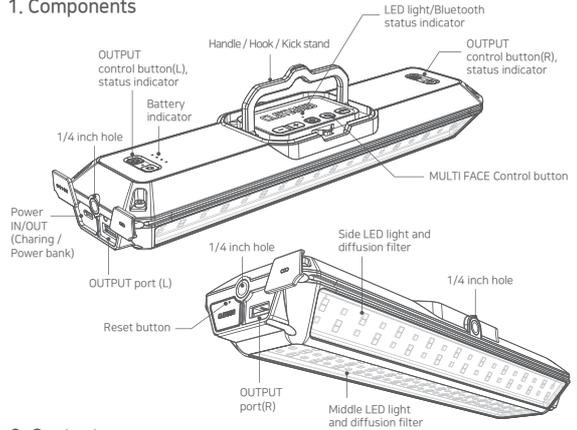

 2. Contents



3. Operation

 
● LED Lantern Function

ON/OFF & Connecting Bluetooth & Battery check



Press and hold (ON) button 2sec to turn on light. (Status indicator ON) Repeat to turn off light.
After the initial pairing, the lantern will automatically connect to the device when turned on light again.
▶ Please refer to CLAYMORE Apps manual for more information.
Battery indicator shows battery remaining. When turning on the lights.

5 STEP Dimming



When light is ON, press (+) button to increase brightness. Repeat to decrease brightness.
※ Light blink once when Maximum and Minimum brightness is reached.

Stepless Dimming



When light is ON, press and hold (+) button to increase brightness. press and hold (-) to decrease brightness.
※ Light blink once when Maximum and Minimum brightness is reached.

SOS-Flash



When light is ON, press and hold (SOS) button 5seconds to begin SOS signal. Repeat to end signal and return to previous light mode.

LED Color Change




When light is ON, press (Color) button shortly to adjust the light color in 5 mode.

Cool	LED light with 6500K, cool light feels like ordinary fluorescent light
Warm	LED light with 3000K, warm light feels like ordinary gas lantern
Orange	LED light with 1500K orange color feels like candle light
White	LED light with 4500K, a neutral color of daylight and comfortable feeling
Soft Warm	LED light with 2500K, mixed color of warm and orange, cozy and soft feeling

Mode Change



 When light is ON, press (Mode) button shortly to change mode. Front light ↔ Wide light



※ This lantern contains memory function that returns to the last setting when turn off and on.

● Charging Method



Open rubber cover on the left of the lamp and connect USB-C type cable to charge. When charging, battery indicator will flicker. If indicator does not blink and stays lit, it indicates charging is complete.


Battery indicator	Charging	Motion
● ● ● ●	~25%	Flickers
● ● ● ●	25-50%	
● ● ● ●	50-75%	
● ● ● ●	75%~	
● ● ● ●	Fully charged	Stops

※ If charging continues over 24 hours, it's automatically discontinue charging to protect battery. Unplug cable and plug again to resume charging.

※ When the Type-C cable is connected to the product, the power bank function is activated, so the battery level indicator may light for 30 seconds even when the charger is not connected.

● Power Bank Function

 Connect your device (Phone, USB devices) to the USB-C port using USB-C to USB-C cable. (charging commence automatically.)




● Connecting Accessories (CLAYMORE MULTI WING, UF5)

You can connect MULTI WING, UF5 to expand light distribution. Connect accessories (MULTI WING, UF5) to the OUTPUT connection port (USB-A) on both sides of the product.
※ MULTI WING, UF5 (String lights) not included.

You can supply power to other CLAYMORE products from USB-A OUTPUT port. Connect device to the USB-A port using USB-A to USB-C cable. Press and hold (Power) button 2sec to start supplying power. Repeat to stop supplying power.
※ Power bank function is not supported to other devices.

 2s ※ If you don't use connecting accessories, turn off the OUTPUT control power button to reduce unnecessary standby power consumption. (status indicator OFF)



● Reset Procedure

If the button does not work, press the reset button inside the hole on the right side of the product. (All LEDs are on when turn on when the power is turned on after initialization, all LEDs are on.)

5. Specification

Product name	CLAYMORE MULTI FACE L	CLAYMORE MULTI FACE X
Model No.	CLMF-3000LG/BK	CLMF-4000LG/BK
Color temperature	Cool: 6500K - Warm: 3000K - Orange: 1500K - Bright: 4500K - Soft Warm: 2500K	
Brightness	130~6,000Lm	160~7,500Lm
Operating time	8~80hrs	8~90hrs
Size	295x75x42.8mm	365x75x42.8mm
Weight	942g	1,202g
Battery capacity	10.89V 9,800mAh, 106.722Wh	14.52V 9,800mAh, 142.296Wh
Charging time	3hrs (PD 45W) 7hrs (18W)	3.5hrs (PD 45W) 8hrs (18W)
INPUT/OUTPUT	USB 5V 2A ~ 20V 2.3A (45W) Fast charge	
Origin	MADE IN KOREA	

※ Operating time may vary depending on the battery capacity and external environment.

低功率射頻器材警告


※根據NCC低功率射頻器材技術規範3.2.2規定:

- 取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
- 低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。
- 前述合法通信，指依電信管理法規規定作業之無線電通信。
- 低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

4. Installation

● Hook & Hnadle & Kick Stand

You can fold the hook on the top and use it as a handle. It can be hung by connecting a carabiner or mounted on the floor/table.

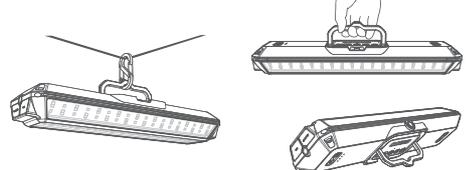

● Using tripod socket

Screw the camera tripod or lantern stand into the 1/4 inch tripod sockets at right, left, and middle of MULTI FACE to fix it. It can be used in various ways by connecting to all products using 1/4 inch screws. ※ Lantern stand is not included.



Caution When you connect MULTI FACE X and lantern stand, do not fix screws on both sides of the body, stand can be fall down.

Warranty

Item	CLAYMORE MULTI FACE L	CLAYMORE MULTI FACE X
Model No.	CLMF-3000LG/BK	CLMF-4000LG/BK
Seller		
Date of Purchase		

1. Thank you for purchasing CLAYMORE series of Prism Co., Ltd.
2. This product has passed strict quality control tests. If the product is not functioning properly, please contact an authorized service center.

Free Service

- 1) Failure of the product under normal operating conditions during the warranty period will be repaired by Prism or authorized service center on free of charge. Some shipping or handling charges may be involved.
- 2) Warranty period: 1 year.

Charged Service

- 1) Damage caused when the warranty period is over.
- 2) Damage caused due to the user's mishandling, abuse, or improper operation.
- 3) Damage caused by arbitrary or personal repair or disassemble in unauthorized service center.
- 4) Damage from input electricity or cable defect.
- 5) Damage caused by natural disaster.

CLAYMORE

Prism Co., Ltd.

221, Pyeongcheon-ro, Bupyeong-gu, Incheon, Republic of Korea

www.claymorelight.com · www.prismlight.co.kr · info@prismlight.co.kr