
CLAYMOR3 MULTI WING

CLAYMORE MULTI WING

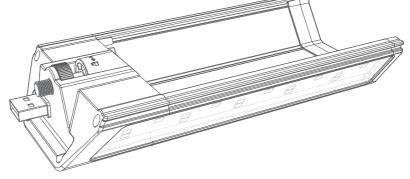


User Manual

Please follow the user manual before use. If any abnormality is found in the product, discontinue use and contact the dealer or a service center where the product was purchased. Any modifications of this product will void the warranty. Misuse of CLAYMORE products may cause user harm.

▲ Caution

- ⑦ Do not use near high temperatures such as fires or heating equipments It may cause explosion or ignition.
- ② This product is water resistant. However, if left in the rain for a long time, it may cause malfunction If the product gets soaked, please quickly wipe it off.
- ③ Do not store or use in vehicles exposed to direct sunlight. It may cause explosion and malfunction
- (a) Do not touch the light source directly as it may become very hot during use. Use handle to carry out.
 (b) Do not use if it exceeds the operating temperature range (-10 °C to 40 °C).
- (6) Please do not place in the reach of infants. It may cause swallowing of parts or injury
- ② Adult supervision is necessary when used by children. Misuse of light may cause injury or electric shock. (8) Do not insert any metal parts into the terminal block of the connector
- Denotiniser cany incluiparism to the denomination of the denomination of
- (1) Do not touch the connector with wet hands. There is a danger of electric shock
- ① After use, be sure to turn off the power.
- (2) Do not forcefully fold connector, It may damage product,
- (1) If the product is dropped or experiences physical shock, damage may be accumulate the product and unexpected malfunction may occur even during normal use.
- Be careful not to apply physical shocks to the main unit,
- Please keep in a dry place without moisture.

1. Components

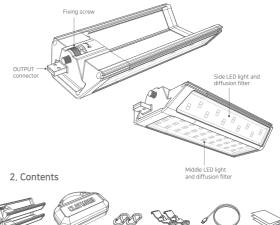


er(×2)




3. Operation

• Connecting to MULTI FACE main body.

 Connect the MULTI WING connector to the left and right OUTPUT ports (USB-A) of the MULTI FACE After connecting, screw the fixing screw at the top into the tripod socket to fix it.

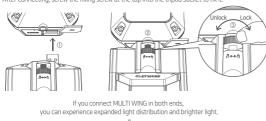



4. Specification



with extension cable, you can hang with carabiner. Possible to adjust the angle of the light by sliding the hook back and forth.









* Connecting to MULTI FACE					
	MULTI FACE OFF + MULTI WING(2pcs) ON		MULTI FACE ON + MULTI WING(2pcs) ON		
	Connecting to MULTI FACE L	Connecting to MULTI FACE ${\bf X}$	Connecting to MULTI FACE L	Connecting to MULTI FACE X	
Brightness	180~2,300Lm		560~8,300Lm	680~9,800Lm	
Operating time	12~47hrs	15~80hrs	5~32hrs	5~40hrs	
X. Operating time may yang depending on the battery canacity and external environment					

 LED Lantern Function ↓ () 2s

Area M

* If you don't use MULTI WING turn off 🛞 power to reduce

↓1X

Ø

6

Π

J, 1X

8++6

Ī

Q

M

M

Π

ON/OFF

Press and hold () button on the left and right sides of the MULTI FACE for 2sec to turn on light. (status indicator ON). Repeat to turn off light.

sary standby power consumption. (status indicator OFF)

5 STEP Dimming

When light is ON, press 🛞 button to increase brightness Repeat to decrease brightness. Light blinks once when Maximum and Minimum brightness is reached.

LED Color Change

en light is ON, press⊙ button shortly to adjust light color in 4 modes. ol--Warm→White→Breeze

	LED light with 6500K, cool light feels like ordinary fluorescent light
m	LED light with 3000K, warm light feels like ordinary gas lantern
te	LED light with 4500K, a neutral color of daylight and comfortable feeling
ze	The light swaying in the softly blowing wind

bry function that returns to the last setting when turn off and on. ※ This lant

Warranty

Item	CLAYMORE MULTI WING
Model No.	CLMW-01LG/BK
Seller	
Date of Purchase	

- Thank you for purchasing CLAYMORE series of Prism Co., Ltd.
 This product has passed strict quality control tests. If the product is not functioning properly, please contact an authorized service center.

Free Service

Pailure of the product under normal operating conditions during the warranty period will be repaired by Prism or authorized service center on free of charge. Some shipping or handling charges may be involved.
 Warranty period: 1 year.

Charged Service

- The second service
 To Damage caused when the warranty period is over.
 Damage caused when the warranty period is over.
 Damage caused when the warranty period is over.
 Damage caused by arbitrary or personal repair or disassemble in unauthorized service center.
 Damage caused by arbitrary of able defect.
 Damage caused by natural disaster.

CLAYMORJ

Prism Co., Ltd. , Bupyeong-gu, Incheon, Republic of Korea om · www.prismlight.co.kr · info@prismlight