CLAYMOR3 LAMP

Athena



User Manual

CLAYMORE LAMP 'Athena' CLL-781MG/BK/WH

MADE IN KOREA

This portable light contains a Li-ion battery. Please follow the user manual before use.

 
If any abnormality is found in the product, discontinue use and contact the dealer or a service center where the product was purchased. Any modifications of this product will void the warranty. Misuse of CLAYMORE products may cause user harm.



- ① When using product for the first time or storing for an extended period, please charge the battery fully. ② Keep out of reach of children. (For children under the age of 10, please use under adult supervision.)
- 3 Do not disassemble modify or repair on your own.
- 6 Do not disassemble, modify the rechargeable battery. It may cause an accident or injury due to ignition, leakage, heat generation, or rupture. Be careful in humid environments (e.g. bathroom) or flooding. Discontinue use in case of contact with water.
- © If the temperature rises or the outer appearance deforms during charging, discontinue use and contact
- 3 Do not use it in high temperature environments such as near fire or heating appliances.
- It may cause explosion or ignition.


 ® Do not touch with wet hands. There is a danger of electric shock,
- ® Do not use in conditions exceeding the acceptable operating temperature range (-10°C~40°C).
 ® Do not store or use in vehicles exposed to direct sunlight. It may cause explosion or malfunction.
 ® Do not charge it in contact with easily flammable materials like carpets or blankets.
- After use, be sure to turn off the power for storage. If the product is dropped or experiences physical shock, damage may be accumulated inside the product and
- pected malfunction may occur even during normal use. Be careful not to apply physical shocks to the main unit,
- Caution in the use of repeller -
- Do not use in confined space and make sure to use it in ventilation.
 Do not cover it with blanket or bedclothes. It may cause ignition
- Do not put it aside or upside down when it is in operation. Do not use it for other purposes except for the intended purpose and method of use.
- ① Do not use it near combustibles such as furniture, curtain, sofa. ② Keep out of reach of children.
 ③ Use out of reach of children, and make sure that your children are not to play with the used mat, Throw away the mat after use,
- Do not use in confined space and make sure to use it in ventilation (2) If you have a symptoms of poisoning, stop using it. Receive medical treatment immediately.
- ® Do not touch or put metal on the heat plate when it is in operation. (9) Do not cover it with blanket or bedclothes, It may cause ignition,
- (1) Make sure that the repeller faces upward when it is in operation. (1) Turn off the power when it is not in operation.
- @ Do not touch the hot mat, @ Avoid constant exposure to a sensitive person
- Be aware that if volatile substance is scattered by air conditioner or fan wind or ventilation, it may be ineffective.
- (6) When using indoors, use only one mat.

* Place the leather hook in the opposite direction of the repeller cover Components



Operation

 
LED Lantern Function



Press the button shortly to turn on the light. On:Mood1 > Mood2 > Mood3 > OFF * When Off states, press * button to display

 remaining battery level. [3 different light mood]






When light is on, push and hold button to adjust brightness to increase brightness. Push and hold button once again to decrease brightness

* The indicator will blink once when the maximum and minimum brightness is reached.


Mosquito repeller

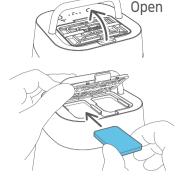

Open cover > Put a mat on the heat plate > Close cover

A When using indoors, use only one mat.

 Mosquito Repeller power button




MAT1 ON: When repeller is Off, Press (**) over 2seconds MAT2 ON: When MAT1 is On, press(**) shortly Simultaneous MAT1 and 2: When MAT2 is on, press (**) shortly, Repeller OFF: When MAT1&2 is on, press (**) shortly. ON: MAT 1 > MAT 2 > MAT 1 & MAT 2 > OFF

Do not touch or put your fingers on the heat plate.

* When the Mosquito repeller is on, maximum brightness is limited up to 50%.

 Charging Method



Open rubber cover on the back of the lamp and connect USB-C type cable to charge it. When charging, battery indicator will flicker. If indicator does not blink and stays lit, it indicates charging is complete.

Battery indicator	Charging	
~ 000	~25%	
• 😈 0 0	25~50%	Flickers
• • ` o	50~75%	
• • • 🐇	75%~	
0 0 0 0	Fully charged	Stops

Power Bank Function



Open the rubber cover on the back of the lamp and connect the USB cable to the charging port to initiate charging. When charging, charging indicator will light up.

* It is not possible to charge the product and use the power bank


* Charging time may vary depending on the battery capacity of the product or external devices and the external environment.

Specification

Product name CLAYMORE LAMP 'Athena' Model No. CLL-781MG/BK/WH Color temperature 1,300K - 1,500K - 3,000K
Color temperature 1,300K - 1,500K - 3,000K
Brightness 24~440Lm
Operating time Lantern Mosquito repeller Lantern + Mosquito repeller
10~75hour 7~14hour 6~11hour
Size 144×144×180.8mm
Weight 520g
Battery capacity Li-ion 3.6V 10,050mAh (36.18Wh)
Charging time 7hour
Input USB 5V 2A
Output 5V 2A
Origin MADE IN KOREA

Installation

You can put it on the floor/table or use accessories to create a variety of presentations.

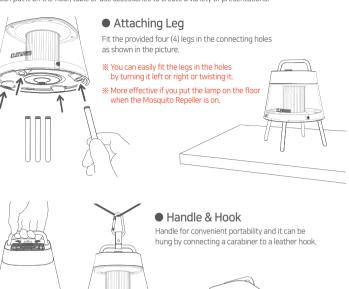

Using tripod socket

Screw the camera tripod, lantern stand into the 1/4 inch tripod socket at the bottom to fix it. It can be used in various ways by connecting to all products using 1/4 inch screws.

* Lantern stand is not included.

Warranty

Item	CLAYMORE LAMP 'Athena'
Model No.	CLL-781MG/BK/WH
Seller	
Date of Purchase	

- 1. Thank you for purchasing CLAYMORE series of Prism Co., Ltd.
- 2. This product has passed strict quality control tests. If the product is not functioning properly, please contact an authorized service center.

Free Service

- 1) Failure of the product under normal operating conditions during the warranty period will be repaired by Prism or authorized service center on free of charge. Some shipping or handling charges may be involved.
- 2) Warranty period: 1 year.

Charged Service

- 1) Damage caused when the warranty period is over.
- 2) Damage caused due to the user's mishandling, abuse, or improper operation.
- 3) Damage caused by arbitrary or personal repair or disassemble in unauthorized service center
- 4) Damage from input electricity or cable defect.
- 5) Damage caused by natural disaster.

CLAYMOR3

Prism Co Ltd

221, Pyeongcheon-ro, Bupyeong-gu, Incheon, Republic of Korea www.claymorelight.com · www.prismlight.co.kr · info@prismlight.co.kr