


CLAYMORE FAN

V1040

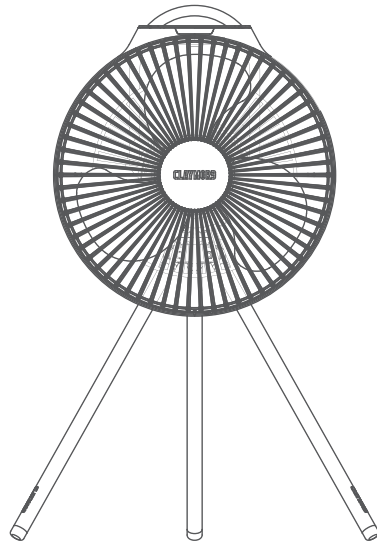

User Manual


CLAYMORE FAN V1040

CLFN-V1040(BK/WG)



Caution

- 1) When using product for the first time or storing for an extended period, please charge the battery fully.
- 2) Overheating due to continuous use for an extended time may cause safety accidents such as product failure, fire, etc. After 3~4 hours of continuous use, discontinue use to allow product to cool.
- 3) Do not put objects or fingers into the operating fan. (Be careful of hair getting caught.)
- 4) Keep out of reach of children. (For children under the age of 10, please use under adult supervision.)
- 5) Do not disassemble, modify, or repair on your own.
- 6) Be careful of wet environments (bathroom) and discontinue use if it has water damage.
- 7) If the temperature rises or the outer appearance deforms during charging, discontinue use and contact a customer center.
- 8) Do not use it in high temperature environments such as near fire or heating appliances. It may cause explosion or ignition.
- 9) Do not bend beyond the allowed angle adjustment. This may cause damage to the product.
- 10) Do not use in conditions exceeding the acceptable operating temperature range (-10°C~40°C).
- 11) Do not store or use in vehicles exposed to direct sunlight. It may cause explosion or malfunction.
- 12) Do not charge it in contact with easily flammable materials like carpets or blankets.
- 13) After use, be sure to turn off the power for storage.
- 14) If the product is dropped or experiences physical shock, damage may be accumulated inside the product and unexpected malfunction may occur even during normal use. Be careful not to apply physical shocks to the main unit.

Components

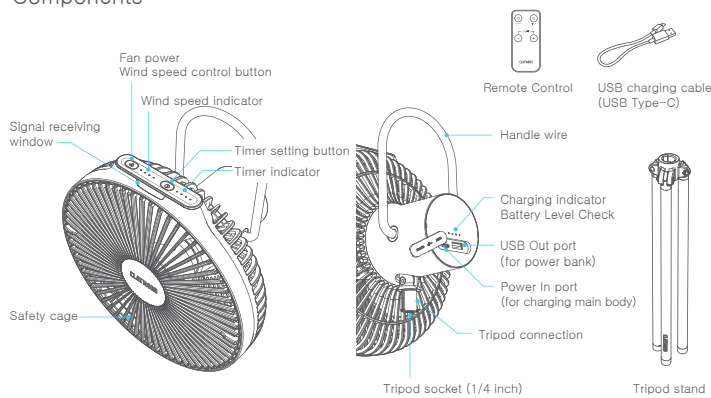

Instructions

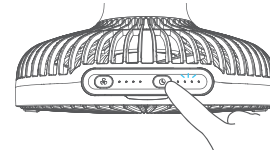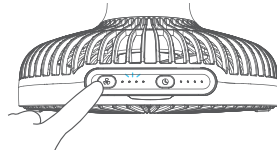

Fan power and wind speed control

- When the speed button is pressed, it changes in the order of 1 -2 -3 -4 -OFF.
- The right indicator lights up when the fan is on.

Wind speed indicator

● ● ● ●	1 (Ultra low)
● ● ● ○	2 (Low)
● ● ● ●	3 (Medium)
● ● ● ●	4 (High)
○ ○ ○ ○	Turn off

Timer setting



- After starting the fan, press the timer button to set the timer for 1 hour -2 hours -3 hours -4 hours.
- The right indicator lights up when the timer is on.

Timer indicator

● ● ● ●	1 level per button press	1 hour
● ● ● ○		2 hour
● ● ● ●		3 hour
● ● ● ●		4 hour
○ ○ ○ ○		Turn off

Remote Control


Aim the remote control at the receiving window of the main unit. There is a built-in magnet on the back of the product, when the remote controller is not used, attach it as shown in the figure.

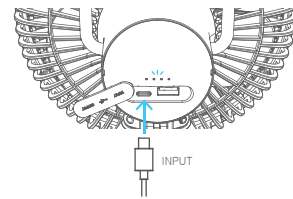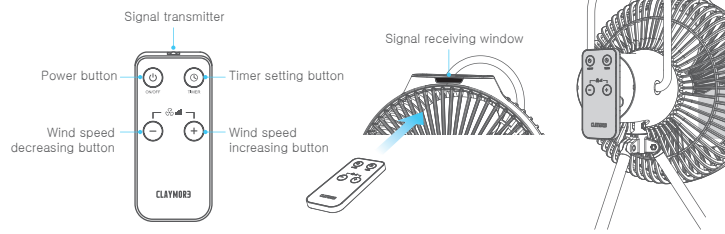

Charging


Open the rubber cover on the back of the main unit and connect the USB cable to the charging port to initiate charging. When charging, battery indicator will flicker in 4 steps to show remaining battery. All 4 indicators turn on when fully charged.

Battery indicator	Charging	
● ● ● ●	~25%	Flickers
● ● ● ○	25~50%	
● ● ● ●	50~75%	
● ● ● ●	75%~	
● ● ● ●	Fully charged	Stop

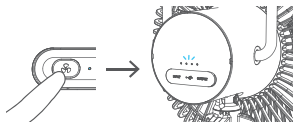

Battery Level Check

When power (wind speed) button on product or remote control is pressed while fan is activated, battery indicator on the back displays battery remaining for 30 seconds

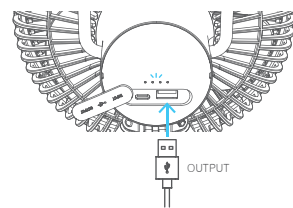


Power bank function(external USB charging)

Charging starts automatically if you plug the included charging cable or the charging cable provided by a USB device (smart phone, tablet, PC, etc.) into the USB Out port of the product. (On: Battery indicator is on)

* Charging time may vary depending on the battery capacity of the product or external devices and the external environment.


Installation

Align the tripod stand with the groove on the tripod connection and turn it to the right as shown in the figure. You can set the desired height by adjusting the angle of the leg.

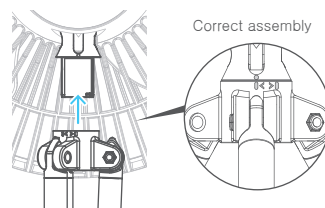



Tripod socket

Other than the tripod included, it can be mounted on other tripods as well. Compatible with all accessories using 1/4-inch screws.

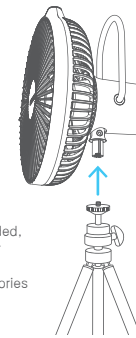

Up and down angle adjustment

The angle of the head can be adjusted up to 60 degrees.

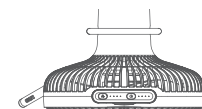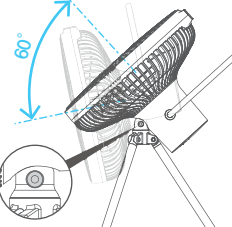


Left and right adjustment of head is not available. If you force it to adjust the angle, it may damage the product.



* If the angle adjustment part becomes loose, use a hexagon wrench to tighten it.

Handle, Stand & Hook

There is a handle on the back of the product for convenient portability. When using it without a tripod, a stand can be used, or it can be used upside down by connecting a carabiner.

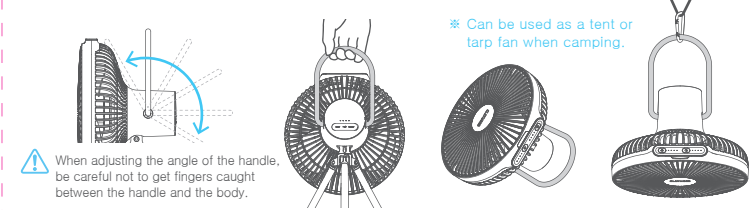

How to separate and clean the safety cage

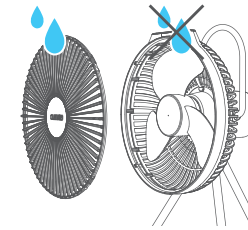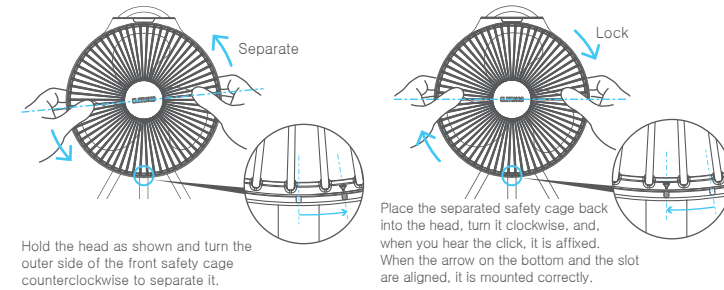

The safety cage can be washed with water after separation. After washing, dry it well before re-mounting it onto the main unit.

* Be sure to turn off the power when separating the safety cage.

Do not wash the main unit with water. Please wipe it with a wet wipe or a dry cloth.

* The blades cannot be separated.

Warranty

Item	CLAYMORE FAN V1040
Model No.	CLFN-V1040(BK/WG)
Seller	
Date of Purchase	

1. Thank you for purchasing CLAYMORE series of Prism Co., Ltd.
2. This product has passed strict quality control tests. If the product is not functioning properly, please contact an authorized service center listed below.

Free Service

- 1) Failure of the product under normal operating conditions during the warranty period will be repaired by Prism or authorized service center on free of charge. Some shipping or handling charges may be involved.
- 2) Warranty period: 1 year

Charged Service

- 1) Damage caused when the warranty period is over
- 2) Damage caused due to the user's mishandling, abuse, or improper operation
- 3) Damage caused by arbitrary or personal repair or disassemble in unauthorized service center
- 4) Damage from input electricity or cable defect
- 5) Damage caused by natural disaster

Specifications

Product name	CLAYMORE FAN V1040	Model	CLFN-V1040(BK/WG)
Power consumption	12W	Battery type/capacity	Li-ion 3.6V 10,400mAh(37.44Wh)
Size	282 x 252 x 410mm	Weight	910g
Input	USB 5V 2A	Run time	7 hour ~ 23 hour
Output	5V 1A	Charging time	5.5 hour

CLAYMORE

Prism Co., Ltd.

221, Pyeongcheon-ro, Bupyeong-gu, Incheon, Republic of Korea
www.claymorelight.com · www.prismlight.co.kr · info@prismlight.co.kr