

## Safety directory

Please cautiously read before installing and using.

### Warning-To avoid electric shock

1. Do not place the product where it may get wet.
2. Do not drop the remote control into the water.
3. Do not spray water into the product or plug.

### Warning: To prevent the possibility of burns, electric shocks, fires and injuries.

1. Young children, temperature insensitive users, when using this product, should be accompanied by others. And turn off or lower the seat temperature.
2. The product is limited to the function on the manual, do not use other equipments.
3. Do not continue to use when the product is out of order, damaged or flooded. Please send the product to the designated repair center for repair.
4. Please make sure that the wires are not damaged by burning.
5. Do not use this product when you are out of your mind.
6. Do not plug the product or pipe.
7. Do not use outdoors.

### Please be sure to observe the following

Please don't sprinkle urine at the essence and spray.

Pull out the plug when it thunders.

Strictly forbid to directly flush with water.

Please do not wipe seat and cover with dry cloth or toilet paper.

Please do not open the seat ring or cover violently.  
- May cause cracking or malfunction.



Please take antifreeze measures to prevent damage caused by freezing.



Please do not put heaters near this product.  
- Discoloration or malfunction will occur



## Safety Caution


Note: please cautiously read before using

Please read carefully before using. The cautions listed here are related to safety and please follow. 

This product is an electrical product. Please do not install it in a place where it is easy to be splashed by water or high humidity. When using in the bathroom, please install a vent to keep good air flow in the bathroom.

The socket for power distribution should be set as follows





- The gearing position of electric outlet pleases to give examples 0.3 min the ground above, and leave bathtub as far as possible a little bit farer.
- The back track of electric outlet pleases use a high feeling and rapid type electric leakage switch(the sum certainly responds the electric current 15 mA following) or use to insulate the transformer 1.5 KVA above, the 3 KVA is following)carry on a protection.

 The product connects a ground of line to carry on to connect a ground of processing, if has never carried on to connect a ground of processing, may arouses to get an electric shock.

Note: the grounding treatment mentioned here means that the grounding resistance is below 100Ω, and the grounding wires of the switchboard shall be copper wires with a diameter of more than 1.6mm.

While using in the bathroom please confirm the power plug have already used silica gel to carry on a waterproof processing.

### Examples and illustrations of ICONS

	 It is not feasible (prohibited). The image on the left shows (disassembly is prohibited).
	 Represents something that must be (enforced).The left-hand diagram shows (must comply).

#### Notice heat burn

- Please turn the seat temperature down or off when sitting on the toilet for a long time.
- Please set the temperature to room temperature when the following persons use the seat to dry gently.

- Children, the elderly, the sick, the disabled, etc.
- People who take sleeping pills, get drunk and get overtired.

#### Do not use any power source other than AC 220V/110V

- It may start a fire

#### Keep cigarettes and other fire kindling away from the product

- It may start a fire

#### Do not use loose and unstable power sockets

- It may cause fire or electric shock

#### Please don't sprinkle water or rinse on product essence or the power plug.

- May arouse a fire or get an electric shock
- May cause toilet break, damage or indoor seepage.

#### When long time didn't use, please pull out the power plug.

- For safety, please pull out the power plug
- For re-use, please drain water for one minute before use.

#### Please do not flush other items except for urine and feces

- May cause then block, sewage outside overflows.

#### Do not unplug the power plug with wet hands

- It may cause electric shock

#### Do not distort or damage the water inlet

- It may cause a leak



Must obey



Prohibit

**Do not continue to use the product when it breaks down**

When the following occurs, please unplug the power plug, close the inlet Angle valve, stop the inlet.

- Ceramic WC is leaking
- Cracks appear
- Abnormal sound and smell
- Fume-off
- Abnormal heating
- The toilet is clogged

- If continued under the condition of failure, it may cause fire, electric shock or indoor seepage problems

**Do not disassemble, repair or transform the product without permission**

- It may cause a fire or electric shock

**Do not install this product in damp places such as bathrooms**

- It may cause a fire or electric shock

**Do not damage the power cord or toilet seat cable**

- Don't pull
- Don't process
- Don't heat
- Don't forcibly bent
- Do not place heavy objects on the power cord and toilet seat connection line.

- May cause fire, electric shock or short circuit. If the power supply is damaged, please contact a professional for repair.

**Do not use extension wires, otherwise, it may cause a fire or electric shock**

- Do not connect wires or use extension cords, which may cause fire and electric shock.

 
**Do not use unhealthy water**

- May cause skin irritation and other problems

**The first use of Intelligent toilet**

Note: To ensure the normal use of the product, please follow the instructions to text.

- 1.Insert the power plug into the AC (AC) 110V socket
- 2.Please confirm whether the indicator of the digital display panel is lit
- 3.Confirm whether the inlet valve is take on
- 4.Whether the hose between the wall Angle valve and the toilet inlet valve is installed in place

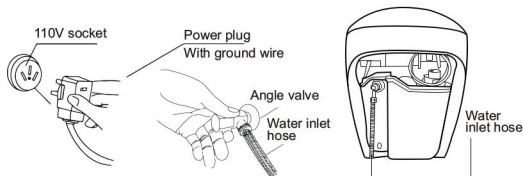


**Caution-Confirmed matters before using**

- 1.Check whether the sprinkler head and water pipe leak, dry all parts of the water pipe and check with blotting paper.
- 2.Press the seat around the seat sensor, whether there is a sound.
- 3.Check whether the cleaning, drying, automatic deodorization and automatic flushing are normal
- 4.Whether the Damped structure is normal.

Check the functions of cleaning, drying and automatic deodorization, make sure the sensor is on.When cleaning, cover and block the spray nozzle, so as not to splash.

 Seating sensing position

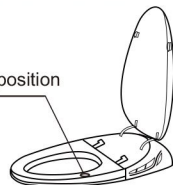

**Warning - Be sure to firmly connect ground wires**

The power plug of this product is a three-phase plug (with ground wire). There is a danger of electric shock when there is a fault or leakage of electricity. If there is no ground plug in the socket, consult with the electrical installation company. Do not use power supply other than AC 220V/110V, please wiring according to relevant regulations.

\*Using the wrong power supply can easily cause fire\*

1. Radar switches to foot cover: long press cover button on the remote control until it beeps;
2. Turn off | turn on the wall moistening function: turn off the power on the remote control, long press the flush button; one beep means it is turned off and two beeps means it is turned on;
3. Turn off | turn on disseat water flushing: long press the flush button; one beep means it is turned off and two beeps means it is turned on;
4. Turn off | turn on the function of flushing upon cover falling: turn off the power on the remote control, long press the cover button on the remote control; one beep means it is turned off and two beeps means it is turned on;
5. Turn on | turn off voice broadcast:press the stop button and energy saving button on the remote control at the same time

## Instructions for remote control

Note: Please read the following carefully before use

### Power switch

Click this button to open or closed the machine power supply.

### Drying

Seated then press this key, carries on the warm air drying, then it will automatically stop after 3 minutes

### Stop

Can stop the the running functions such as "hip/female cleaning" and "drying"

### Hip/spray moveable

Click this button, the hip wash nozzle will be in a fixed position to stop injection automatically after 2 minutes. Press this button again to clean mobile process

### Female/spray moveable

Click this button, the female wash nozzle will be in a fixed position to stop spraying automatically after 2 minutes. Press this button again to clean mobile clean process

### Wind Temperature

Four gear can adjust the wind temperature. Temperature can be set for the normal. Green is about 34°C, yellow is about 37°C, red is about 40°C

### Water temperature

Four gear can adjust the water temperature. The water temperature can be set for water no heating, Green is about 34°C, yellow is about 37°C, red is about 40°C

### Seat temperature

Four seat temperature adjustable. Temperature can be set for the normal, Green is about 34°C, yellow is about 37°C, red is about 40°C

### Flow regulating

Can increase or reduce the washing water pressure. Wash water pressure can be set for the weak, medium and strong, the strongest

### Full automatic flip

Click this button, the seat cover open automatically, and then press it again, the seat cover take off automatically

### Automatic turn circle

Click this button, automatic seat open, press the button again, the seat closed automatically.

### Position adjust

Press this button when using the "hip/female cleaning" in the process of the injection, and can adjust the position of the nozzle forward or backward without using

### Flush

Click this button, start flushing function

### Nozzle

Nozzle extended and water out for hand nozzle washing

### Night light

In the boot state, can be opened and closed night light

### Match code of remote control

Long press implement side hip cleaning after three seconds after it take a sound, press any key, remote control of code completion.



This button is limited to induction turn flip design

Note: when used for the first time, it needs to match code if no response to the remote control Can remote control code.

## Side knob instructions



Power on/off: long press the knob for more than 3 seconds

Hip cleaning: Turn the knob to the right

Female cleaning: Turn the knob to the left

Stop: Press the knob once

Toilet flushing: Quickly press the knob twice (within 0.7s)

Warm air drying: Press the knob for 2 times quickly when seating

## Description of other functions

**Flushing by foot sensor** Close to the foot sensor, turn on the scour function (manual clamshell)

**Open cover and seat by foot sensor** Close to the foot sensor, automatically open/close cover and seat (automatic flip cover)

**Radar automatic clamshell function** Close to the toilet, automatically open the cover, automatically close the cover after leaving and flush automatically (automatic flip cover)

## Daily cleaning and maintenance

Note: During cleaning and maintenance, please be sure to unplug the power switch and power off

 
### Smart toilet cleaning and maintenance methods

Please wipe it with a soft cloth dampened with water

- If the dirt is not removed in time, it will become difficult to clean, please wipe with water sometimes.

- Static electricity will absorb dust, resulting in the product black, dirty, water wipe can prevent the generation of static electricity.

- The ceramic body can be removed from the toilet seat to facilitate cleaning between the toilet seat and the ceramic body.

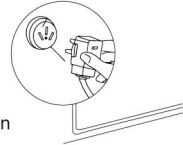


Unplug the power supply before maintenance

### Cleaning and maintenance of spray head

 If there is dirt in the nozzle. Please clean it with a small brush such as a toothbrush.

- Do not stretch and bend the spray head.

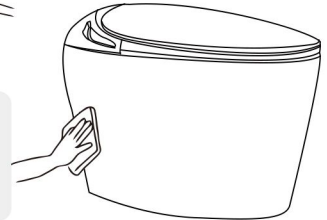

### Clean the dust on the power plug regularly

When cleaning, remove the power plug and wipe with a dry cleaning cloth.

Must obey - Poor insulation may cause a fire.

## Common fault diagnosis

Note: If similar fault is found, please read the following solution or contact after sales

Fault phenomenon	Fault analysis	Fault handling
Product unavailable	Check to see if the power/socket is loose	Please check the circuit
	Whether there is leakage (the display light of leakage protection plug is not on)	Remove the power plug from the socket and replug it later. Press the reset switch of the leakage protection plug. If the elbow still cannot be operated, please unplug the power plug and entrust the repair.
No water with spray	Check if water is cut off	Pending resumption of water supply
	Check that the Angle valve is closed	Open the Angle valve
	Check if the inlet filter is blocked	Clean or replace the filter
	Check the inlet pipe for bends	Exclude the intake bend
Cleaning insufficient rigidity	Check whether the cleaning pressure is at the lowest level	Refer to the instruction manual for regulating the water pressure
	Check if the inlet filter is blocked	Clean or replace the filter
Spray water disorderly	Abnormal operation	Unplug the plug for one minute and then switch it back on
water temperature is not enough	Check that the water temperature is set low	Adjust the water temperature according to the instructions
	Whether the hot and cold massage function is on	Turn off the hot and cold massage function according to the instructions
The washer often drips water	Solenoid valve failure	Please get professional maintenance technicians

Fault phenomenon	Fault analysis	Fault handling
Misoperation of remote control	Check the battery level of the remote control is it too low	Please replace the battery
Drying/seat temperature too low/no heating	Check whether the temperature is set at low or normal temperature	Adjust the temperature according to the instruction
	Whether to turn on the power saving function	Refer to the manual to choose to turn off the power saving function
Seat/ cover falling too fast	Failure of damping drop function	Please get professional maintenance technicians
The cleaning function cannot be used normally	Is there any other hard material holding it under the seat	Remove the hard objects
	Whether the body's sensing area is covered	Adjust the body sensing area of the seat cover
	Whether the power supply is restored during the power failure	Unplug the plug for one minute and then switch it back on
	The skin completely cover the human body induction area of the seat	Sensor failure, please get professional maintenance technicians
Seat/cover cannot be opened or closed * Only for automatic flip machines	Failure of automatic damping function	1. Disconnect the plug for one minute and switch it back on 2. The above treatment is invalid, please ask professional personnel for maintenance
Low water pressure does not flush clean	Filter mist blocking	Clean the filter according to the instruction
	Pipe bending	Observe whether the connection line bends and keep the water supply line smooth
No siphon flushing is not clean when water pressure is normal	Air escapes from the sewage outlet	Please get professional maintenance technicians
	The S-bend is blocked	Please buy water pipe dredger in the market for dredging
Flush is not clean when water pressure normal	Flush valve failure	Ask professionals for maintenance

## Product standard

<b>Rated voltage</b>	Alternating voltage 220V/110V±10%, 50HZ/60HZ		
<b>Rated power</b>	Water inlet temperature: 15°C      Outlet water temperature: 40°C Water discharge: 750ml/min      Power: 1350W		
<b>Cleaning</b>	Water outlet	Hip cleaning	About 700 ml/min
		Female cleaning	About 700 ml/min
	Outlet water temperature		Normal temperature, and 34°C/37°C/40°C(4 grades)
	Water heating		Instant water heater
	Heater power		Water inlet temperature: 15°C , Outlet water temperature: 40°C Water discharge: 750ml/min      Power: 1350W
Safety device		Water temperature sensor, Temperature blocking filament, Temperature controller, Leakage protector	
<b>Seat heating</b>	Seat temperature		Normal temperature, and 34°C/37°C/40°C(4 grades)
	Heater power		40W
	Safety device		Water temperature sensor, Temperature blocking filament
<b>Warm drying</b>	Wind temperature		Normal temperature, and 35°C/45°C/55°C(4 grades)
	Air flow		>0.2m3/min
	Heater power		220W average(The maximum is about 350W)
	Safety device		Bimetallic strip, Temperature blocking filament
<b>Deodorize</b>	Type	Activated carbon high efficiency filter	
<b>Mobile cleaning</b>		The spray head can move 1.5cm forward and backward	
<b>Spray position</b>		Adjustable Fore and Aft	
<b>Water temperature</b>		5~40°	
<b>Water pressure</b>		0.15-0.75 Mpa (static) is about 5L of water in 15 seconds	

Due to the different printing time of the materials, the product specifications may be slightly changed. Please refer to the material object.