

babybrezza®
one step™ sterilizer dryer
advanced



Instructions

PLEASE NOTE: It is extremely important to descale & clean the sterilizer every 2 weeks or as necessary. All bottles, pump parts & accessories must be empty, clean and rinsed before use in the sterilizer-dryer

IMPORTANT SAFEGUARDS

 
When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully before using your sterilizer.
2. Ensure that the supply voltage marked on the appliance corresponds with your power supply.
3. If there is any visible damage to the appliance, the plug or to the supply cord, disconnect the appliance immediately and do not use it.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
5. Do not allow children to touch or use the appliance. The appliance becomes very hot and the steam can cause severe scalding.
6. Do not move the appliance when it is in use or contains hot liquids.
7. Do not touch the hot surfaces.
8. Do not place the appliance on or near hot surfaces, in a heated oven or near a gas or electric heater.
9. Unplug the appliance from the power supply before cleaning or storage.
10. Do not immerse the supply cord, plug or base unit in water or any other liquid.
11. This Sterilizer base does not contain any user serviceable parts inside. Do not dismantle.
12. This appliance is for indoor household use only. Do not use outdoors.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. a) Short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
b) Extension cords are available and may be used if care is exercised in their use.
c) If an extension cord is used: The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance; The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).
15. Children should be supervised to ensure that they do not play with the appliance. User maintenance shall not be made by children with supervision.
16. Not for space heating purpose.
17. Always use on a level heat resistant surface.
18. Always keep the electric sterilizer and its plug out of reach of small children.
19. To disconnect, turn any control "off"; then remove plug from wall outlet.
20. Ensure water has been added to the base unit before the sterilization cycle is switched on.
21. Always add 165ml of distilled water before use. If you put too little or too much water into the sterilizer, the sterilization efficiency may not be reached.
22. Always unplug from the electric outlet when not in use. Allow to cool before putting on or taking off any parts.
23. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
24. The use of accessory attachments is not recommended by the appliance manufacturer as this may cause injuries.
25. This sterilizer is intended to be used in household and similar application such as a. staff kitchen areas in shops, offices and other working environments. b. farm houses. c. by clients in hotels, motels and other residential type of environments. d. bed and breakfast.
26. Do not open while in use as this product contains boiling water. Beware of escaping steam from the vent holes in the lid.
27. Allow at least 30 minutes interval between operations and make sure the unit has been cooled down before pressing the start button for sequential use.
28. Steam escaping from the unit can cause burns. Always allow 5 minutes to cool down after the cycle finishes before lifting the lid.
29. To provide continued protection against risk of electric shock, connect to properly grounded outlets only.
30. CAUTION: Risk of electric shock, disconnect electric power before servicing.
31. Use only distilled water, bottled water or fresh running water to sterilize.
32. Never use any additives.
33. Do not let cord hang over edge of table or counter or touch hot surface.
34. Except cleaning, any other servicing should be performed by an authorized service representative.
35. After heating or all the water is removed from the sterilizer base, the heater surface is subject to residual heat after use.
36. This appliance can be used by children aged from 8 years and above and reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning used of the appliance in a safe way and understand the hazards involved.
37. Avoid spillage on the connector.
38. The appliance potential injury from misuse. Such as putting liquid that other than water to the sterilizer base.
39. This appliance not intended for food or infant formula warming and cooking.





This marking indicates that products should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or Contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Sterilizer Dryer Parts

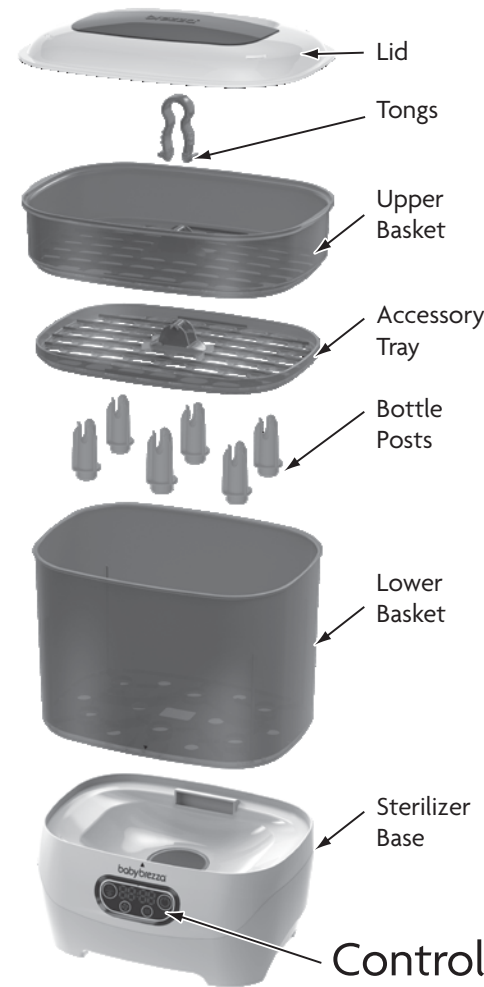

Filter Components

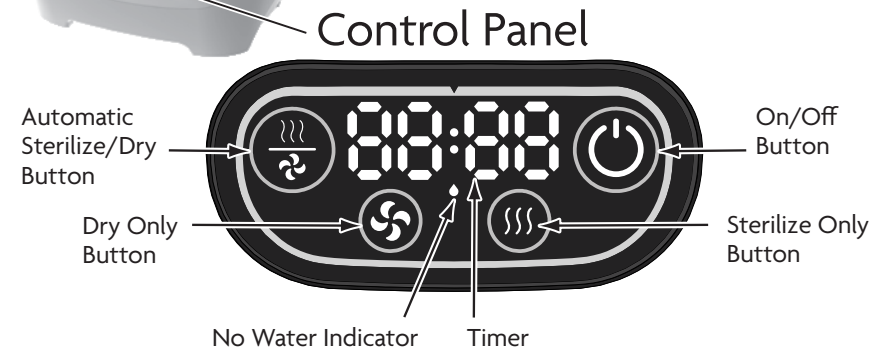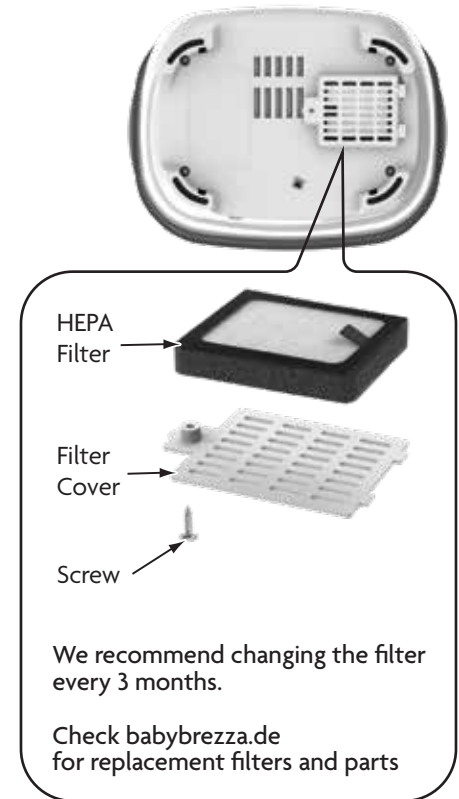  

TECHNICAL DATA	Model: BRZ0069S/BRZ0069SEU
Supply voltage: 220-240V ~ 50-60Hz	Power: 700W


SAVE THESE INSTRUCTIONS

Set-up and Use


Before placing items in the appliance for sterilization it is important that

All bottles, pump parts and accessories must be EMPTY, CLEAN & FULLY


RINSED BEFORE USE in this sterilizer dryer

1. Place the appliance on a flat surface where it is out of reach of children and it will not be knocked or moved during operation.
2. Remove the lid, baskets and accessory rack from the sterilizer base.
3. Pour water on the base/heater surface to MAX line (165ml/5.5oz). Never fill past MAX line. We recommend using distilled water to avoid mineral scale build-up on the heating plate. However, you can use bottled water or tap water but you may need to descale more frequently.
4. Place the lower basket on the base.
5. Place clean bottles with their opening facing downward on the bottle posts
6. Place the accessory tray in the lower basket (tray not for use with tall bottles).
7. Place bottle accessories on the accessory rack (nipples, collars, caps, etc)
8. Place the upper basket on top of the lower basket, ensuring that it fits securely without any gaps.
9. Place breast pump parts or more accessories in the upper basket.
10. Press the On/Off  button once and the function icons will light up. Choose your desired function following the instructions below. If there is no selection of function after pressing on/off button, the appliance will automatically switch off.


Automatic Sterilize/Dry Function:

1. Choose the drying time (after steam sterilization): Press the Sterilize/Dry  button 1 time for 30 minute dry time, 2 times for 45 minute dry time, 3 times for 60 minute dry time. The sterilize/dry cycle will start 3 seconds after the last button press.
2. When the sterilization cycle starts, the timer will count up second-by-second for the duration of the sterilization cycle.
3. When the sterilization cycle is complete, the appliance will beep, pause for 3 seconds and begin the drying cycle for the amount of time selected in step 1. The timer on the timer will count down second-by-second until it reaches 00:00.
4. When the drying cycle is completed, the appliance will beep 5 times and switch off automatically.

Sterilize only function:

1. Press the Sterilize  button one time, the timer will display “00:00” and the steam icon. The sterilization cycle will start 3 seconds after pressing the sterilize button and the timer will count up second-by-second for the duration of the sterilization cycle.
2. When the sterilization cycle is complete, the appliance will beep 5 times and switch off automatically.

Dryer only function:

1. Press the Dry  button 1 time for 30 minute dry time, 2 times for 45 minute dry time, 3 times for 60 minute dry time. The drying cycle will start 3 seconds after the last button is pressed and the timer on the timer will count down second-by second until it reaches 00:00.
2. When the drying cycle is completed, the appliance will beep 5 times and switch off automatically.

Descaling:

Please descale the heating plate of the Sterilizer every 2 weeks to prevent overheating, malfunction or product failure.

- Mineral residue, particularly in hard water areas, may deposit on the heating plate after the sterilization cycle. To avoid scale build up, wipe the surfaces with a soft moist cloth after each operation.
- Mineral Deposits can be removed with descaling solution or by leaving 60ml/2oz white vinegar on the heating plate for approximately 30 minutes. The plate should then be rinsed and wiped with a clean, dry cloth. Some harmless discoloration spots may remain after cleaning but they have no effect on performance.
- You can descale more frequently if necessary.

Cleaning

- Always unplug your product before cleaning.
- Do not immerse the base, the supply cord or the plug in water or other liquids.
- Do not clean base under water tap.
- Use a soft damp cloth to clean the base and control console.
- Never use abrasive pads to clean the plastic parts of the machine.
- The lid, accessory rack can be cleaned in hot soapy water.

 
Caution: If it is necessary to remove water from the base, always POUR AWAY FROM FAN OPENING. Note water pour direction icon on base, and pour in direction of arrow.



Modular set-up options


Upper & Lower Baskets With Accessory Tray

For use with short bottles,
accessories & pump parts.

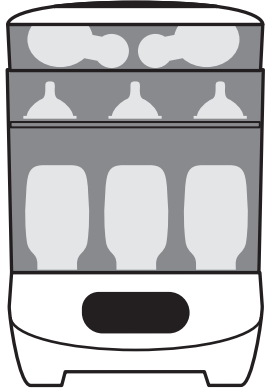


Upper & Lower Baskets WITHOUT Accessory Tray

 For use with tall bottles,
and accessories.

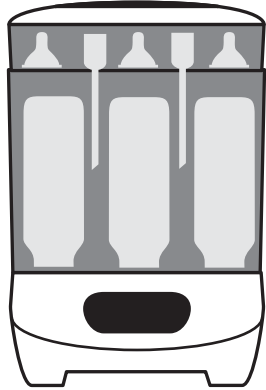

Lower Basket only With Accessory Tray

 For use with short bottles,
accessories & pump parts.

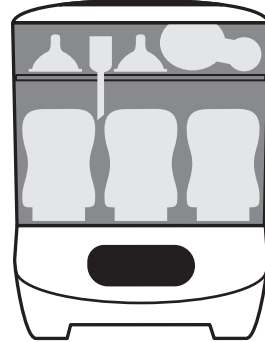

Upper Basket only WITHOUT Accessory Tray

For use with accessories
pacifiers and small items.

 


Breast pump parts and any other items safe for steam sterilization can be placed in the lower or upper baskets. Try different configurations to find what set-up works best for you.

TIP: For best drying performance, Do not overload the Sterilizer Dryer.

Using the included tongs

The tongs can be inserted and stored in the upper basket or the accessory tray. When the tongs are clicked into place, they can be used to lift the basket or tray. Gently squeeze the tongs to remove them. They can also be used to grasp parts and bottle nipples in the sterilizer.

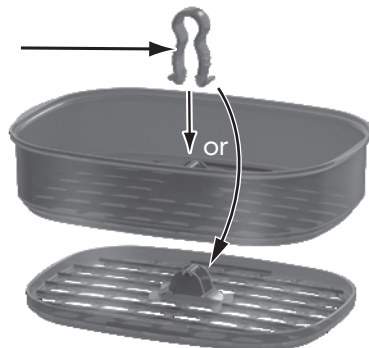

Troubleshooting

Condition	Possible Cause	Remedy
Appliance will not start.	Unit is unplugged.	Make sure the plug is securely inserted into the power outlet.
	Unit is not turned on.	Press On/Off switch before choosing function.
	Insufficient water is in heater plate area.	Add 165ml water to heater plate area.
Scaling on water tank heater plate.	Mineral rich water used persistently.	Clean heater plate after each use and use distilled water.
Items not dry after drying cycle.	Water is collecting on recessed or indented areas of items placed in sterilizer.	Make sure parts are placed so they do not collect water.
	Drying cycle selected not long enough to sufficiently dry items in sterilizer.	Select longer drying time.

If you can not remedy problems by using the troubleshooting chart above, visit babybrezza.de to locate your local customer service representative.