 

USER MANUAL

Dragon Touch InstantFun Kids Camera



CONTENTS

Package included	1
Product features	1
Product specifications	3
Getting started	4
Contact us	8

PACKAGE INCLUDED

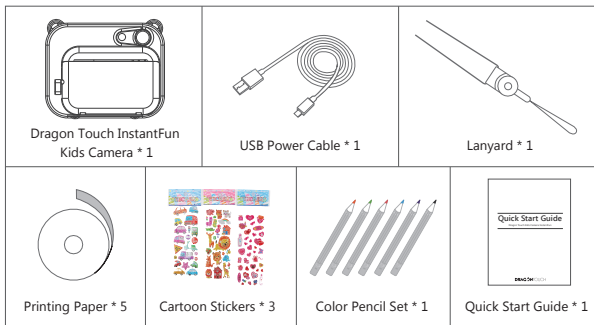

  PRODUCT FEATURE

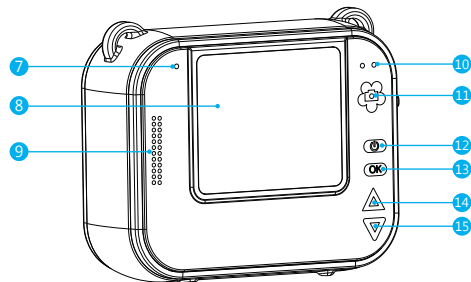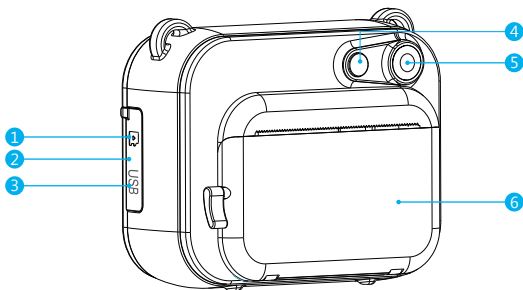

- 1 MicroSD Card Slot
- 2 Power Switch
- 3 Micro USB Port
- 4 Selfie Mirror
- 5 Lens
- 6 Paper Slot
- 7 Mic
- 8 2 inch Screen
- 9 Speaker
- 10 Status Indicators
- 11 Photo/Video/Playback
- 12 Power/Menu
- 13 OK Button
- 14 UP Button
- 15 Down Button

Photo/Video/Playback Button

Long press this button to switch Photo/Video/Playback Mode. Press this button to take photo and video.

Power/Menu Button

Long press this button to turn the camera On or Off. Press this button to enter Menu interface.

OK Button

Press this button to confirm a choice or action.

UP Button

Press this button to select menu and change photo frame.

Down Button

Press this button to select menu and change photo frame.

Paper Slot

Install print paper and exit photo.

PRODUCT SPECIFICATIONS

Display: 2" HD TFT LCD

Resolution: FHD (1080P30Fps), HD (720P30Fps)

Image Quality: 8M/5M/3M/1M

File Format: .avi, .jpg

Battery: 7.4V lithium polymer battery

Connectivity: Built-in USB port (Micro USB)

Memory Card Capacity: Max support 32GB MicroSD card

Languages: English, Deutsch, Russian, Español, Italiano, Português, 简体中文, 繁體中文

Auto Power-Off: Off/1min/3mins/5mins

Cyclic Record: Off/3mins/5mins/10mins


Timed Photo: Off/3s/5s/10s

Screen Saver: Off/1min/2mins/5mins


Print Density: 0/1/2/3/4

GETTING STARTED

1. Charging and Power On

Connect the USB Cable in the USB port to your camera, and plug in power (power adapter is not included in the package, we recommend 5V power adapter). The light of status indicator is red when it is charging. After the camera is charged, you need to turn on the power switch first and then long press the  to start, and the light will turn blue when it is working.


★ **Tip:** The charge must be used by adults or under the monitor of adults.

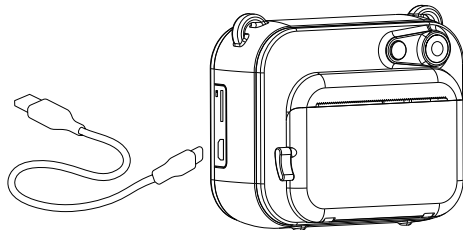

2. Install Memory Card


If you want to save the photos and videos you take, please make sure you have inserted a microSD card in the slot (max support 32GB microSD card). After the memory card is inserted, notice the sign changes on the screen.

Without a memory card inserted, this camera can only take photo and print it instantly.

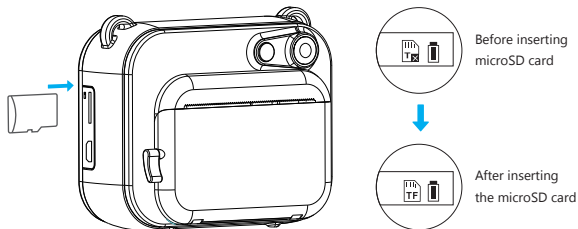

3. Install Print Paper

Pay attention to the installation direction of the paper. While closing the lid, make sure 5-cm print paper is out of the lid.

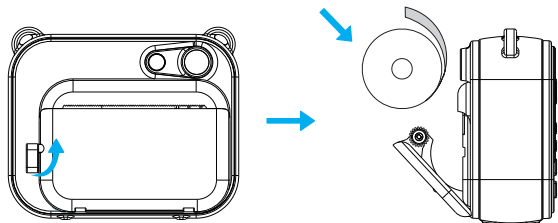

4. Switch Photo/Video/Playback Mode

When the camera is on, long press the **[M]** button to change modes: Photo Taking, Video Taking and Playback.

① Photo Taking Mode

 
Enter the Photo Taking Mode.

When you power on the camera, it is automatically under the Print Camera Mode, press

[OK] button to select the Print Camera Mode or Normal Camera Mode.

Press **[M]** button to take photos, and the photos will be printed automatically if it is under the Print Camera Mode.

Press **[△]** and **[▽]** button to select the photo frame.

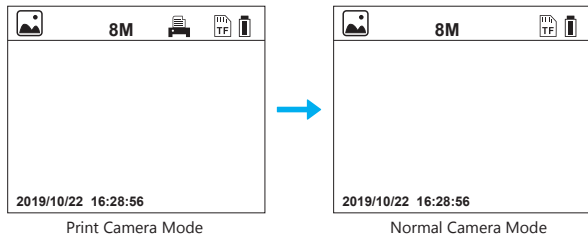


② Video Taking Mode

Enter the Video Taking Mode.

Press **[M]** button to start recording, and press it again to end taking video.

Press **[△]** and **[▽]** button to select video filter.

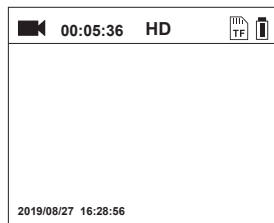


③ Playback Mode

Enter the Playback Mode.

Press **[△]** and **[▽]** button to preview the files, and press **[M]** button to play the video file. Press **[OK]** button to enable/disable the print function, then press **[M]** button to print the previewed photo.

 
Press **[U]** button to enter the delete interface, and press **[OK]** button to confirm whether to delete the file.

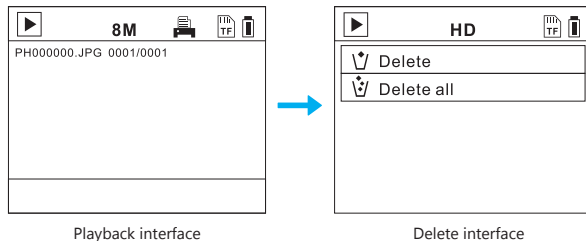

5. Setting Menu

Press  button to enter system setting interface. Press  and  to choose menu and press  to enter the chosen one and confirm.

 Press  button again to exit.

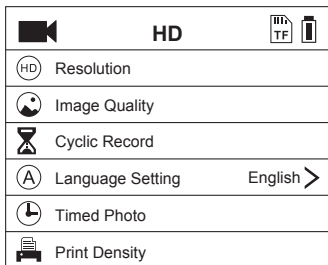

Cyclic Record

You can set different cyclic record times (3mins/5mins/10mins) to make this camera continuously record and replace the previously recorded material with the new content.

Timed Photo

You can take photo with a delay of 3s/5s/10s.




Print Density

Choose different degrees of print density to change how dark the printed photo appears.

6. Auto Power-Off & Screen Saver

To preserve battery life, you can set different auto-off and screen saver times to make the camera automatically turn off or sleep.

7. Photo Frames & Line Drawings

Under the Photo Taking Mode, press  and  button to choose built-in photo frames and line drawings, and press  button to take photo and print.

8. Export Files to PC

Connect the camera and your computer via USB cable. You can open the camera folder in the computer after seconds. Select the files you would like to export, and copy them to your computer.

CONTACT US

For any problem with Dragon Touch products, please feel free to contact us, we will respond within 24 hours.

E-mail: cs@dragontouch.com

Tel: 1-888-811-1140 (US) Mon-Fri (except holidays) 9am-5pm (EST)

Official website: www.dragontouch.com