

 


DrunkPeer

UNLEASH YOUR POTENTIAL

G60

User Manual

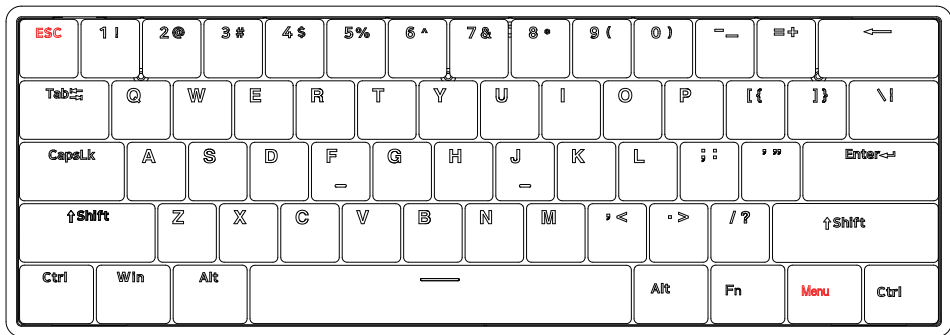


# Package Content

G60 Gaming Keyboard \*1

USB Type-C Cable \*1

Keycap Puller \*1

 
## G60 Gaming Keyboard

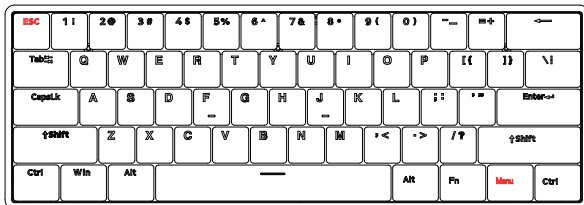

### Keycap Puller



 
### USB Type-C to A Cable

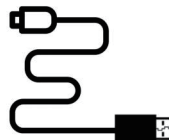

# Wired Connection



+

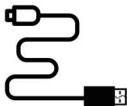


+



For the devices with USB Type-A ports (Personal PC, for example.)

You can connect the keyboard to the device with the cable in the package directly.


# How To Restore The Keyboard To Default Settings

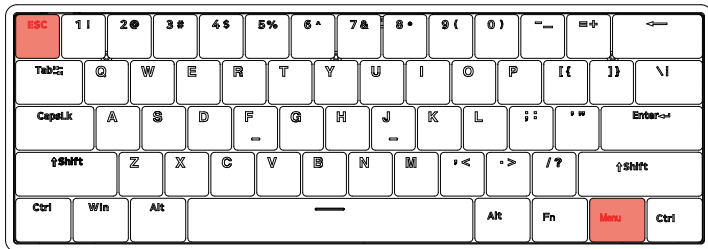

You can restore the keyboard by key combination  
**'Menu+ Esc'** for **5** seconds.

The backlight will blink red for 3 seconds  
and the keyboard will return into its default state.


# How to Adjust the Actuation Sensitivity in DrunkDeer Antler

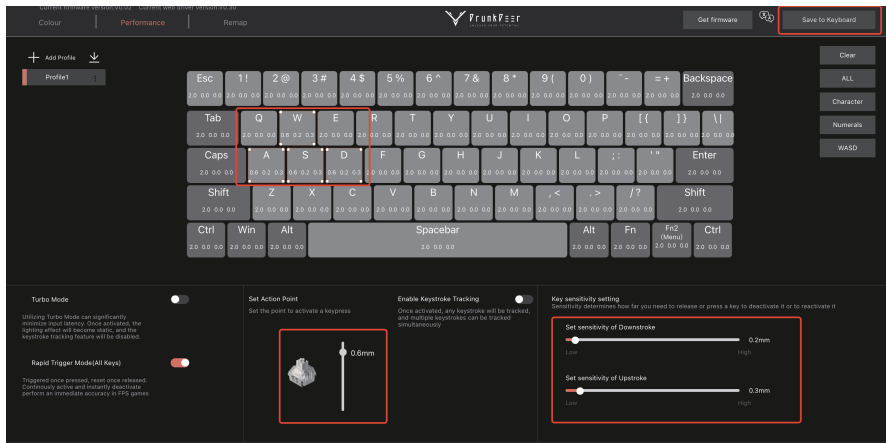

After you select the key you want to adjust the sensitivity of, drag the white dot to select the point you want the key to be triggered, then click the "Save to keyboard" button to save it.

Don't forget to save after adjusting the certain keys.

# How To Change The Backlight Effect

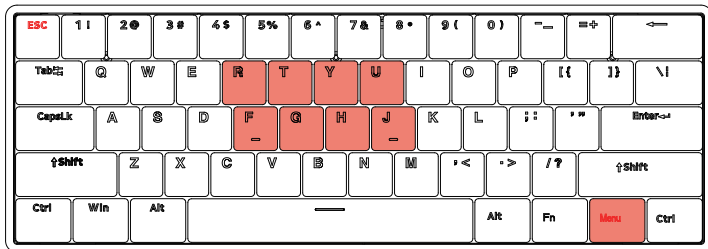


The backlight effect can be changed by key combination as follow:

- |                |                            |  |
|----------------|----------------------------|--|
| <b>Menu +R</b> | Turn on/off LED            | To turn on/off the LED of the keyboard               |
| <b>Menu +T</b> | Turn on/off the turbo mode | To turn on/off the turbo mode                        |
| <b>Menu +Y</b> | Switch colors              | Color switching with adjustable color light effects  |
| <b>Menu +U</b> | Switch light effects       | Cyclic switching of all light effects                |
| <b>Menu +F</b> | Lower brightness 10        | levels of adjustment, default will be the maximum    |
| <b>Menu +G</b> | Increase brightness        | 10 levels of adjustment, default will be the maximum |
| <b>Menu +H</b> | Lower light speed          | 10 levels of adjustment, default will be level-6     |
| <b>Menu +J</b> | Increase light speed       | 10 levels of adjustment, default will be level-6     |



# Other Fast Operating

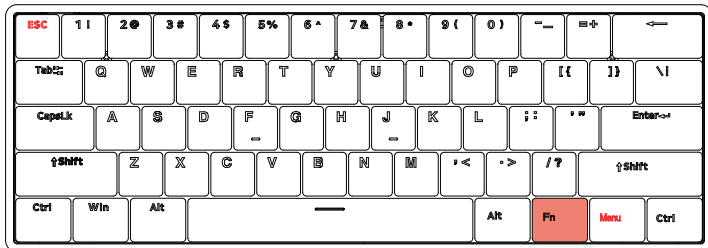 

Fn + Esc = ~ `

Fn + - = F11

Fn + [ = Scroll

Fn + ; = Home

Fn + < = Delete

Fn + ? = Page Down

Fn + W = ↑

Fn + A = ←

Fn + Z = Previous track

Fn + C = Play/pause

Fn + B = Mute sound

Fn + M = Increase volume

Fn+1~0 = F1~f10

Fn + = = F12

Fn + ] = Pause

Fn + "' = Page Up

Fn + > = End

Fn + P = Print

Fn + S = ↓

Fn + D = →

Fn + X = Next track

Fn + V = stop

Fn + N = Lower volume

Fn + L = Insert

## Specification

Model Name: G60

Product Size: 292.5\*102.3\*43.1MM

Product Weight: 527 ± 20 g

Layout: ANSI 60%

Main Material : ABS(Housing); Silicon(Pad feet)

Switch Type: Magnetic Switch Linear

## **Caution**

**Please DO NOT place the keyboard in a high-temp or strong magnetic environment.**

**We DO NOT recommend disassembling or modifying this keyboard.**

**Due to the characteristic of magnetic switches, abnormal environments such as strong impact, high temperature, and strong magnetic fields may cause the keyboard to malfunction.**

**The switches can be disassembled or replaced with each other, lubed, or replace the spring. Each keyboard is individually calibrated for precision before leaving the factory.**

**The behavior described above may have a slight impact on individual key press precision.  
(Does not affect normal use)**