

Bonesaw Instruction Manual

Model: J210, J320




**Please read this instruction manual carefully before
operation**



WARNING

SAFETY INSTRUCTIONS

- Please ensure the proper attire is worn when operating this device.
- Please be sure to check the worktable before use-if there's any loose screws, or if there is a shift of motor back cover.
- Please make sure you install a leakage protection device, this must be connected with the earth wire.
- Gloves must be worn when replacing the Saw Band.
- Never Position fingers or thumbs in line with the blade to avoid serious personal injury.
- DO NOT BACK MEAT AWAY from the blade while the saw is running. Plan your cuts so you always cut through the meat. If you need to back the meat out, turn the bandsaw off and wait for the blade to come to a complete stop.
- Do not twist or put excessive stress on the blade while backing meat away
- Do not operate the emergency stop frequently, this can cause damage to the motor.

Components

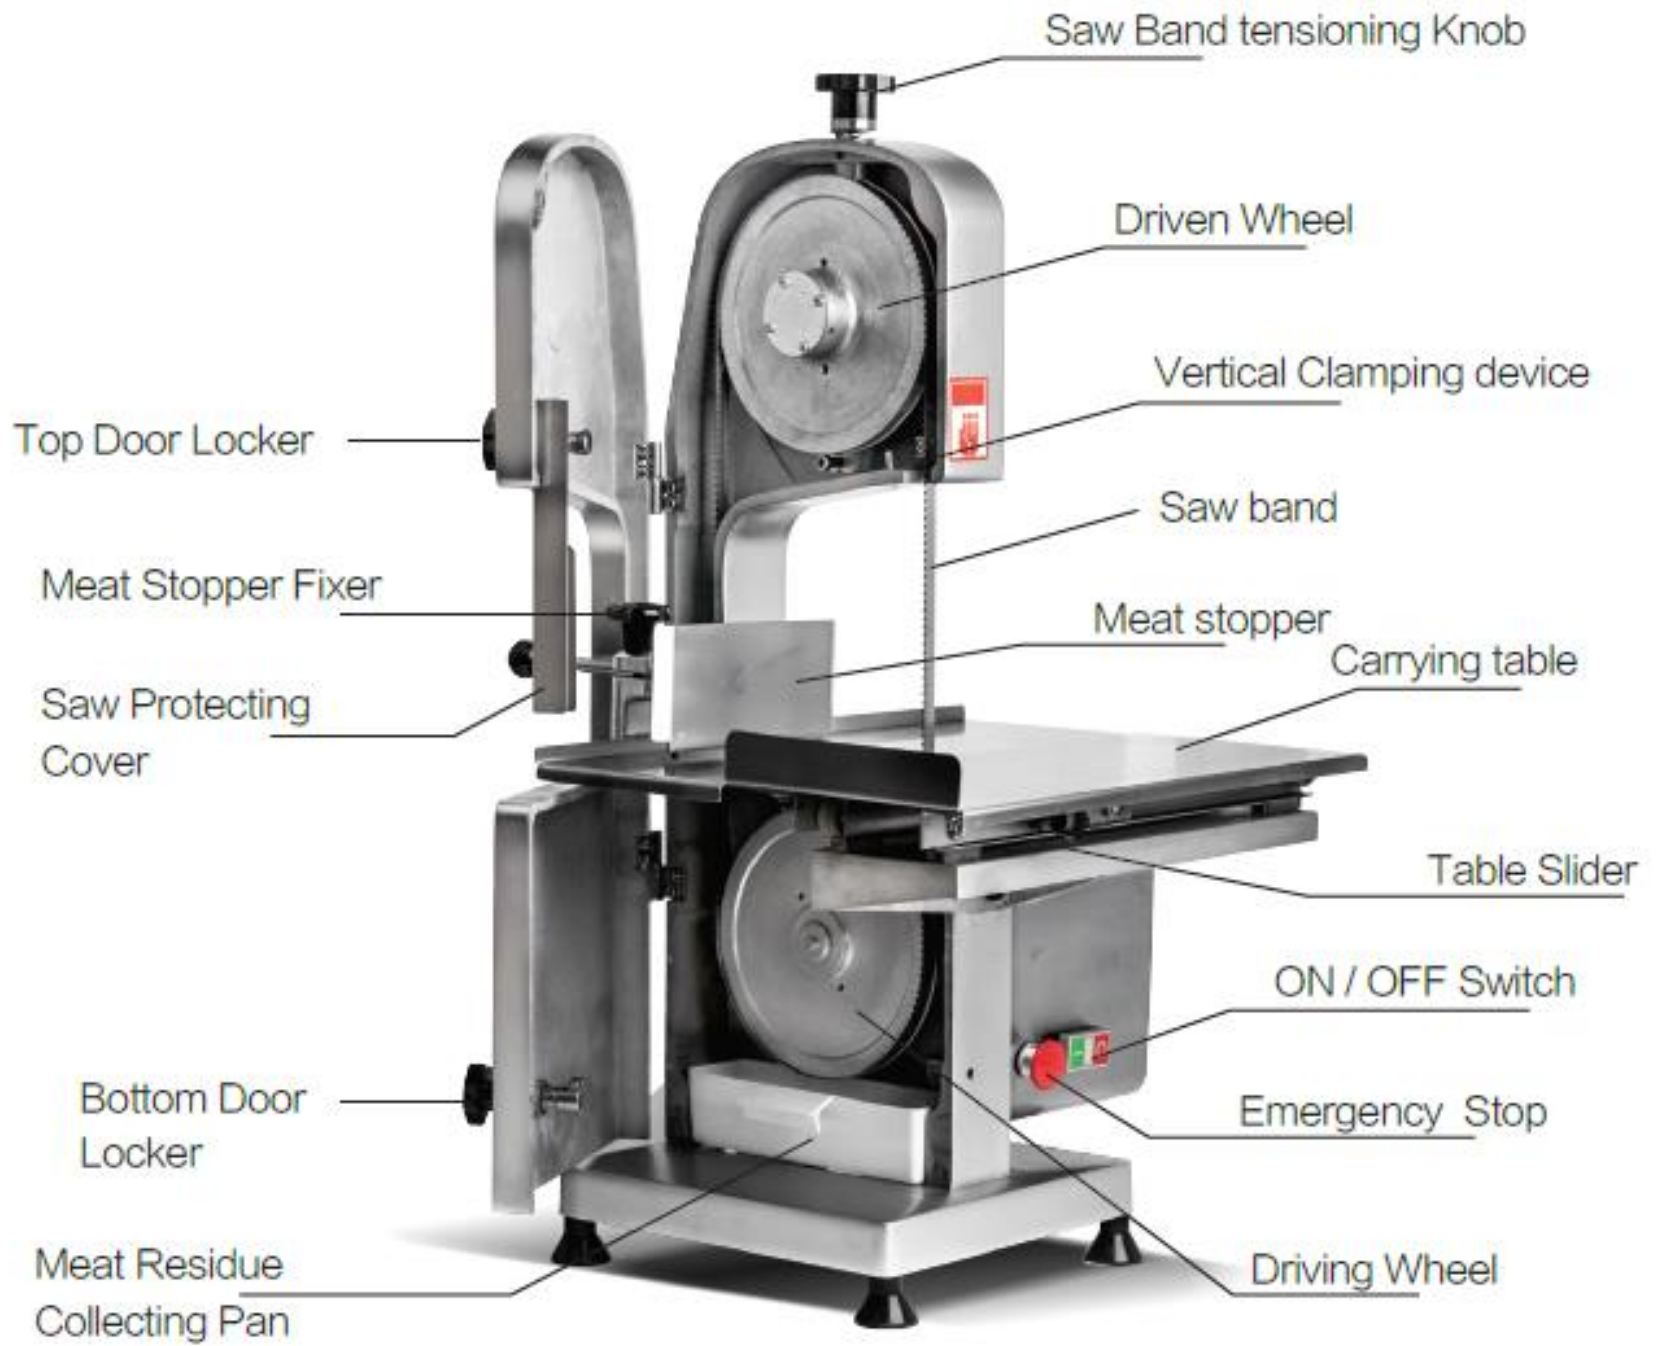

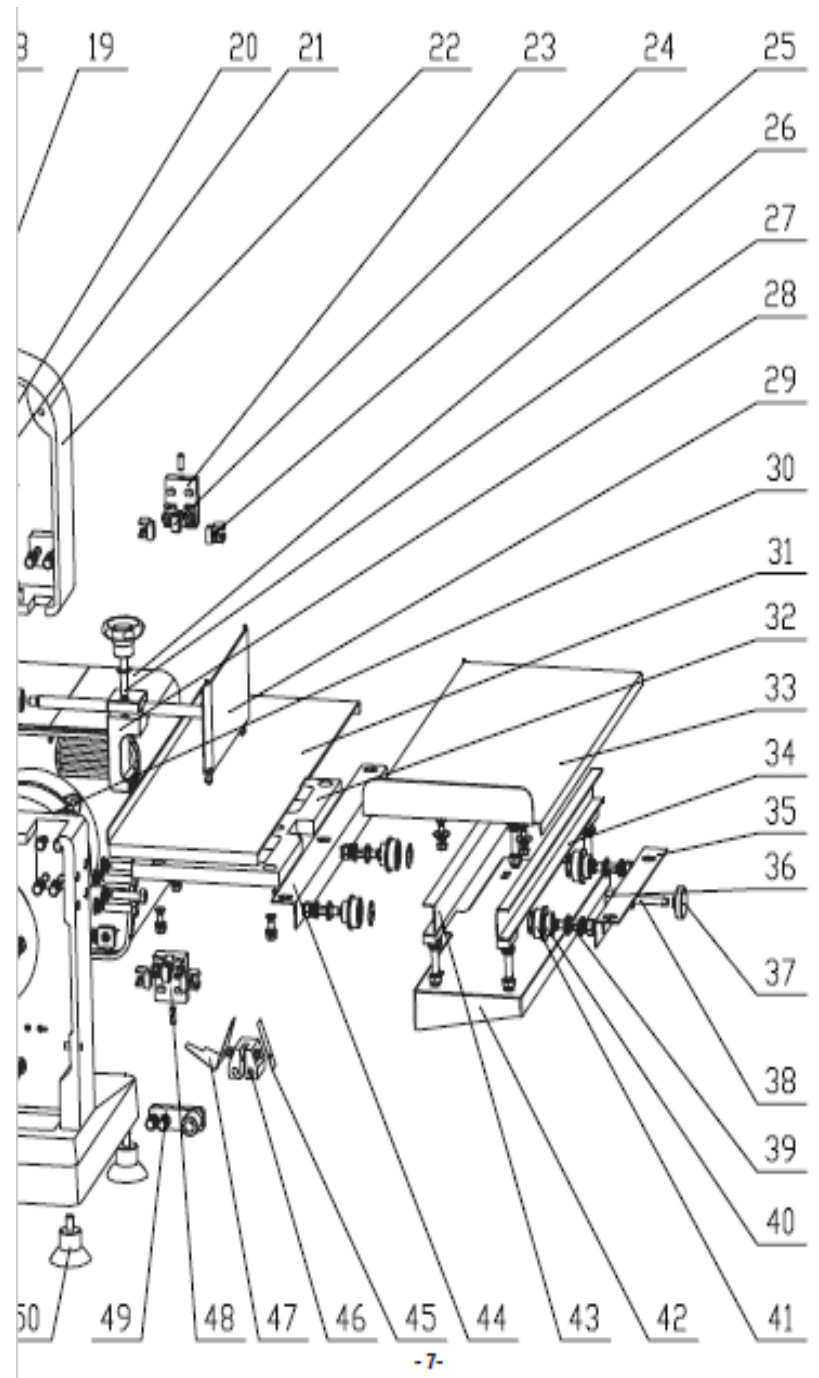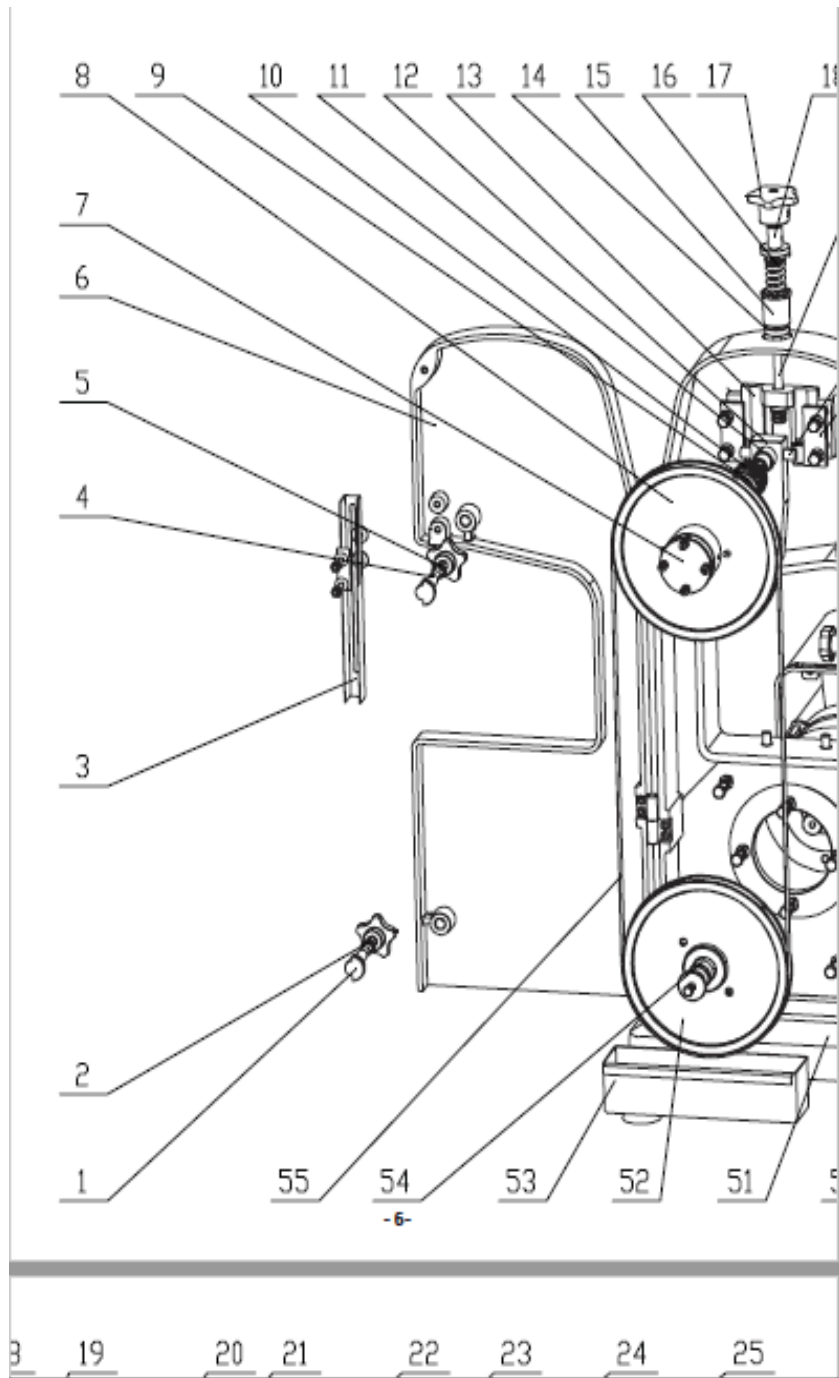

Tech. Parameter


Name	Meat Bone Saw
Model	J210S/ J210
Machine Size	550×500×920mm
Packing Size	585×585×980mm
Band Saw Thickness	0.5mm
Band Saw Length	1650mm
Band Saw width	16mm
Power Supply	~110V/220V / 50/60 Hz
Power	750W
Cutting Thickness	5 ~ 155mm
Working table Size	505×415mm
Movable working table Range	240mm
Net Weight	≈ 47kg
Gross Weight	≈ 52kg
Brake Time	≤ 0.3s

Operation



A. Loosen the meat stopper

B. Confirm the cutting thickness by adjusting the distance between front and rear meat stoppers and band saw

C. Start the machine

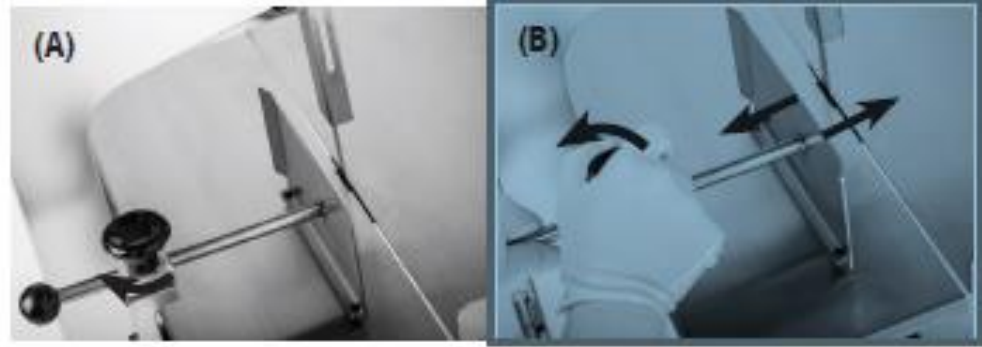

DEF. Put the food on movable working table, then Take saw guard on the right protection level, promote job boards, to bring food to the saw (The driving speed differs according to the different food, and bases on the normal running of saw band as a limitation. Repeat the operation for times until the cutting operation is completed, then turn off the power supply! **▲ Never Position Fingers or thumbs in line with the cut!**

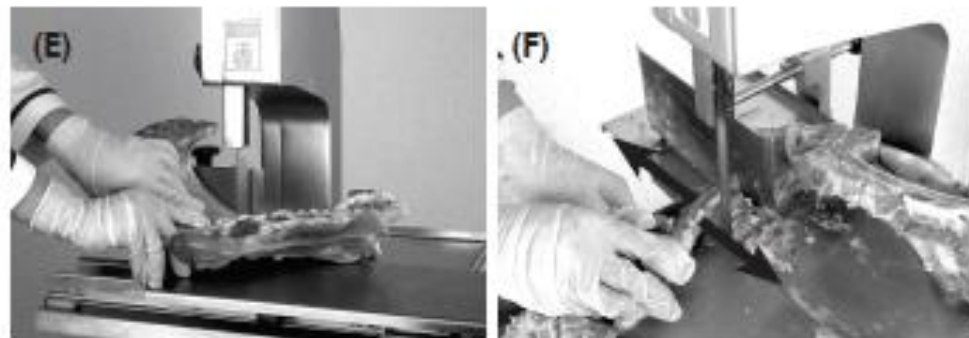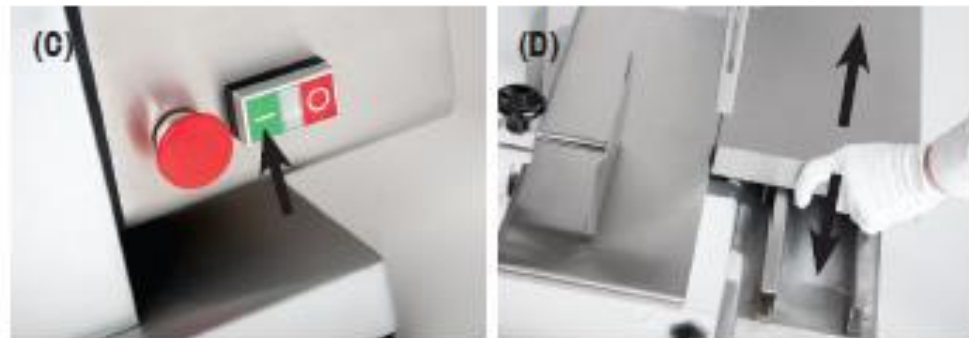


Cleaning

A. Open the protection door




B. Take out the residue pan

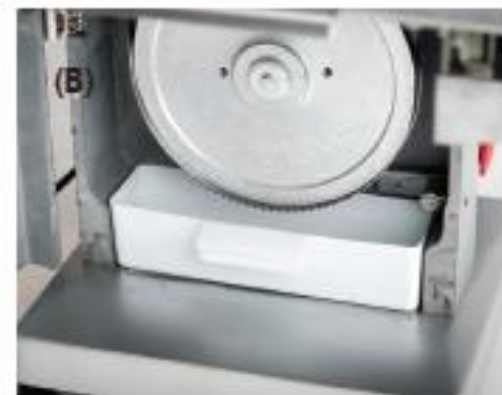

Operation

CDE. Loosen the tensioning Knob to relax the band saw then demount the saw (Wearing gloves before). One hand press down the tensioning knob, one hand upward lift the Driven wheel out and clean

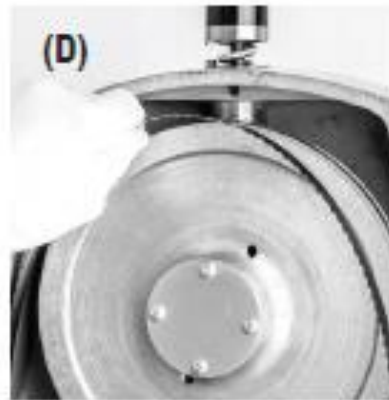

F. Please use low pressure squirt gun to spray the interior minced meat, then reinstallation in order. ▲ **Electrical parts(as exterior control knob,switch....) can't be directly sprayed by squirt gun.**

Notice:

- 1) During remounting the saw band, check the tooth direction, position and make sure that the saw band shall be close to the backing wheel face of lower clamping device(The position of backing wheel has been preset at delivery)
- 2) Rotate top wheel with hand and make sure that it runs smoothly and the saw teeth stand out on the wheel (if necessary, it can be realized to adjust the regulating device ont the top wheel)



Parts Description

SN	Parts Description	SN	Parts Description
1	Bottom Locking Block	29	Meat Stopper
2	Bottom Door locker seat	30	Motor
3	Saw Protecting Cover	31	Carrying Plate
4	Top Locking Block	32	Carrying Plate Seat
5	Top Door locker seat	33	Movable working table
6	Door	34	Right Slide Rail
7	Driven wheel Cover	35	The right wheel Frame
8	Driven wheel	36	Locking Block
9	Driven wheel Bearing (6004)	37	Locking handle
10	Sealing ring	38	Locking bolt
11	Driven wheel axle	39	Roller shaft
12	Driven wheel stand	40	Roller axle (627)
13	Driven slide carriage	41	Roller
14	Adjusting nut	42	Rail carriage frame
15	Spring seat	43	Left Slide Rail
16	Spring	44	Left Roller frame
17	Tensioning Knob	45	Meat Scrapping Plate
18	tensioning nut	46	Meat Scrapping seat
19	tensioning shaft screw	47	Meat Scrapping Plate
20	Frame bolt	48	Band Saw Guide Seat
21	Slide Carriage Pressing Plate	49	Door Swith seat
22	Enclosure	50	Foot pad
23	Band Saw Guide Seat	51	Base seat
24	Band Saw Blocker	52	Driving Wheel
25	Band Saw Guide Plate	53	Residue Collecting Pan
26	Motor Cover	54	Driving Wheel axle Sleeve
27	Meat Stopper Locker Bolt (M8)	55	Band Saw
28	Meat Stopper seat		

Name	Meat Bone Saw
Model	J320S/ J320
Machine Size	620 x 590 x 1130 mm
Packing Size	670×630×1270mm
Band Saw Thickness	0.5mm
Band Saw Length	2040mm
Band Saw width	16mm
Power Supply	~110V/220V / 50/60 Hz
Power	1100W
Cutting Thickness	5 ~ 200mm
Working table Size	530×430mm
Movable working table Range	300mm
Net Weight	≈ 63.5kg
Gross Weight	≈ 81kg
Brake Time	≤ 0.3s

Packing List

Instruction Manual*1, Band Saw*1, Driving Wheel Disassemble Tool*1

Remark: All photos just for reference, it will be adjust without any notice.

WARRANTY

WARRANTY Hamoki Ltd warrants the original purchaser of every new product (under normal and proper use and maintenance service as specified by Hamoki Ltd and upon proper installation and start-up in accordance with the instruction packet supplied with each unit) a one year parts warranty.

Hamoki Ltd's obligation under this warranty is limited to a period of one (1) year from the date of original installation.

WARRANTY CLAIMS:

All claims for parts must be made **directly through the retailer** in the first instance. All claims raised with the retailer should include:

Your name:

Model number:

Your company:

Serial number of the product:

Address: Date of purchase:

Email: Proof of purchase :

Phone:

Information supporting the alleged defect.(A video/photo)

Photo of the dataplate.