 

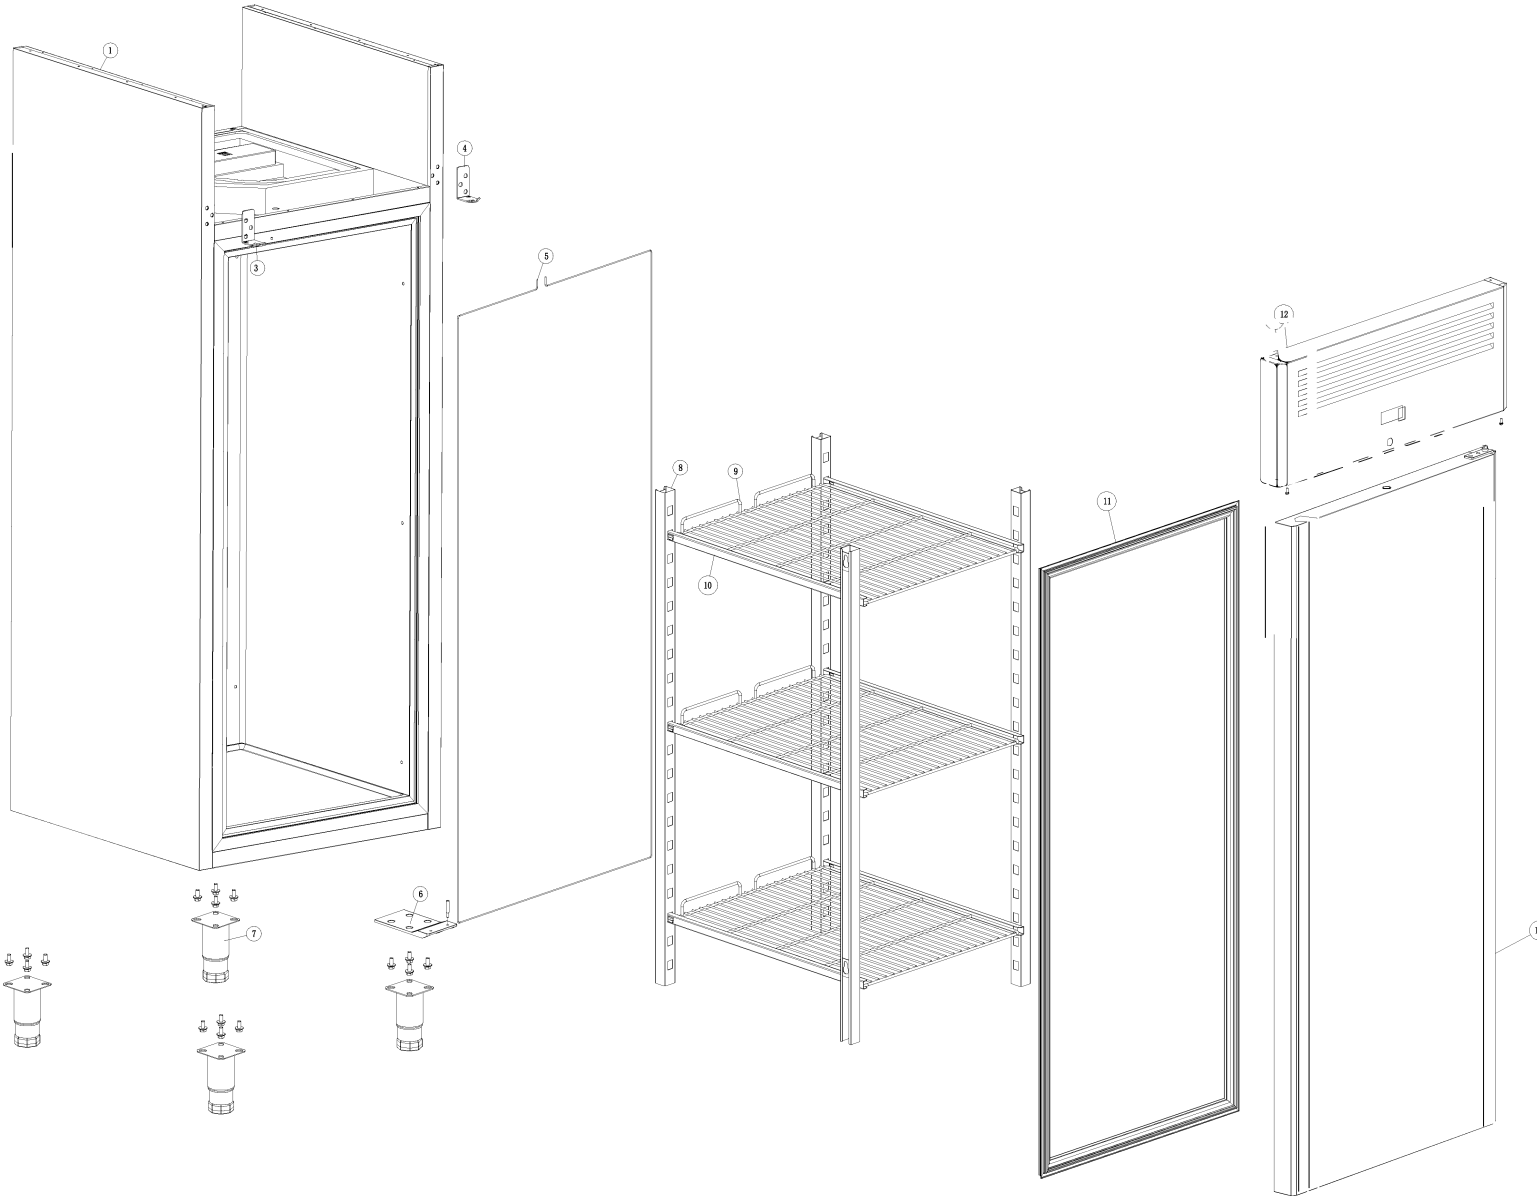


GN650TN & GN650BT

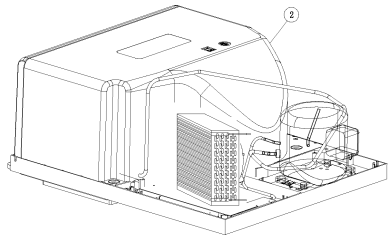

19	transformer	ZF120A-1200420
18	lamp	BL-TK-A
17	door	CC700BMTA201
		CC700BMTA304
16	lock	WJ13-02
15	fan switch	HC-050K4
14	temperature controller	XR02CX-5ROC1
		XR06CX-5ROC1
13	switch	RL2-GR
12	control panel	CN700A-B41-02-J0
11	door gasket	SL12-07
10	guide	L700-B43-01-A1
9	shelf	WJ11-01
8	ladder	L700-B42-01-C2
7	Feet adjustable	WJ12-22
6	lower hinge	WJ09-06
5	heating line	L700-D06-JRS
4	upper right hinge	L700-B64-01-A0
3	upper left hinge	L700-B63-01-A0
2	cassette unit	CC700BRS
		CN700BFS
1	cabinet	CN700BXTB201
		CN700BXTB304
NO.	PART NAME	PART NUMBER