

## SD800/ZT-07 Transmitter Deleting

Deleting transmitters: Note: This procedure will clear all programmed remotes, wireless wall buttons and wireless keypads from the opener.

1. Press and hold the “P” and “+” buttons until all lights turn on and LED 7 flashes
2. Press and hold the “-“ button until LED 7 turns off and begins flashing again
3. Press the “P” button once to save (LED 3 will switch on indicating that all codes have been deleted and that the opener is now in normal operating mode) Follow procedure 1. above to code new remote control hand transmitters.